

GUIDE FOR THE FITTING OF BODYWORK FOR THE RENAULT KERAX SERIES VEHICLE

50 21 008 244 - 04/02
édition anglaise

IMPORTANT

Reading the “Guide for the Fitting of Bodywork for the RENAULT PREMIUM series”

The “Guide for the Fitting of Bodywork for the RENAULT PREMIUM series” ushers in a new type of presentation for bodywork fitting guides.

This new presentation sets out in one single document all those details which that are necessary for the bodybuilder and equipment manufacturer to have available.

The present document consists of two sections:

- A - “General features” : This describes the relevant general principles and basic rules applicable for the conversion and fitting of equipment to vehicles in most cases for the majority of applications.
- B - “RENAULT PREMIUM special bodybuilding features”: This deals in greater detail with presentation of the vehicle, attachment of the body, electrical pre-arrangements, trade vehicles and trade packs.
- C - “Supplementary information on the RENAULT PREMIUM vehicle”: This deals in greater detail with power take-offs, air-operated and specific equipment, assembly of equipment to chassis and cab.

If a topic is dealt with in the three sections, the relative information may be:

- **complementary** : in this case the “Special bodybuilding features” section provides details or values relating to the topic dealt with in “General features”.
- **partially or fully contradictory**: when the RENAULT PREMIUM vehicle is endowed with a special feature whose characteristics go against general principles. In such case, the elements regarding this specificity in the “Special bodybuilding features” section supersede those dealing with the same topic in the “General features” section.

You may need, when looking for information on a specific point, to consult the three “General features”, “Special bodybuilding features” and “Supplementary information on the RENAULT PREMIUM vehicle” sections, so as to ensure that you have obtained all the relevant details.

The information given by the Manufacturer in this document is compiled in relation to the technical specifications in force on the date of drafting of the document.


It is subject to modification in the event of changes made by the OEM during the manufacture of the different units and accessories for vehicles of its make.

Carrossiers & Equipementiers
ATTENTION

véhicule électronique EURO3
Respecter IMPERATIVEMENT
les consignes de carrossage

ou

Contacter le constructeur

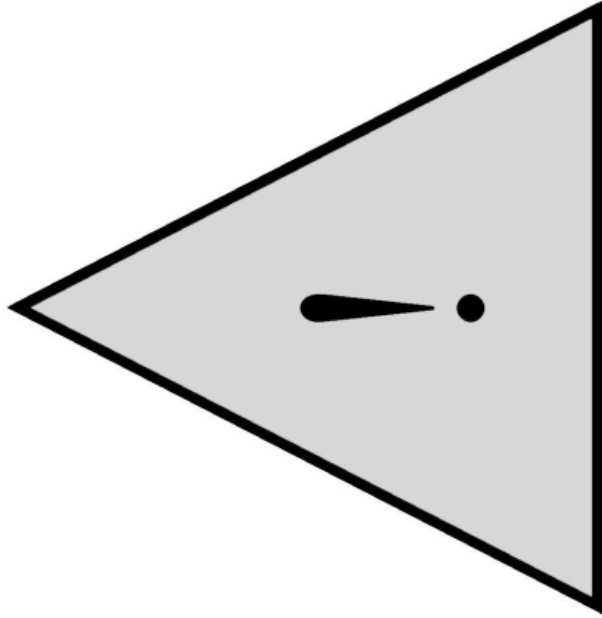

Karosseriebauer & Ausstatter
ACHTUNG

Fahrzeug mit Elektronik EURO 3
UNBEDINGT die Hinweise
für die Aufbauten beachten oder
sich an den Hersteller wenden.

Carroceros y proveedores de equipos
ATENCIÓN

Vehículo electrónico EURO 3
Respetar OBLIGATORIAMENTE
las instrucciones de carrozado

o

contactar con RENAULT V.I

Bodybuilders & Equipment Manufacturers
WARNING

EURO 3 electronically managed vehicle
It is ESSENTIAL to comply with
bodybuilding instructions

or

Contact the vehicle manufacturer

Carrozzeri e Allestitori
ATTENZIONE

Veicolo con elettronica EURO 3
Rispettare TASSATIVAMENTE
le istruzioni per la carrozzatura

o

Contactare il costruttore



RENAULT

CONTACTS

Belgique België

RENAULT V.I. Belgique SA

Avenue du port 138,
1000 Bruxelles

Correspondant carrossier	Téléphone	fax
	00.32/02.421.76.31	00.32./02.425.56.06

Ceská Republika

RENAULT TRUCKS CR s.r.o.

Saldova 425/12,
18621 Praha 8,
Ceská Republika

Technicky inspektor	Téléphone	fax
	00.42/24.23.20.80	00.42/24.23.20. 84

Deutschland

RENAULT LKW Deutschland GmbH

Renault StraBe 12,
50321 Brühl

Verkaufstechn. und Aufbauberatung	Téléphone	fax
	00.49/0.222.32.7077.142	00.49/0.222.32.7077.181

España

RENAULT TRUCKS España, s.a.

C/Eduardo Barreiros, 104
28080 Madrid

Tecnico comercial	Teléfono	fax
	00.34/91.3.47.13.84	00.34/91.3.47.13.53

France

RENAULT V.I.

99, route de lyon,
69800 Saint-Priest

Technico comercial	Téléphone	fax
	04.72.96.96. 70	04.72.96.81.93

Great-Britain

RENAULT TRUCKS UK Ltd,

Boscombe Road,

Dunstable,

Bedfordshire LU5 4LX

Applications Engineering Manager	Telephone	fax
	00.44/1582.479150	00.44/1582.479328

Italia

RENAULT V.I. Italia S.P.A.

Via Castiglioni 20,

20010 Arluno (MI)

Marketing	Telefonico	fax
	00.39/02.902.52.267	00.39/290.376.800

Magyarország

RENAULT TRUCKS Hungária Kft.

2046 Törökbálint, Tó Park

Magyarország

Műszaki-kereskedelmi munkatárs	Telefon	fax
	00 .36/23.51.35.13	00 .36/23.51.35.14

Nederland

RENAULT TRUCKS Nederland B.V.

Edisonweg 8

4132 PC Vianen

Begeleiding carrosseriebow	Téléphone	fax
	00.31/31.347.323624	00.31/31.347.323650

Österreich

RENAULT LKW Österreich

Industriestrasse 5

A-2353 Guntramsdorf

Dispo	Téléphone	fax
	00.43/22.36.41.171.48	02236/860166

Polska

RENAULT TRUCKS Polska Sp.Z.o.o.

ul. Polczynska 10
01-378 Warszawa

Dyrektor Techniczny	Telefon	fax
	00.48/22.66.45.199	00.48/22.66.45.040

Portugal

RENAULT TRUCKS Polska Sp.Z.o.o.

ul. Polczynska 10
01-378 Warszawa

Técnico-comercial	Teléfono	fax
	00.351/263.28.0864	00.351/263.28.0850

Schweiz Suisse Svizzera

RENAULT NUTZFAHRZEUGE (Schweiz) AG

Rütiweg 5
4133 Pratteln

Responsabile tecnico	Téléphone	fax
	00.41/61.82.10.811	00.41/61.82.10.817

Slovenská Republika

RENAULT TRUCKS CR s.r.o.

organizacná zložka RENAULT TRUCKS SR

Teslova 30, P.O. BOX 168, 820 05
Bratislava 25,
Slovenská Republika

Obchodno-Technický inspektor	Téléphone	fax
	421/2/43 41 27 96-7	421/2/43 63 36 01

Türkiye

RENAULT TRUCK Ticaret A.

Hülagül Cad. Tepeüstü Sok. No: 30
81610 / Kavac k / Beykoz / Stanbul

Bayi Geli im Planlama Müdürü	Téléphone	fax
	00.90/216.413.69.16	00.90/216.331.21.98

CONTENTS

GENERAL RULES FOR CONVERSIONS

CHAPTER -A- GENERAL FEATURES

Page

1. GENERAL FEATURES	
1.1 Scope of liability	A2
1.2 Regulations	A2
1.3 Safety	A3
1.4 Quality assurance	A4
1.5 Documentation	A4
1.6 General instructions	A5
1.7 Safety on tilt cabs	A6
1.8 Chassis markings	A6
1.9 Adjustments to the vehicle settings	A7
1.10 Cleaning	A7
1.10.1 Bodywork	A7
1.10.2 Chassis/Underbodies	A7
1.10.3 Cleaning of the cab	A7
1.10.4 Cleaning of the instrument panel	A7
1.11 Safety and protection of components	A7
1.12 Summary of definitions	A8
1.13 Certificate of approval of the conversion of a vehicle	A9
1.13.1 Application for approval	A9
1.13.2 Body fitting certificate	A9
1.13.3 Responsibility for installation	A9
1.14 Painting	A10
1.14.1 Precautions	A10
1.14.2 Major units	A10
1.14.3 Chassis frame and accessories	A11
1.14.4 Recommended products	A12
1.14.5 Marking of polymer components (recycling of plastics)	A13
1.15 Electrical equipment	A15
1.15.1 General	A15
1.15.2 Wiring Harnesses	A15
1.15.3 Electrical connections	A16
1.15.4 Available power supplies	A16
1.15.5 Flasher units	A16
1.15.6 List of standard power sockets	A17
1.15.7 Additional direction indicator lamps	A19
1.16 Air-operated equipment	A20
1.16.1 Regulations	A20
1.16.2 Polyamide pipes	A20
- Identification marking	A20
- Coding used on polyamide pipes (RENAULT TRUCKS Standard)	A20
- Brakes code	A20
- Coding used on pneumatic appliances (DIN Standard)	A21
- Replacement of a brake line	A21
- Modification to the length of the chassis	A21
- Connections for firtree type pneumatic brake pipes type "RILAX 2000"	A21

2. GENERAL RULES TO BE OBSERVED WHEN FITTING BODYWORK

2.1 General welding principles	A22
2.1.1 Precautions	A22
- Protection of the batteries	A22
- Soundproofing screens	A22
- Protection of electrical and mechanical components	A22
2.1.2 Preparation of parts for welding	A22
- Preparation of specific edges on chassis frames	A23
- Method of welding to be specifically used on chassis frames	A23
- Slave butts	A23
2.1.3 Welding process	A24
- Static or rotary arc welding set	A24
- Relevant standards	A24
- MIG or MAG semi-automatic welding set	A24
2.1.4 Equivalent steel grades	A25
2.2 Reinforcement, extension, reduction of sidemembers	A26
2.2.1 Bans	A26
2.2.2 Reinforcement of sidemembers	A26
- Examples of reinforcements	A26
- Method of joining	A27
- Extension, shortening of sidemembers in the wheelbase	A28
2.2.3 Modification of the rear overhang	A29
- Attachment of cross-members	A29
- Towing cross-members	A29
- Intermediate cross-members	A29
2.3 Attachment of bodywork	A30
2.3.1. Bans	A30
2.3.2 Protection against exhaust heat radiation	A30
2.4 Sub-frames	A31
2.4.1 Finishing of sub-frames behind the cab	A31
2.5 Nuts and bolts, tightening torque for parts in steel and cast iron	A33
2.6 Addition of equipment to the bodywork	A34
2.7 Rear run-under guard	A35
3. SPECIFIC EQUIPMENT FEATURES	
3.1 Running the engine when vehicle stationary	A35
3.2 Mounting of power take-offs and flanged pumps	A35
3.3 Front power take-offs (crankshaft nose)	A36
3.4 Front and rear power take-offs	A36
3.4.1 Propeller shaft alignment	A36
- Angularity criteria	A36
- Angular acceleration criteria	A37
- Transversal stress criteria for prop shaft tubes and bearings	A37
3.4.2 Propeller shaft balancing	A38
3.4.3 Maximum permissible length of a prop shaft as a function of the rotating speed	A38
3.5 Vehicle driveline (powertrain)	A38
3.6 Mounting of handling cranes	A39
3.6.1 Mounting on the sub-frame	A39
3.6.2 Graph of the moment of inertia of the sub-frame as a function of the lifting torque	A40
3.6.3 Crane in the rear overhang	A41

3.7 Tail lifts	A42
3.7.1 Sub-frames	A42
3.7.2 Attachment	A42
3.7.3 Electrical connections for a tail lift	A42
3.7.4 Special recommendations for tail lifts from 1500 to 2000 kg without landing legs	A42
3.7.5 Graph of the moment of inertia of the sub-frame as a function of the lifting torque	A43
3.8 Sub-frame box sections	A44
3.9 Fitting of specific equipment	A44
3.9.1 Electrical connections	A44
3.9.2 Installation of receivers or generators with a voltage of more than 24 V	A44
3.10 Tapping on the diesel fuel tank	A44
3.11 Fifth wheels	A45
3.11.1 Mounting standards	A45
- Kingpin 50 mm (2") dia.	A45
- Kingpin 90 mm (3.5") dia	A45

CHAPTER -B- RENAULT PREMIUM SPECIAL BODYBUILDING FEATURES

1. PRESENTING THE "RENAULT PREMIUM" SERIES	B3
1.1 Changes to "RENAULT PREMIUM"	B3
1.2 Make-up of the series	B4
1.3 Electronic management of "RENAULT PREMIUM" vehicles	B6
1.3.1 Operating principle	B6
1.3.2 Bodybuilders' electrical pre-arrangements	B7
1.4 Warning	B7
2. GENERAL REMARKS ON THE "RENAULT PREMIUM" SERIES	B8
2.1 Identification of the vehicle	B8
2.2 General drilling principles	B10
2.2.1 Drilling cab panels for fitting accessories	B10
2.2.2 Drilling in sidemembers	B11
2.3 Precautions prior to welding	B12
2.3.1 Protection of wiring harnesses	B12
2.3.2 Welding on vehicles equipped with an electromagnetic master switch	B12
2.4 Minimum load on front axle	B13
2.5 Soundproofing screens and heat shields	B13
2.5.1 Instructions for soundproofing screens	B13
2.5.2 Instructions for heat shields	B13
2.6 Side impact guardss	B13
3. INSTALLATION OF BODYWORK	B14
3.1 Use of 1/20th scale drawings and calculation sheets	B14
3.2 Example of a search	B14
3.3 Body start dimension	B17
3.3.1 Behind-cab surrounds	B17
3.4 Finishing of sub-frame entrance dimensions	B25
3.5 Sub-frame sections	B26
3.5.1 Minimum height according to range of suspension movement	B26
3.5.2 Sub-frame minimum inertia	B27
3.5.3 Assembly conditions	B29
3.5.4 Body fastening plates for 4x2, 4x4, 6x4, 6x6, 8x4 vehicles	B31
3.5.5 Sub-frame sections	B44

4. ELECTRICAL PRE-ARRANGEMENTS	B46
4.1 Available power supplies	B46
4.2 Electrical pre-arrangements	B46
4.3 Management of engine speed	B51
4.4 Power take-off wiring	B51
4.4.1 Vehicle fitted with one PTO	B51
- A) Determining the rotating speed	B51
- B) Using the chassis-mounted fast idling variable speed control	B51
- C) Controlling speed regulation without cruise control	B52
4.4.2 Vehicle fitted with two PTOs	B52
- A) Determining the rotating speed	B52
- B) Using the chassis-mounted fast idling variable speed control	B52
- C) Controlling speed regulation without cruise control	B52
4.4.3 Vehicle fitted with three PTOs	B53
- A) Determining the rotating speed	B53
- B) Using the chassis-mounted fast idling variable speed control	B53
- C) Controlling speed regulation without cruise control	B53
4.4.4 Vehicle fitted with one engine rear PTO or no PTO at all	B53
- A) Determining the rotating speed	B53
4.5 Use of the steering wheel fast idling fingertip control	B54
4.5.1 Vehicle fitted with a poxer take-off	B54
4.6 Engine speed information	B55
4.7 Chassis-mounted starting and stopping controls	B56
4.8 Chassis-mounted stop control	B57
4.9 Parking brake information	B58
4.10 Electrical diagram for available power supplies	B59
4.11 Lateral lights	B63
5. CRANE MOUNTING PRE-ARRANGEMENT	B66
6. TIPPERS	B70
7. TANKERS	B74

CHAPTER -C-

SUPPLEMENTARY INFORMATION ON THE “RENAULT PREMIUM” VEHICLE

1. MOUNTING OF POWER TAKE-OFFS	C3
1.1 Auxiliary belt drive pulley	C3
1.1.1 Gearbox-mounted PTO	C3
1.2 Instructions for the assembly of auxiliary hydraulic pumps to type “C” PTOs (ZF or Hydrocar)	C6
1.2.1 Supplementary instructions	C6
1.2.2 Calculation of the weight torque	C6
1.2.3 Fastening the hydraulic pump	C6
1.3 Layout of PTOs on gearboxes (DCI 11 engine)	C7
1.4 Engine front PTO	C7
2. AIR-OPERATED EQUIPMENT	C9
2.1 Connection of extra auxiliary equipment	C9
2.1.1 Coupling for extra auxiliary equipment to chassis	C9

3. ELECTRICS	C12
3.1. Earths	C12
3.1.1 Cab earths	C12
3.1.2 Chassis earths	C13
3.2 Passage of wiring harnesses and compressed air pipes	C14
4. CHASSIS	C15
4.1 Steel classes for sidemembers	C15
4.2 Sections of sidemembers	C15
4.3 Reinforcement, extension, shortening of sidemembers in the rear overhang	C15
4.3.1 Modification to the rear overhang	C15
4.4 Intermediate cross-member	C15
4.5 Reinforcement, extension, shortening of double sidemembers in the wheelbase	C16
5. CHANGING THE POSITION OF EQUIPMENT ON CHASSIS	C17
5.1 Rear run-under guard	C17
6. HITCH COUPLING FOR DRAWBAR RIGID TRAILERS	C18
7. ASSEMBLY OF EQUIPMENT TO CAB	C19
7.1 Roof catwalk	C19
7.1.1 Attachment of catwalk to regular cab	C19
7.1.2 Attachment of catwalk to long cab	C20
7.2 Ladder	C21
7.2.1 Attachment of ladder to regular cab	C21
7.2.2 Attachment of ladder to long cab	C22
7.3 Assembly of accessories on roof	C23
7.3.1 Installation of antennae	C23
7.3.2 Installation of revolving beacons	C24
7.3.3 Installation of air horns	C24
7.3.4 Installation of roof deflector	C25
7.3.5 Installation of side deflector	C26
7.3.6 Installation of frontview mirror	C27
7.3.7 Installation of sunshade	C28
7.3.8 Installation of gantry	C29
7.4 Fastening of accessories	C30
8. VERTICAL EXHAUST	C31
9. REAR CROSS-MEMBER	C34
10. INSTALLATION PRECAUTIONS	C35
11. POSITION OF REAR PTO AND PNEUMATIC LINKS	C37
12. AIRBAG	C40

CHAPTER -A- GENERAL FEATURES

IMPORTANT

General principles and basic rules applicable for the conversion and fitting of equipment to vehicles in most cases for the majority of applications are detailed in this “General features” chapter.

1. GENERAL FEATURES

1.1 Scope of liability

RENAULT TRUCKS vehicles are merchandized at the end of corroborated technical designwork and endurance testing, taking the various laws, regulations, standards... involved into consideration.

Modifications to a RENAULT TRUCKS vehicle for the fitting of bodywork and equipment should be carried out in accordance with the rules and recommendations set out in this bodywork fitting guide and require an "Agreement in Principle", issued by the RENAULT TRUCKS Product Applications Department.

Guarantee and responsibility

Any intervening party is responsible for his services in terms of guarantee and responsibility, including any damage caused by his work and/or the equipment installed on-vehicle or the basic product.

In the event of RENAULT TRUCKS (or its network) being prime contractor for its own equipment (in relation to the end customer), the guarantee is considered as being at least that of the warranty offered by RENAULT TRUCKS to its customer.

Unless clearly specified otherwise in the order, the equipment warranty shall be negotiated directly between the end customer and the equipment manufacturer.

The meeting of recommendations contained in the present document can in no way be considered as relieving the equipment manufacturer's responsibility, but simply as complying with the basic rules for professional trade practice.

Any breach of these recommendations must be considered as shortcoming in respect of the rules and shall relieve RENAULT TRUCKS of its liability in the event of damage connected directly or indirectly to such non-compliance.

All the equipment is considered to comply with these recommendations and shall not require any acceptance testing upon delivery to check the conformity.

RENAULT TRUCKS guarantees non-modified original parts and components.

Interventions, conversions, adaptations of fittings carried out by the intervening party involves his responsibility, even if they are authorized administratively (Conversion appendix II).

Such conversions must not under any circumstance lead to any impairment of the quality or of the primary functions of the component elements of the vehicle (whether these elements are affected directly or not by the intervention).

Any modification, changing of position of constituent vehicle parts or elements must be covered by an "Agreement in Principle", issued by the RENAULT TRUCKS Product Applications Department.

For further information or assembly agreement, contact:

TO OBTAIN ANY INFORMATION OR APPROVAL OF MOUNTING, PLEASE CONTACT:

For France:
SERVICE TECHNICO-COMMERCIAL
RENAULT TRUCKS
API. COM 00A 238
69806 ST PRIEST CEDEX
Tel.: 04 72 96 68 14
Telex: 300 265 UDCF +
Fax: 04 72 96 81 93

For the United Kingdom:
Product Applications Department
RENAULT TRUCKS UNITED KINGDOM LIMITED
Boscombe Road,
Dunstable
Bedfordshire LU5 4LX
Tel. (Switchboard): (+44) (0)1582 471 122
Fax (Marketing) (+44) (0)1582 479 146

1.2 Regulations

The bodybuilder must meet :

- the different European and/or destination country laws, regulations and standards governing driving and vehicle building,
- the stipulations of the Highway Code and its various amendments and appendices,
- the different laws, regulations and standards governing road traffic in force in the country of destination.

The scope of this compliance must cover:

- Lighting and signalling,
- Weight and dimensions,
- The field of vision and rear view,
- The regulation protection devices (e.g. side guards, anti-spray, run-under guard),
- The hitch coupling and towing systems, (compliance with standards and regulations),
- Specific clauses concerning the transport of dangerous goods (ADR, COSHH etc.),
- Sun-roofs,
- Pollution control standards,
- Electromagnetic compatibility standards for electronic equipment.

1.3 Safety

All components having an influence on:

- The control of the driver of the trajectory and the ability to stop the vehicle and its trailer,
- The load distribution on the front or the rear, the left or the right,
- The risk of fire,
- and any other risk for the vehicle and its surrounding environment.

Among the components, we would mention, among others:

- The cab tilt mechanism,
- The wheels (tightening of the nuts),
- Seats and seat belts (anchorage points),
- The attachment of bodywork or equipment to be in conformity with the technical instruction document in force, (i.e. the Guide for the Fitting of Bodywork),
- The hitch coupling and towing systems, (i.e. anchorages),
- Electrical systems (protection of circuitry, the electrical rating, attachment, conformity of the connections with the technical instruction document, (i.e. the Guide for the Fitting of Bodywork),
- Warning systems and driver information systems, (i.e. no interference with the information given by the instrument panel on the dashboard),
- Information for use affixed by the manufacturer to the vehicle (i.e. decals for tilting of the cab, drilling points, welding points, batteries, etc.).
- Extension and reduction of the length of the wheelbase and the rear overhang.
- Re-location or replacement of the crossmembers.
- Circuits for ancillary equipment.

In order to guarantee the safety and the satisfactory operation of the vehicle, modification of the following components is strictly forbidden:

- Brakes: circuits, controls and anchorages,
- Steering: circuits, controls, anchorages and geometry,
- Axle and axle housing assemblies,
- The air-bag system and pretensioning systems on the seat belts,
- The electronics.

1.4 Quality assurance

Our permanent objective is to give satisfaction to our customers and we must achieve this in full on the final product consisting of a chassis, bodywork and/or an item of equipment.

In order to achieve this objective, RENAULT TRUCKS expects from all those co-operating with it in the field of mounting bodywork and equipment supply to implement a Quality Assurance System.

RENAULT TRUCKS can demand proof for the execution of all bodywork, the fitting of equipment or modification of a basic truck, in accordance with Standard ISO 9000, of :

- The conformity with all legislation, EC Directives and national regulations,
- The compliance with the manufacturers' directions,
- The control of quality of the execution of the work.

This is done with the knowledge that, on the face of it, the vehicle is considered as complying with the whole of the regulations.

1.5 Documentation

In all cases involving equipment, the installer is obliged to supply a manual covering the use, service, maintenance and safety of his installation.

1.6 General instructions

When building and fitting a body (including such equipment as rear run-under guards), a certain number of requirements and a certain number of vital requirements specific to each type of vehicle must be taken into consideration. These various points relate to maintenance, accessibility and the circulation of fluids.

Examples:

- Ease of access to the various maintenance and lubrication points, to the fuel tank and fuel gauge, to the batteries and the various electrical terminal boxes.
- The ability to easily dismantle the various component parts of the transmission and the suspension.
- Access to the circuits for air-intake, exhaust, and fuel supply.
- Taking into account the wheel movement detailed on the bodywork drawing (i.e. take care to allow for snow chains; extra clearance must be provided).
- Ventilation of the brake drums and discs and the battery compartment.
- The radiator inlet and outlet areas, which must not be modified.
- Full compliance with the dimensions and weights specified in our technical documents. Under all circumstances, the bodybuilder must ensure free movement and safe operation of all the moving component parts of the chassis (i.e. springs, prop shaft, etc.).
- The addition of a body must not affect the vehicle running and driving safety. Take care to ensure that a balanced distribution of the loads on the right and the left hand sides of the vehicle is obtained.
- For any bodywork installation, a calculation of load distribution must be made for each axle, in order to check that the weight imbalance between the right and the left hand side is below 4%.
- The flow of the coolant must be maintained at all times. It is, therefore, not allowed to blank off, even partially, the air intakes provided (on the radiator grille or the front end). Orange ADR or similar "Hazardous Substances" plates should be affixed to solid surfaces (i.e. without vent holes).

On the arrival of a vehicle in your workshop for body fitting, we recommend that you should check one hour after the arrival of the vehicle, the state of charge of the batteries.

Voltage at the battery terminals		Specific gravity of the electrolyte	State of charge
6 Volt battery	12 Volt battery		
6.3 Volts	12.7 Volts	1.27	100 %
6.2 Volts	12.5 Volts	1.24	80 %

During the period for the fitting of the bodywork, you should particularly check that:

- The vehicle is not run without a battery.
- Do not move the vehicle on the starter motor.
- Do not use a booster starter.
- Ensure that the tyre pressure is checked and tyres inflated to the correct value where necessary.
- Protect body components or items of trim against all damage.
- Refit the original batteries, where these have been taken off.

IMPORTANT

- Whatever work you are doing on the vehicle, you must switch off the electrical circuit at the master switch or by disconnecting the batteries in order to avoid any risk of electric shock during work.
- When a vehicle is laid up (i.e. at a standstill for longer than 10 days), disconnect the electrical circuit by removing the fuse or by the circuit-breaker so as to avoid discharge of the batteries through the tachograph.

The information contained in this manual is only applicable to bodywork in steel. For aluminium bodies, refer to the Product Applications Department of RENAULT TRUCKS

It is forbidden to weld, grind, cut up, drill or heat the sidemembers or crossmembers unless the contrary is clearly stated. These operations may only be carried out in conformity with the recommendations laid down in the present document.

Any special case, any bodywork fasteners and fittings not described in this manual must be submitted for our approval prior to use.

Before commencing the fitting of any bodywork, you must consult:

- The Vehicle Technical Data Sheet,
- The bodybuilders drawing and the relevant calculation sheets which relate to the body to be fitted,
- The vehicle driving and maintenance handbook.

If you do not have these items available, you should obtain them from RENAULT TRUCKS Dealers or the RENAULT TRUCKS Product Applications Department.

In the technical manual and on the bodywork drawing is stated the permitted maximum and minimum length of body; we would strongly advise you to stay within these limits.

Furthermore, it should be noted that the changing of position of a component such as spare wheel, tank, etc., the modification of a chassis without uniform weight distribution or the fitting of an over-cab extension, causes a modification of the load distribution of a fully equipped chassis in every single case.

Modification to load distribution must be compensated for by an alteration in the permitted length for bodywork. It then becomes necessary to calculate the new position of the centre of gravity of the bodywork.

The weights specified in our technical data sheets refer to standard vehicles, ready for the road, without optional extras.

Furthermore, the weight of chassis cab is given with a tolerance of plus or minus 4%.

Optional equipment such as reinforced springs, power take-offs, different tyre fitments, will cause an increase in weight for the basic chassis.

For these reasons, when weighing the chassis cab, bodybuilders should weigh:

- The front axle(s),
 - The rear axle(s),
 - The complete vehicle,
- without driver, without passenger, but with full fuel tanks and with vehicle on-board tool kit.

For the preparation and attachment of the various types of bodywork, it is preferable not to take off the wheels, unless absolutely necessary.

Nevertheless, you must take the precautions set out below:

- It is forbidden to paint the bearing surfaces of the wheel rim hubs and the seating for wheel nuts.
- During fitting, make certain that the parts are perfectly clean prior to fitting.
- Tighten the wheel nuts to the torque recommended (cf. vehicle driving and maintenance handbook)

Installation fitted with key-operated locks: the section of such keys must be very different to that used for the vehicle keys. Indeed, these keys should not be able to be put into the vehicle locks by mistake, thus avoiding any risk of damage to the barrels of the locks.

1.7 Safety on tilt cabs

After the conversion of standard cabs by the bodybuilders, (i.e. extension, bunk adaptation, over-cab extension, etc.) because the weight distribution has changed, the tilt system may no longer meet the requirements of the safety standards.

Under these circumstances, and without prior agreement from the manufacturer, the full and entire responsibility rests with the bodybuilder.

1.8 Chassis markings

The identification number of the vehicle is on the sidemember (refer to the vehicle driving handbook).

The identity markings of the vehicle must remain visible and accessible without having to remove any part of the body.

1.9 Adjustments to the vehicle settings

Under no circumstance may bodybuilder or converters make any alteration to the original settings of RENAULT TRUCKS vehicles.

1.10 Cleaning

1.10.1 Bodywork

So as not to cause any damage to the condition of the paintwork and the seals:

- Avoid using a high temperature jet of steam.
- Restrict the use of brushes. They must be in good condition and well maintained.
- We advise against the use of brushes, during the first month of vehicle use.
- If you are using a high pressure jet wash unit, limit the pressure to 80 bars maximum.
- Keep the lance well away from the bodywork; do not spray fluidtight joints.
- Use neutral soap based products.
- In order to remove grease spots, use cleaning fluid (not petrol).
- Parts in aluminium must be cleaned with water to which a non-alkaline washing product has been added, and rinsed with clean water.
- Spread a coat of Vaseline or talcum powder over the seals.

1.10.2 Chassis/Underbodies

Use a high pressure unit. Limit the pressure of the jet to 80 bars maximum and the time of use to the strict minimum necessary.

In order to prevent any risk of a problem, do not spray:

- electronic or electrical boxes,
- the seals of link rods,
- hinge pins,
- air inlets for the heater, the engine air intake and air filter,
- pneumatic and electrical apparatus,
- absorbent materials and soundproofing screens,
- the fuel gauge.

1.10.3 Cleaning of the cab

Spray lightly or use a cloth dipped in a cleaning agent (i.e. soapy water, methylated spirits, etc.). Products with a petroleum and trichlorethylene base are not to be used.

Spread talcum powder lightly onto the door seals and the windows, as well as any link rods.

1.10.4 Cleaning of the instrument panel

Only use soapy water. Any other product is not allowed.

1.11 Safety and protection of components

Before any operation of grinding, drilling, or welding, ensure that the following are effectively protected or taken off:

- Plastic pipework and tubes,
- Electrical wiring harnesses,
- Suspension springs (particularly for the protection against corrosion),
- The bags for the air suspension,
- The soundproofing screens,
- Any other component sensitive to heat, to the discharge of incandescent matter, to ultraviolet rays (i.e. electronic control units, electronic components, items in plastic material, flexible anti-vibration mountings, painted items, etc.).
- For welding work, comply with the other recommendations described in the chapter entitled "Protection of electrical and mechanical components".

1.12 Summary of definitions

Maximum body length (Dimension W on technical data sheets and bodywork drawings).

This is the bracket of lengths for bodies (not including fittings and accessories) worked out in relation to the extreme positions of a given centre of gravity for a load which is taken to be evenly distributed and taking into account the space which must be left to the rear of the cab, laid down by the manufacturer, and the maximum permitted loads per axle on a chassis cab without options.

Body start (Dimension B on technical data sheets)

Minimum distance between the front axle centre-line and the front end plane of the body.

Load distribution calculations

Comply with the regulatory constraints for each country and the load limits given per axle for each model by RENAULT TRUCKS.

We remind you that these values are given for uniformly distributed loads.

The lateral imbalance of the loads should not exceed a maximum of 4% between the LH and RH roadwheel of each axle.

Chassis rear overhang (Dimension N on technical data sheets)

Horizontal distance between the centre-line of the rear roadwheels and the rear extremity of the body (excluding fittings and accessories).

In the case of vehicles with 3 or 4 axles: distance between the centre-line of the rearmost axle and the extremity of the chassis.

Body rear overhang (Dimension X on technical data sheets)

Horizontal distance between the centre-line of the rear roadwheels and the rear extremity of the body (excluding fittings and accessories).

In the case of vehicles with 3 or 4 axles: distance between the technical centre-line of the tandem and the rear extremity of the body.

Wheelbase (Dimension F or F' on technical data sheets).

Distance between the centre-lines of the front and rear roadwheels (vehicle laden).

In the case of vehicles with 3 or 4 axles: distance between the centre-line of the front roadwheels and the centre-line of the foremost rear axle - for calculations take dimension F' (technical wheelbase).

Tandem

Solely in the case of vehicles with 3 or 4 axles: the 2 rear axles taken together, regardless of whether they are driving axles or trailing axles.

Maximum axle weight

Carrying weights are stipulated on each axle for each type of vehicle. These values are indicated on the technical data sheets and on the VIN plate and must be complied with on all vehicles fitted with bodies when laden and when empty.

Driver and cab passengers weight

The weight of the driver and passenger (passengers) in the cab is applied to the front axle in the case of a forward control cab.

For cabs of the semi-forward control type, 2/3 of the weight should be applied to the front axle and 1/3 to the rear axle.

Weight of driver or each passenger: 75 kg (calculated on the basis of the cab seating capacity), unless stipulated otherwise: i.e. Export, Army, Fire Brigade, etc.

For cabs with a seating capacity of more than 3 persons, calculate the weight distribution of the persons on the basis of the seats layout.

For equipment intended for the Army or for Civil Administrations, take the specific specifications into account.

1.13 Certificate of approval of the conversion of a vehicle

1.13.1 Application for approval

- 1** - If the body or the equipment fitted do not modify the weight and dimensional characteristics of the chassis entered in the descriptive sheet, the vehicle can be submitted to the Type Approval Department without any action by RENAULT TRUCKS being necessary (within the permitted limits in force).
- 2** - The maximum rear overhang is equal to 60% of the wheelbase. However, for special cases, we can grant higher percentages - for this, consult us.
- 3** - If the layout requires modification to the wheelbase, it is essential to consult the RENAULT TRUCKS Product Applications Department. Each case has to be covered by a specific design.
- 4** - The certificate will be issued in accordance to the legislation in force regarding modifications made by and under the responsibility of the bodybuilder, within the limits stipulated by the Manufacturer and relative to :
 - the wheelbase,
 - the distribution of loads,
 - the cab characteristics.
- 5** - For more accuracy in your calculations, we recommend you to introduce into the data the weighed weight of the chassis cab to be equipped (capable of varying according to manufacturing tolerances and the various options available). The same applies to equipment for which the manufacturers can accurately define the weight and the position of the centre of gravity.

1.13.2 Body fitting certificate

This defines the installation of the equipment on the chassis cab and the unladen weight imposed on the axles and then the weight when fully laden.

It must be attached to all applications relating to the equipment which do not comply with any of the dimensions set out in the descriptive sheet.

1.13.3 Responsibility for installation

The building and fitting of a body on a vehicle is the sole responsibility of the bodybuilder, who must comply with the recommendations in the present document.

He must ensure that the installation of the body does not affect the functions or the reliability of the components or the road behaviour of the vehicle.

1.14 Painting

1.14.1 Precautions

- Protect the **RENAULT TRUCKS** equipment (i.e. by using screens, self-adhesive tape, cab cover etc.).
- Never put vehicles into drying ovens at a temperature of **more than 80° C**.
- The chassis of the vehicle must be electrically earthed to allow static electricity to run away to earth (protection of electronic boxes).
- The vehicle must be protected against corrosion by paints compatible with those used by our Company and conforming to **RENAULT TRUCKS** Specification No 4702 441 (protection of bodywork and equipment adapted to **RENAULT TRUCKS** vehicles) available from the Product Applications Department.
- Thinner solvents must never be used on cables and electrical sheaths.
- Protect the identification marking of electrical wires and compressed air pipes.

Never paint bearing surfaces of brake drums and disc wheels, or with twin tyre fitment, the assembly surfaces between the disc wheels. As a general rule, do not repaint the support surfaces of original fitment nut and bolt hardware and comply with the specification.

NOTE

Our Product Applications Department holds the reference numbers for paint colour shades for chassis and cabs at your disposal. These paint colours can be procured as "spare parts" and can be ordered from our dealers.

The cab colour shade is indicated on the front end of the cab.

Since 1994, chassis and accessories are no longer sprayed with the customer's shade of paint at the time of original fitment.

To preserve the aspect and original quality, it is essential to observe the following methods after fitting equipment, body, sub-frames and various adaptations to major units or chassis frame:

1.14.2 Major units (gearboxes, drive axles, engines, axles, etc.).

Works paint: GLYCEROPHTHALIC

Retouch (after fitting PTO, charge indicator, etc.).

Retouch method

- Clean with a universal cleaner or using a high-pressure cleaner.
- Wipe down, then apply a primer.
- Let the product cure until mat (about 15 minutes at 20° C), then apply the corresponding polyurethane lacquer.

1.14.3 Chassis frame and accessories (sidemembers, crossmembers, fittings, lockers, etc.)

Works paint: POLYURETHANE or POLYESTER powder.

Retouch method:

Superficial scratches (the metal is not affected).

- Clean with a universal cleaning product.
- Wipe down, then apply the corresponding undiluted but catalyzed polyurethane lacquer, using a small brush.

Deep and fine scratches (down to the bare metal).

- Clean with a universal cleaning product.
- Wipe down, then apply the primer, using a small brush.
- Let the product cure (about 15 minutes at 20° C), then apply the corresponding undiluted but catalyzed polyurethane lacquer.

Deep and wide scratches (down to the bare metal, drilling of sidemembers for attaching tail lifts and accessories) due to drilling.

- Rub down.
- Clean with a universal cleaning product.
- Let the product cure until mat (about 15 minutes at 20° C), then apply the corresponding polyurethane lacquer.

Making good after conversion (after converting wheelbase and overhang).

- Grind, rub down; prepare the area in question (burnt paint, welding scale, etc.).
- Clean with a universal cleaning product or using a high-pressure cleaner.
- Mask with tape (electrical wiring harnesses, air and fuel pipes, labels, etc.).
- Wipe down, then apply the primer.
- Let the product cure until mat (about 15 minutes at 20° C), then apply the corresponding polyurethane lacquer.
- After drying, put back the electrical wiring harnesses, air and fuel pipes and accessories.

Spraying chassis and accessories (with customers colour shade).

- The bodybuilder undertakes to preserve the aspect and quality of the original fitment vehicle (except for nut and bolt hardware).
- Clean with a universal cleaning product or using a high-pressure cleaner.
- Mask with tape (electrical wiring harnesses, air and fuel pipes, labels, etc.).
- Wipe down, then apply the primer.
- Let the product cure until mat (about 15 minutes at 20° C), then apply the corresponding polyurethane lacquer.
- After drying, put back the electrical wiring harnesses, air and fuel pipes and accessories.

NOTE

All spray gun operations are to be carried out in a painting booth.

Since August 1999, the chassis are painted grey as replacement for Enduro red. For paint retouches on grey chassis, use a grey paint aerosol ref. N° 50 01 848 147.

1.14.4 Recommended products

Manual cleaning

Universal cleaning product or equivalent solvent

Products approved by RENAULT TRUCKS

Supplier	Commercial name	RENAULT TRUCKS Ref.	Supplier Ref.
BASF	PK 900	50 01 821 758	SV 20023F
ICI AUTOCOLOR	Slow Spirit Wipe	50 01 854 983	P850-1402
STANDOX	ENTFERNER Agent	50 01 825 985	FA 931 2002

High-pressure cleaning

Degreaser, phosphater degreaser

Filling and sealing

Products approved by RENAULT TRUCKS

Supplier	Commercial name	RENAULT TRUCKS Ref.	Supplier Ref.
STANDOX	"EPOXY" filler-sealer	50 01 826 019	FA 931 5203
	"EPOXY" hardener	50 01 825 990	FA 931 5204
	"EPOXY" thinner	50 01 826 005	FA 931 5205
	"EPOXY" slow thinner	50 01 829 256	FA 931 5213
	thinner 2KS	50 01 825 992	FA 020 7810
ICI AUTOCOLOR	"EPOXY" filler-sealer	50 01 829 477	P580-2100
	"EPOXY" hardener	50 01 829 480	P210-833
	thinner	50 01 829 481	P850-3091


Finish paint

Two-component polyurethane paint and corresponding thinner.

1.14.5 Marking of polymer components (recycling of plastics)

Plastic parts are marked so as to simplify their sorting during recycling at the time when the vehicle is scrapped at the end of its life.

Marking of the plastic parts is done by placing abbreviated terms for the polymer components between the symbols ">" and "<". The parts are marked on a face which the customers cannot see and when it is possible the marking is indelible. Marking is done in the following manner:

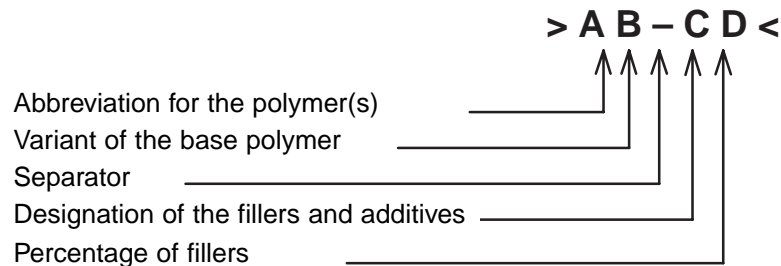

Marking of single component products

The abbreviated term for the material is enclosed in symbols ">" and "<".
For example: ">PP<" or "PP" indicates polypropylene.

Marking of copolymers

The abbreviated terms for the polymers are separated by a "/".
For example: ">P/E<" indicates the copolymer propylene ethylene.

Marking of mixtures or blends of polymers

The abbreviated terms are separated by a "+" (heterogeneous structure).
For example: ">PP + EPDM<" stands for a blend of polypropylene and EPDM.

Marking of polymers with fillers (additives)

The abbreviated term for the polymer is separated from that for the filler by a dash "-".
The number following the abbreviated term for the filler relates to its percentage in the mixture.
For example: ">PA66 - (GF25 + MD15)<" indicates polyamide 66 with 25% filler and 15% reinforcement with mineral fillers (in decreasing order of percentage).

Marking of multi-component products

The abbreviated terms for the components are separated by commas, in order of appearance (firstly the surface material).
For example: ">PVC, PUR, ABS<" indicates skin surface PVC on PUR foam with an ABS insert.

Marking of special features

Abbreviated terms for the polymers can be added up to 4 symbols, in order to indicate a modification.
The symbols are put in after the abbreviated terms.
For example: ">PE - C<" indicates chlorinated polyethylene, ">PE - LLD" stands for linear low density polyethylene.

Table of the principal polymers

Abbreviated term	Variant	Materials
A.B.S		Acrylonitrile/butadiene/styrene
A.S.A		Acrylonitrile/styrene/acrylate
E/P		Ethylene/propylene
E.P.D.M		Copolymer ethylene/propylene/diene
P.A		Polyamide
P.A	6	Polyamide 6
P.A	66	Polyamide 66
P.C		Polycarbonate
P/E		Propylene/ethylene
P.E		Polyethylene
P.E	– HD	High density polyethylene
P.E	– LD	Low density polyethylene
P.E	– LLD	Linear low density polyethylene
P.E	– X	Cross-linked polyethylene
P.M.M.A		Poly(methacrylate of methyl)
P.O.M		Polyoxomethylene
P.P		Polypropylene
P.P.E		Poly(phenylene ether)
P.P.O.X		Poly(oxide of propylene)
P.S		Polystyrene
P.S	– HI	Impact polystyrene
P.T.F.E		Poly(tetrafluoroethylene)
P.U.R		Polyurethane
P.V.C		Polyvinyl chloride
P.V.C	– C	Chlorinated polyvinyl chloride
P.V.C	– P	Plasticized polyvinyl chloride

1.15 Electrical equipment

1.15.1 General

- Any mounting of a specific item of equipment on a commercial vehicle must be in conformity with the recommendations of RENAULT TRUCKS and the legislation in force. Its execution remains the entire responsibility of the bodybuilder, both with regard to the suitability for the vehicle being equipped and any possible electromagnetic interference.
- For reference to wiring diagrams, consult the electrical equipment workshop manual for the vehicle (available from the Spare Parts Department of RENAULT TRUCKS).
- Check that the electrical consumption of this equipment is appropriate for the capacity of the batteries and also the charging current rate of the alternator (if not, refer to the recommendations of the manufacturer CIC 1081). For the fitting of any particular equipment, consult the Product Applications Department of RENAULT TRUCKS.
- A schematic diagram should be submitted for the approval of RENAULT TRUCKS, when raising any specific question.
- A wiring diagram for the bodybuilder's or equipment manufacturer's installation must be incorporated into the vehicle driving and maintenance handbook. The electrical connection points for the equipment being supplied should be clearly and precisely indicated on this wiring diagram (even after the agreement of RENAULT TRUCKS has been obtained).
- Follow the electrical protection recommendations of RENAULT TRUCKS; it is forbidden to change the rating of fuses.
- In order to harmonize vehicle equipment, you should use in preference such items as are identical to those fitted in the basic vehicle (i.e. indicator lamps, controls, relays, etc.).
- Assembly of a protective shield on the electric retarder is compulsory for ADR (Transport of Hazardous Substances) vehicles (refer to regulations in force).
- It is compulsory for the supply voltage for the equipment installed to be equal to the rated voltage of the vehicle. The installation of equipment with a 12 volt power rating on our vehicles (24 volt rated voltage) is not permitted unless a voltage dropper is added.
- Under the circumstances that additional lamps are fitted, the installation must not damage the fluidtight sealing of the junction boxes.
- Operating without a battery is forbidden.

1.15.2 Wiring harnesses

- Use to the full the wiring runs already set up by the manufacturer (i.e. conduits, tubes, sleeves, etc.) and comply with the limit of their capacity.
- Any wiring harness added by the bodybuilder must be protected by a sealed sheath (smooth and thick or ringed) and can be routed along with the original wiring runs for the vehicle provided that it does not adversely affect the mechanical mountings for the original harnesses. For vehicles for the transport of hazardous goods, use the protective equipment authorized by the regulations covering the transport of hazardous goods.
- If you are obliged to route wires close to a source of heat (i.e. engine, exhaust system, etc.), the minimum clearance to be complied with is 200 mm.
- Never route a wiring harness over projecting angles.
- Never attach a wiring harness to moving parts (even slight movement).
- The section of the cables being used must be suitable for the use in question. Their cross-section should be selected in accordance with the maximum current on-line (5 amperes per mm²).
- The length of the wiring harnesses should be long enough to allow the electrical appliance which is connected to be taken off (i.e. principal display unit, tachograph, etc.).
- The numbering of the wires must be in accordance with the manufacturer's standard.
- The link between the sheath and the connector must be fluidtight.

1.15.3 Electrical connections

- Any additional connection requires protection that is suitable for the use for which it is intended (even if the power supply provided for the customer by RENAULT TRUCKS is already protected by a fuse).
- Any electrical connection must be properly wired on the power lines supplied by the manufacturer to the bodybuilder's equipment (refer to the servicing and maintenance handbook for the vehicle in question).
- Tapping into the various wiring harnesses supplied by RENAULT TRUCKS is completely FORBIDDEN (for example vehicle rear lamps, external marker lamps, contactors, pressure switches, relays, electronic box inputs and outputs, etc.)

Reminder: a 12 V tapping at the middle point between the two batteries is strictly FORBIDDEN.

- The electrical connections of the various wiring harnesses of the bodybuilder must be made using a fluid-tight junction box or otherwise using sealed connectors. If connections have to be made on circuits hooked up to electronic equipment:
 - Ensure that you comply with the polarity recommended.
 - No inductance current must pass through the circuits which have been added.
 - All the earths must be connected up to the available "EARTH" points provided and not to the bodywork of the vehicle.
 - After work on junction boxes, the seal must always be as integrally effective as the original seal.
 - Any power supply requiring a direct connection to the batteries must be capable of being isolated by a battery cut-out (for example: tail lifts) and protected by a fuse sited as near as possible to the batteries. Suitable connection terminals should be used.
- The + power supply is taken from the master switch, or failing this, from the battery terminal for vehicles without a master switch, but in no case from the alternator or starter motor terminal.
- Power supplies to auxiliary equipment: i.e. telephone, fax, etc. The quality of the installation is the responsibility of the installer (i.e. reception, static, interference, etc.)
- Preferably, you should use connectors approved and distributed by RENAULT TRUCKS (i.e. type, sealing properties, rating, number of channels, etc.).
- Connectors for equipment should be positioned near the bottom, whilst avoiding areas subject to splashing (i.e. wheelarches, etc.).

1.15.4 Available power supplies

All our vehicles are equipped with the available power supply protected by fuses and these are at the disposal of bodybuilders and equipment manufacturers.

These power supplies are described in the vehicle driving and maintenance handbook (supplied with every vehicle), in the Workshop Repair Electrical Manual, and in this document (all these documents are available from the RENAULT TRUCKS dealer network).

1.15.5 Flasher units

Should the flasher unit become inoperative due to failure to comply with the instructions contained in this document, the coverage granted by the warranty will be lost.




The flasher units are designed for a maximum rating which is marked on the unit.





Do not exceed this power rating.


Connection

In order to make the connections correctly, consult either the identification marks which are located close to the terminals, or the wiring diagram on the label which is affixed to the flasher unit cover.

1.15.6 List of standard power sockets

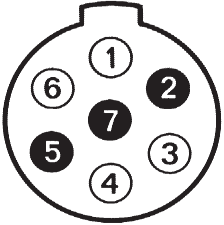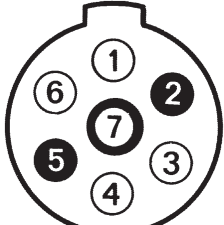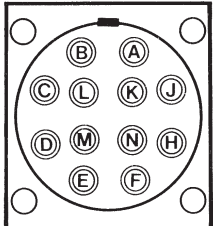SUPPLY VOLTAGE	DESCRIPTION AND STANDARDS	SOCKET DIAGRAM (front view)
12 Volts	<p>12 N type socket (Standard: - BNA.R.43.407 dated April 1982 - ISO 1724).</p> <p>1 - LH direction indicator lamp. 2 - Rear fog lamp. 3 - Earth. 4 - RH direction indicator lamp. 5 - RH rear side and marker lamp and number plate illumination lamp. 6 - Stop lamp. 7 - LH rear side and marker lamp and number plate illumination lamp.</p>	 <p style="text-align: center;">600037</p>
12 Volts	<p>12 S type socket (Standard: - BNA.R.43.410 dated August 1982 - ISO 3732).</p> <p>This is a supplementary socket which is assembled in addition to the 12 N socket.</p> <p>1 - Reversing lamp. 2 - Not allocated. 3 - Earth. 4 - Supplementary + power supply. 5 - Earthing monitor. 6 - Positive (+) power supply. 7 - Not allocated.</p>	 <p style="text-align: center;">600038</p>
24 Volts	<p>12-pin socket (Standard: - BNA.R.43.405 dated March 1961 - DEFA 1457 b - DCEA 5.556 - NATO).</p> <p>A - LH black-out side lamp. B - LH direction indicator lamps. C - RH black-out side lamp. D - Earth E - Rear side and marker lamps and number plate illumination lamp. F - Black-out stop lamp. H - Not allocated. J - RH direction indicator lamps. K - Battery + power supply. L - Earth. M - Stop lamps. N - Not allocated</p>	

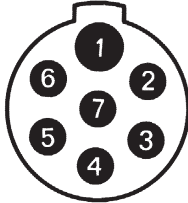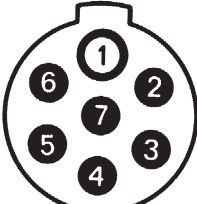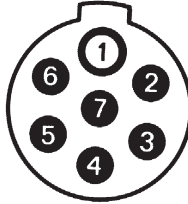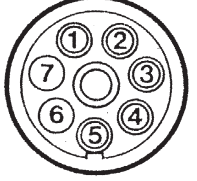SUPPLY VOLTAGE	DESCRIPTION AND STANDARDS	SOCKET DIAGRAM (front view)
24 Volts	<p>24 N type socket (Standard: - BNA.R43.406 dated January 1976 - ISO 1185).</p> <p>1 - Earth. 2 - LH rear side and marker lamp and number plate illumination lamp. 3 - LH direction indicator lamps. 4 - Stop lamps. 5 - RH direction indicator lamps. 6 - rear side and marker lamps and number plate illumination lamp. 7 - Trailer braking lamp. Terminal 7 is scheduled in certain countries for supplying power to regulation trailer brakes. Under no circumstances must it be used as an earth terminal.</p>	 <p>600040</p>
24 Volts	<p>24 S type socket (Standard: - BNA.R43.409 dated April 1982 - ISO 3731).</p> <p>This is a supplementary socket which is assembled in addition to the 24 N socket.</p> <p>1 - Earth. 2 - Not allocated. 3 - Reversing lamp. 4 - Power supply. 5 - Earthing monitor. 6 - Supplementary power supply. 7 - Rear fog lamp.</p>	 <p>600041</p>
24 Volts	<p>24 P (oil tanker) type socket (Standard: - BNA.R.10.120 dated June 1977)</p> <p>This is the socket for ADR (Transport of Hazardous Substances) vehicles which is assembled in addition to the 24 N socket.</p> <p>1 - Earth. 2 - Valve lighting. 3 - Reversing lamp. 4 - Positive (+) power supply. 5 - Insulated earth. 6 - Not allocated. 7 - Rear fog lamp.</p>	 <p>600042</p>
24 Volts	<p>ABS specific type socket (Standard: - ISO 7638)</p> <p>1 - Power (30A). 2 - Control power supply (2A). 3 - Control earth (2A). 4 - Power earth (30A). 5 - Information (2A). 6 - Free. 7 - Free.</p>	 <p>600563</p>

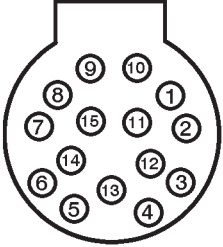SUPPLY VOLTAGE	DESCRIPTION AND STANDARDS	SOCKET DIAGRAM (front view)
24 Volts	<p>15-pin trailer socket (Standard: - ADR 1999 IP54 and anti-unhooking - ISO 12098).</p> <p>1 - LH direction indicator lamps. 2 - RH direction indicator lamps. 3 - Rear fog lamp. 4 - Earth. 5 - RH rear side/parking and marker and registration plate lamps. 6 - LH rear side/parking and marker and registration plate lamps. 7 - Stop lamps. 8 - Reversing lamps. 9 - 24V positive (+) power supply.</p> <p>Since July 1999, the 15-way socket replaces 24N and 24P sockets. Channels 10, 11, 12, 13, 14, 15 are unaffected.</p>	 <p style="text-align: right; font-size: small;">60 1990A</p>

The 15-way socket can be mounted on vehicles equipped with 24N and 24P sockets with the use of a 15-way 24N/24P adapter ref. N° 50 01 851 060 available from the RENAULT TRUCKS Spare Parts department.

1.15.7 Additional direction indicator lamps

- On tractors and rigids

Should the lamps provided not meet all the requirements of the legislation in force, the bodybuilder may add extra lamps supplied with power by the same circuit as the front lamp or by a special circuit should one be available from the flasher unit. In all cases, comply with the power rating.

We strongly advise you to refrain from fitting any other lamp not required by the regulations.

- On trailers and semi-trailers

The standards in force concerning trailers require only two circuits for the flasher units: one circuit for the RH side and the other for the LH side. No additional lamps must be fitted on the trailer or semi-trailer which run from the monitored trailer lamps.

The addition of extra lamps entails the fitting of new wire runs which have to be drawn from the non-monitored lamp terminals in the flasher unit.

Overloading

Under no circumstances must extra lamps be fitted that exceed the power rating on the flasher unit. The main consequences of such overloading are as follows:

- The service life of the flasher unit is shortened, even when it would appear to be operating normally in spite of the overload.
- Operation is adversely affected by intermittent or permanent sticking of the contacts (the lamps remain lit without flashing)
- The appliance may be **off-circuit for the duration of the overload.**

Protection of the flasher unit (depending on the vehicle equipment)

In the event of excess current, the flasher unit will cease to operate. To return it to service:

- Move the flashing lights control switch to the 0 "off" position.
- Find the cause of the overcurrent (lines or lamps) and remedy it.

You will then be able to use the flashing lights again normally.

1.16 Air-operated equipment

Should it be necessary to add auxiliary equipment not provided by the manufacturer, it must compulsorily be connected to the circuit specifically provided for auxiliary equipment on the vehicle.

The compressed air consumption of such auxiliary equipment should under no circumstances compromise the filling times of the brake circuits laid down by the legislation in force.

The RENAULT TRUCKS Product Applications Department is at your disposal for any further information you may require.

1.16.1 Regulations

It is forbidden to modify officially approved braking circuits which conform with the standards set out by the Highway Code.

Any modification, without prior agreement from RENAULT TRUCKS, is done under the sole responsibility of the author of such a modification.

1.16.2 Polyamide pipes

Identification marking

Before removing any equipment or disconnecting polyamide pipes, mark the pipe in relation to the connection port on the equipment.

Coding system used on polyamide pipes (RENAULT TRUCKS standard):

Polyamide pipes are identified with a colour code marked with adhesive tape or by elastic rings.

Brakes code:

Main functions	Sub-functions		
	Constant pressure	Delivered pressure	Signalling pressure
Front service brake	Orange	Orange - White	Orange - Yellow
Rear service brake	Blue	Blue - White	Blue - Yellow
Parking brake	Green	Green - White	Green - Yellow
Trailer brake	Red	Red - White	Red - Yellow
Extra brake	Yellow	Yellow - White	Yellow - Yellow

Coding used on pneumatic appliances (DIN standard)

0 - Air intake	5 - Free		
1 - Pressurized supply	6 - Free		
2 - Delivered pressure	7 - Antifreeze		
3 - Air vent	8 - Lubrication	81 - Inlet.	82 - Outlet
4 - Signalling pressure	9 - Water cooling	91 - Inlet.	92 - Outlet

When the figure is followed by a second figure, the latter figure indicates the sequence number.

Example: 41, 42, 43: The figure 4 indicates the signalling function, the figures 1, 2, 3 indicate a sequence number in that function.

Replacement of a brake line

The entire length of a damaged polyamide pipe should be replaced by a pipe with identical characteristics (length and diameter), and corresponding with the standard in force. (See technical memo 8655 group 53000, part N° 50 20 034 156 available with spare parts). It must also be provided with coloured rings which are identical to those of the tube replaced.

Use an original manufacturer's pipe available from the RENAULT TRUCKS Spare Parts warehouse.

The routing of a polyamide pipe must be carefully executed. Ensure there is no interference with sharp-edged metal parts and there is no routing close to high temperature units. The pipes must be held at regular intervals by plasticized clamps or run in existing ducting. Non-plasticized attachment clamps are absolutely forbidden. Take care to ensure the minimum radius of curvature of polyamide pipes is observed.

Dimension	4 x 6	6 x 8	9 x 12	12 x 16
Radius of curvature	30 mm	50 mm	70 mm	130 mm

Modification to the length of the chassis

Modification to brake pipe lengths requires braking response times to be checked out, in accordance with the legislation in force, and with agreement from the Type Approvals Department.

Connections for firtree type pneumatic brake pipes type "RILAX 2000"

For the fitting of this type of connector, refer to and comply absolutely with the technical instruction sheet NT 8852 (method and tooling) available from the RENAULT TRUCKS Spare Parts Department.

2. GENERAL RULES TO BE OBSERVED WHEN FITTING BODYWORK

Before carrying out any work, protect the cab with a cover.

Our vehicles are equipped with plates, pedestals or brackets. Preparation work may involve extra drilling or welding.

The principles described below must be adhered to.

2.1 General principles of welding

2.1.1 Precautions

Protection of the batteries

A battery at the end of its charge produces a mixture of oxygen and hydrogen gas. The ignition of this gas presents dangers of battery explosion in the case of the presence of a source of heat nearby. As a result, during a welding operation near the batteries (i.e. engine compartment, front end of the vehicle), take out the batteries and store them in a well-aired location away from the place where welding is being done. This recommendation applies equally for grinding operations.

Soundproofing screens

In the case of welding or use of a sanding disk, either provide effective protection or remove the soundproofing screens, if necessary.

Protection of electrical and mechanical components

The vehicle is equipped with numerous electronic circuits: alternator, regulator, flasher units, speed limiter, ABS, etc.

Before any operation involving electric arc welding, make an earth connection by disconnecting the two negative (-) and positive (+) cables from the battery (starting with the earth cable) and connecting them to the frame earth. If the vehicle is equipped with a master switch, this should be kept engaged (circuit closed). Place the earthing clamp as near as possible to the point of welding, but never on rotating parts (prop shaft, fan hub, etc.) or on a subassembly having moving parts (i.e. air compressor, turbocharger, etc.).

Nearby plastic pipes and electrical cables, springs and air-suspension bags are to be protected or removed. This also applies when grinding or drilling.

When reconnecting the battery, observe the polarities, commencing with the positive (+) terminal. Reversal of polarity may cause irreparable damage to electronic components.

2.1.2 Preparation of parts for welding



Clean the parts, primarily at the location of the weld and at the connection of the earthing wire. This allows:

- free and regular electrical current flow (regularity of weld bead),
- avoidance of inclusion of impurities in the molten metal (weld quality),
- avoidance of spatter and emission of smoke (safety for the welder).

For conversions (extensions, reductions and reinforcement gussets), we recommend arc welding with electrode type B. When semi-automatic welding is used, the bodybuilder must be able to guarantee weld quality.


Preparation of specific edges on chassis frames

- A - With electric arc welding
- B - With weld under gas shield (MAG or MIG)
- J - 1 min., 2 max.

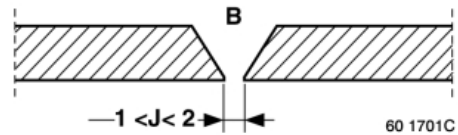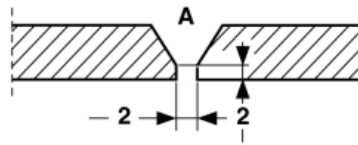

Method of welding to be specifically used on chassis frames

- Preparation of the edges at 45°
- Tack
- Position slave butts
- Weld on one single side
- Weld on second side
- Welds ground flush on both sides

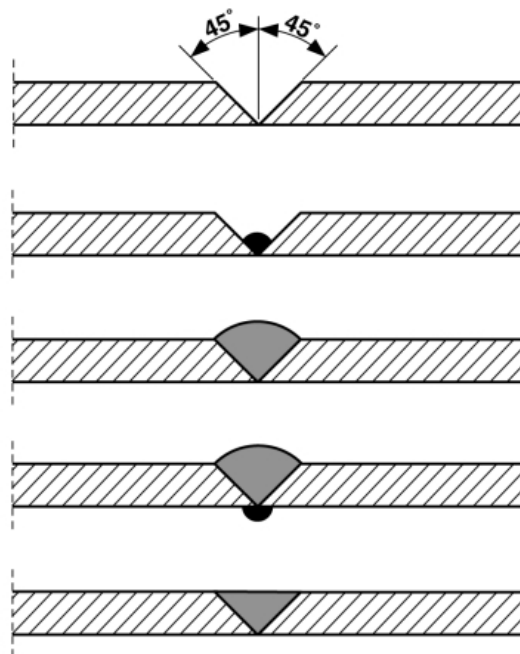


60 1702B

Slave butts

The object of slave butts is to avoid the starting of cracks at the outside edges of the weld joint. Before final welding align butts with plates of the same thickness as the plates to be joined, holding them in position using quick action clamping devices.

They must not under any circumstances be held in position by weld tacks on the plates to be joined.

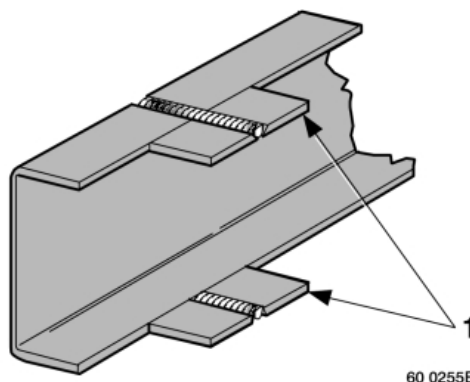

60 0255B

2.1.3 Welding process

Static or rotary arc welding set

- dc welding set recommended
- coated welding rods

Welding rod usage table

Electrode diameter (in mm)	2.5	3.15 (*)	4 (*)	5
Average current (in amperes)	75 to 90	95 to 110	120 to 140	150 to 175

(*) Most frequently used diameters

Coated welding rods recommended: standard NF EN 499 (January 1995)

EN 499 E 38 2 1 NI B for class: A - B - C

EN 499 E 46 2 1 NI B for class: D - E

EN 499 E 50 2 1 NI B for class: F

E 515/5 B 26 BH for steels class F

If steels are mixed, take the best performing steel electrode category.

Standard **NF EN 499** replaces standard NF A 81-309.

Relevant standards

MIG or MAG semi-automatic welding set

MIG : - Metal Inert Gas

- for welding with electrode wire under inert gas shield (Argon, Helium...)

MAG : - Metal Active Gas

- for welding with electrode wire under active gas shield (CO₂, Argon + CO₂, Argon + CO₂ + O₂).
- used for welding mild steels.

Wire diameter (in mm)	Thickness to be welded (in mm)
0.8	up to 2 mm
1.0	from to 8 mm

2.1.4 Equivalent steel grades

The four classes relate to hot rolled steel plate with a high yield strength for cold forming, as currently set out in the French and European Standard NF EN 10149-2, which has replaced French Standard NF A 36.231. High yield strength sheet steel (dispersed carbon)

RENAULT TRUCKS Specification 31.09-402				
	Class C	Class D	Class E	Class F
UTS in N/mm ² min.	450	500	540	610
YP at 0.2% in N/mm ² min.	355	445	490	560
E % min.	23	20	18	15
KCV at - 20°C J/cm ² min., longitudinal	35	35	35	37,5
Bending, transversal	1 e	1 e	1.5 e	1.5 e
Grain size	n° 5	–	–	–
= European equivalent French standards	S 355 MC NF EN 10149.2	S 420 MC NF EN 10149.2	S 500 MC NF EN 10149.2	S 550 MC NF EN 10149.2
= German standards equivalent DIN	QStE 380TM SEW 092	QStE 420TM SEW 092	QStE 500TM SEW 092	QStE 550TM SEW 092
= British standards equivalent BS	43 F 35 BS 1449	46 F 40 BS 1449		
= American standards equivalent ASTM	Gr. 50 050 YKL ASTM 607–50	Gr. 60 060 YKL ASTM 607–55	Gr. 70	Gr. 80
= EURONÖRM standards equivalent 149-80	FeE355 TM	FeE420 TM	FeE490 TM	Fe E560 TM

2.2 Reinforcement, extension, reduction of sidemembers

2.2.1 Bans

It is absolutely forbidden to weld onto sidemembers, except for reinforcement, extension, reduction, and the following instructions must be observed :

- Do not weld on the edges of flanges.
- Do not weld in sidemember bending radii.
- In the case of flat irons: no directly opposing welds on the two faces of the same web - only "alternate" or "plug" welds are authorized.
- No welds which are less than 15 mm from the edge of a hole.

Insofar as possible, we advise you to have modifications of the lengths of sidemembers carried out by specialists.

- The general rules for welding in the paragraph entitled "General Principles of Welding" must be strictly followed.

Only conversions (extensions or reductions) rendering the modified vehicle completely in conformity with a type approved chassis are permitted without additional testing, with certification from the vehicle manufacturer.

2.2.2 Reinforcement of sidemembers


- For inner reinforcements and chassis flange stiffeners, the thickness should be the same as the thickness of the sidemember.

NOTE

The steel grade must be identical to that used for the sidemember.

Examples of reinforcements

Sidemember upper and lower stiffeners

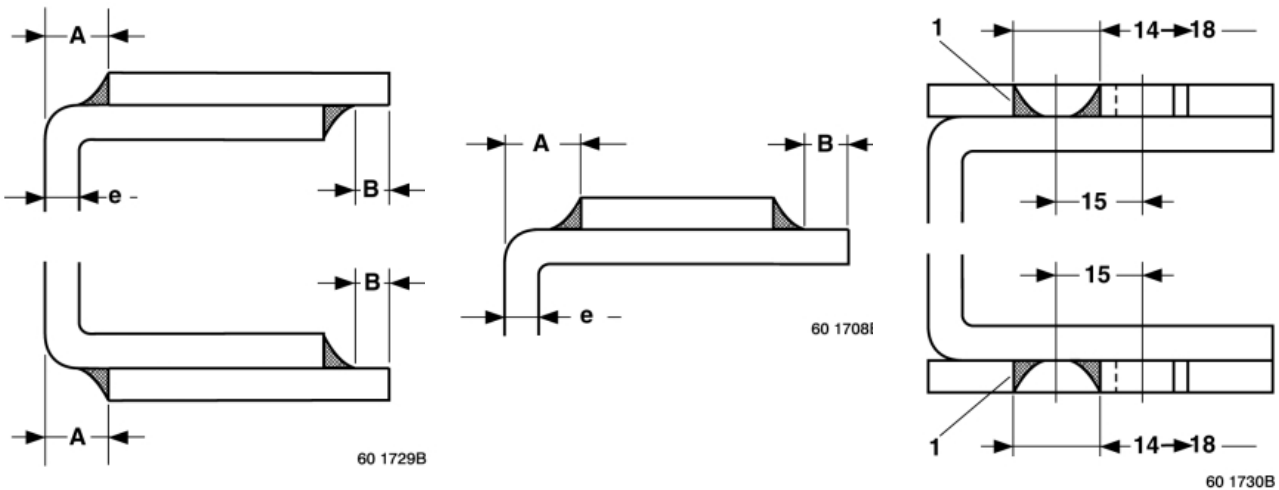

A: Offset of the stiffener in relation to the external face of the sidemember


B: Offset of the stiffener in relation to the edge of the sidemember

e: Thickness of the sidemember

1: Welds through round or slotted holes, staggered

Thickness of the sidemember	A	B
$e < 6 \text{ mm}$	10 mm	15 mm
$e \geq 6 \text{ mm}$	15 mm	15 mm


Upper and lower stiffeners using angle-irons :

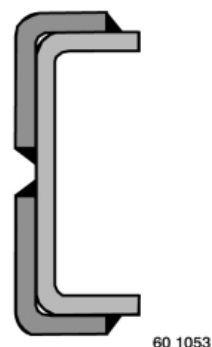

Methods of joining

In the case of stiffeners made from flats (on the upper flange or under the lower flange of sidemembers), we recommend attachment by:


Intermittent beads by electric welding: as guidance, 80 mm beads spaced 120 mm apart and staggered.

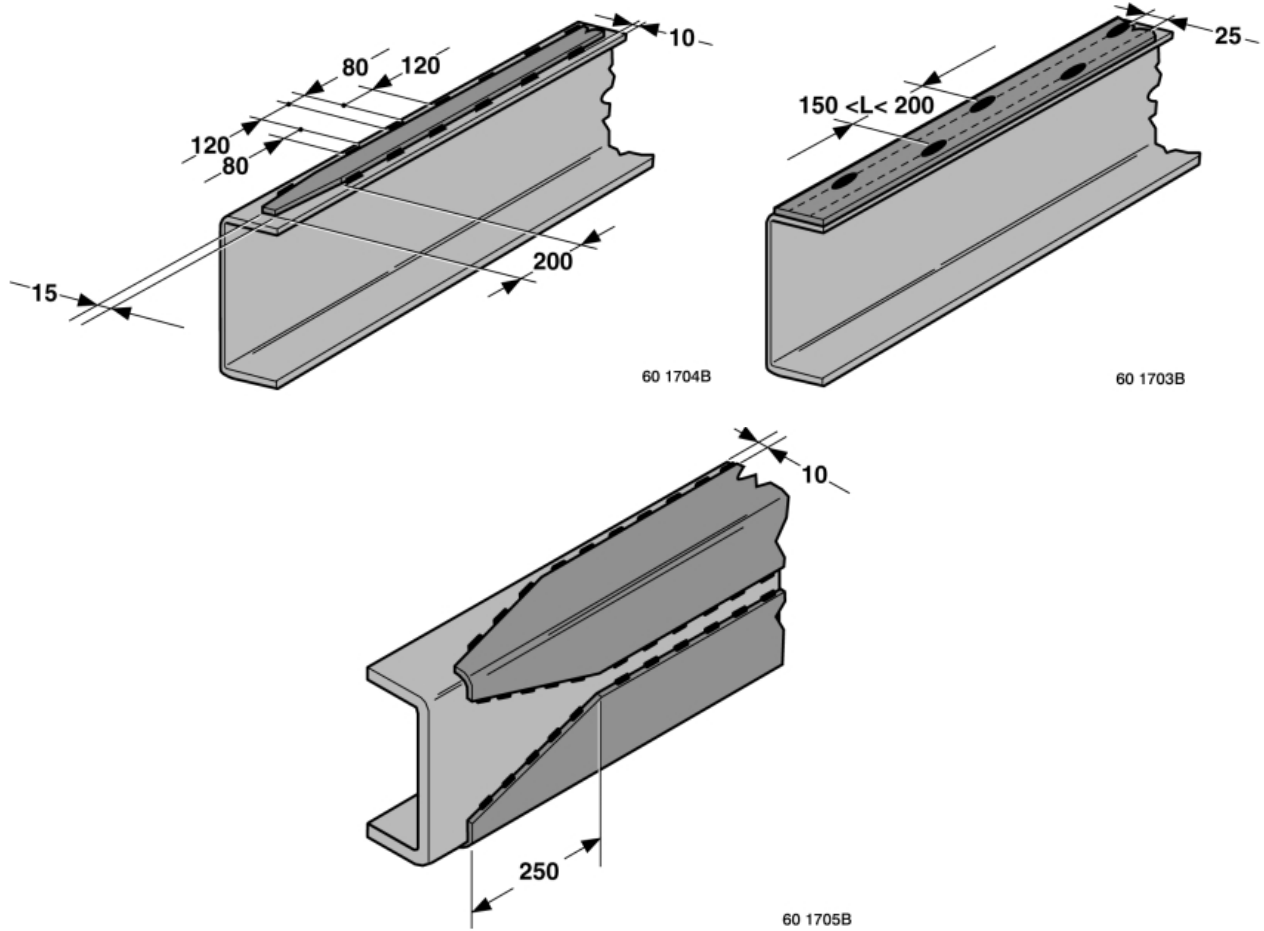

“PLUG” welds: as guidance, round holes dia. 14 to 18 mm or slotted (1) holes dia. 14 x 50 mm to 18 x 50 mm at a “pitch” of 200 mm min. to 300 mm max., staggered, with good quality weld.

WARNING

No vertical welds on sidemember webs. No transversal welds on sidemember flanges.

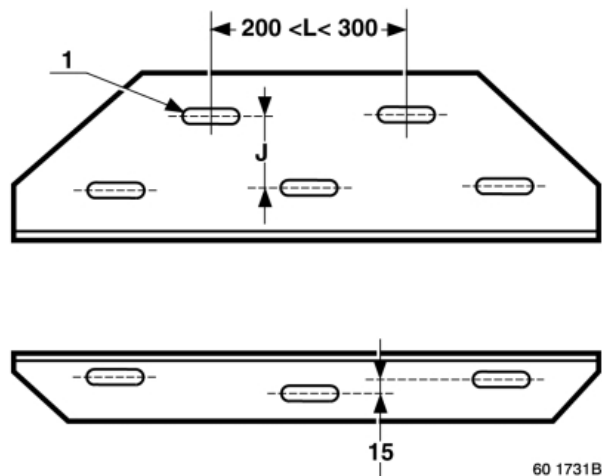


Extension, shortening of sidemembers in the wheelbase

Key


- A – piece of sidemember added,
- B – sidemember,
- C – reconstituted stiffener,
- D – welds projecting beyond flanged edge with butt-ends then longitudinal grinding (elimination of sharp edges),
- e – thickness of the sidemember,
- F – angle-iron of thickness (E) max.: $E \leq (e - 1 \text{ mm})$,
- h – height of the sidemember,
- J – weld penetration clearance (about 2 mm),
- L – max. length of extension,
- X – max. length of projection of the stiffener measured on the edge of the flange (extension),
- Y – min. length of support of the stiffener measured on the edge of the flange of the sidemember (extension),
- Z – min. length of support of the stiffener measured on the edge of the flange (stiffener without extension).

Extension of the sidemembers in the wheelbase



Sidemember without stiffener flat on the flange

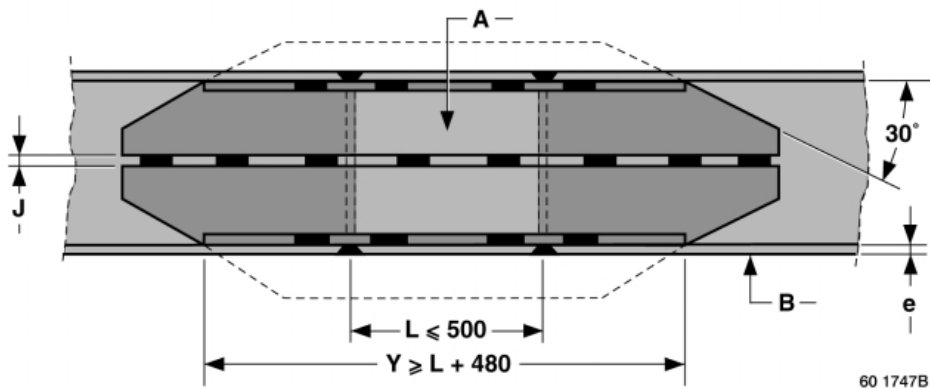

Sidemember with stiffener flat on the flange

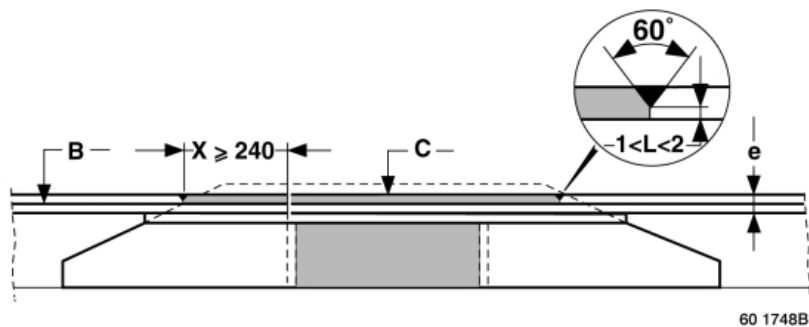

Shortening of sidemembers in the wheelbase

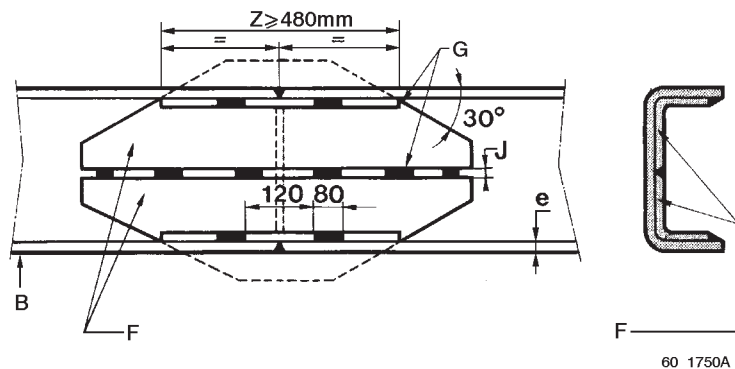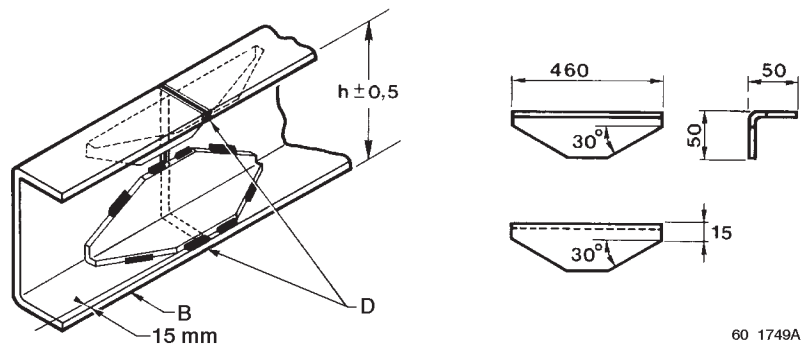

2.2.3 Modification of the rear overhang

If the bodywork or the equipment fitted do not alter the weight and dimensional characteristics of the chassis entered on the description sheet, the vehicle can be submitted to the Type Approval Department without any action being necessary on the part of RENAULT TRUCKS (within the permitted limits in force).

- Welding stiffeners are required for drawbar rigids or if the extension is longer than 400 mm for a solo vehicle. Examples: Drawbar rigid; tail lift; crane at the rear of the chassis; tipper; etc.
- Extension of the rear overhang will also be required when the rear extremities of the bodywork project beyond the maximum authorized value which is indicated on the bodybuilder's drawing and calculation sheets relating to the vehicle.

Attachment of crossmembers

Crossmembers should be attached with nut and bolt hardware of the 10.9 S2S protected class as per standard 01714002 and distributed by RENAULT TRUCKS

Towing crossmembers

Please refer to the chapter on "Drawbar cross-members" in the section entitled "RENAULT KERAX special bodybuilding features."

Intermediate crossmembers

In the case of extension of the wheelbase or the rear overhang, it is essential to add crossmembers, so as not to weaken the rigidity of the frame.

Observe the following instructions:

- Between two crossmembers, the spacing must be no greater than the original spacing.
- If the extension to the overhang is longer than 500 mm, the rear crossmember must be moved and an intermediate crossmember fitted which is identical to the others.

2.3 Attachment of bodywork

The bodywork must be correctly attached so that both the static and dynamic stresses are freely transmitted without causing excessive local strain, which could prejudice the reliability of the chassis frame or affect the road behaviour of the vehicle.

The following rules apply to the fastening of various standard bodies fitted to our chassis cabs, such as platforms, vans, tippers, and tankers. For special cases, contact the RENAULT TRUCKS Product Applications Department.

For body design (i.e. length, load distribution, location of accessories on sidemembers, etc.) refer to the CD-ROM "Information for Bodybuilders" or the 1:20 scale bodywork drawing which we supply upon simple request.

Fastenings should always be tightened progressively and alternately.

The shape of sub-frames or underbodies should always be tapered towards the front (i.e. at the back of the cab), so as to avoid sudden variations in inertia (refer to chapter entitled "Finishing of sub-frame behind the cab").

2.3.1 Bans

- The use, drilling or welding of spring hangers.
- Any modification of: the chassis, the driveline, or the suspension.
- Fastening of sub-frames to our sidemembers by welding.
- The drilling of stiffener gussets.
- The notching of sidemembers, gussets or crossmembers.
- With the exception of special cases described in this document, the use or modification of our nut and bolt hardware and our riveting for the attachment of a body or sub-frame.
- The attachment of sub-frames by U-bolts.

All bodies attached by clamps and brackets must mandatorily have 1 inertia stop to the rear of each sidemember to stop the body from moving in the event of fierce braking, as well as 4 body guides 2 at the front, 2 at the rear).

For bolted fastenings, comply with the following instructions:

- By preference use brackets attached to the chassis.
- Use the fixing bolt holes dia. 11, 13 or 15 mm depending on the particular vehicle, spread out along the length of the sidemembers of the chassis frame.
- Take good note of the attachment principles, set out in the chapter on the "Attachment of sub-frames".

2.3.2 Protection against exhaust heat radiation


Depending on the features of your bodywork or equipment, the fitting of a heat shield on the original protec-

2.4 Sub-frame


In order to attach bodywork to the frame of the chassis, you should allow for the fitting of a sub-frame whose module of inertia (I/V) is determined in accordance with the vehicle series in question (refer to the section entitled "RENAULT KERAX special bodybuilding features").

In order to ensure better distribution of the stresses along the sidemembers, you must allow for a cut-out as far forward as possible under the cab.


2.4.1 Finishing of sub-frames behind the cab

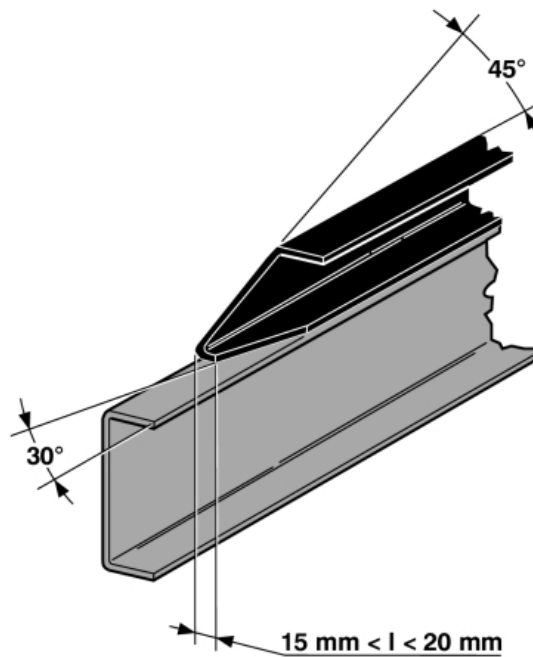

60 2538A

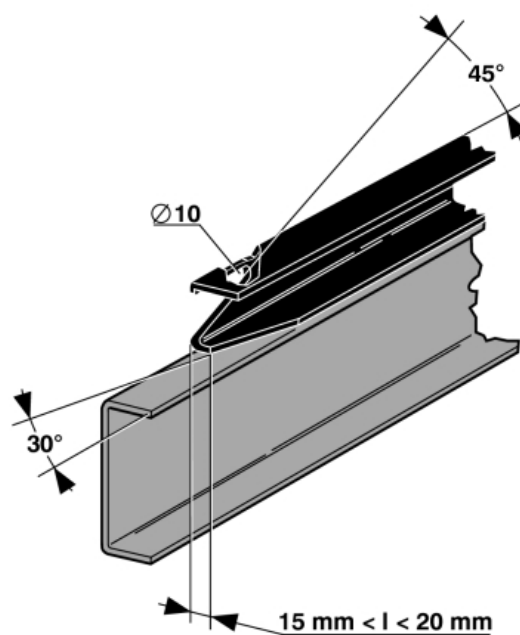


60 2539A

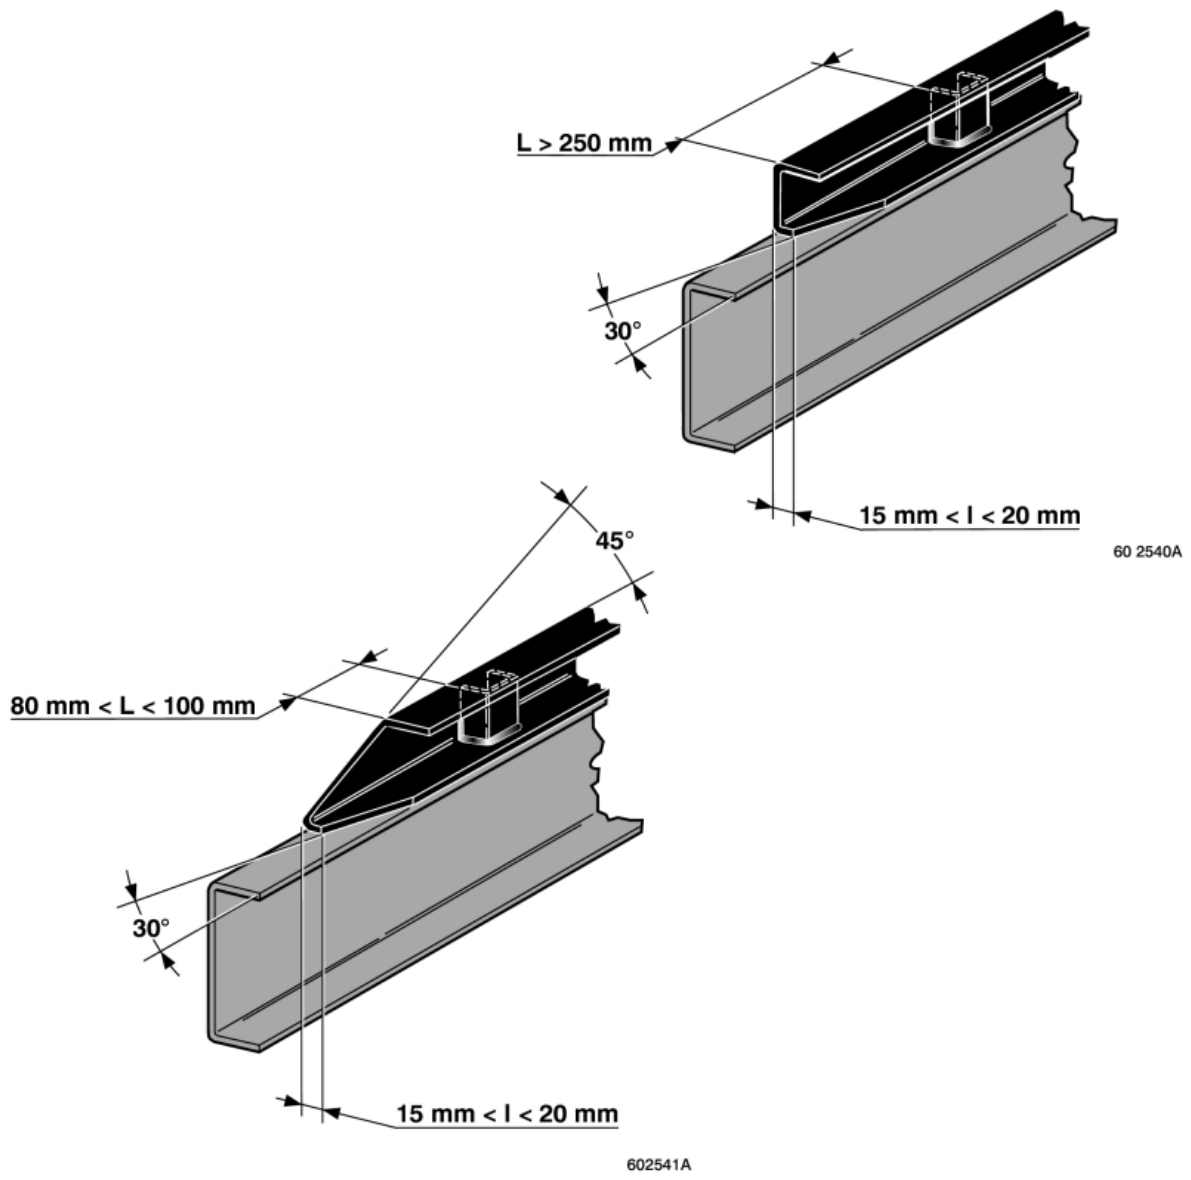

When the sub-frame is constructed of square or rectangular tube section, we also suggest the cut-out shown below.

A : Blanking plate thickness 1.5 mm

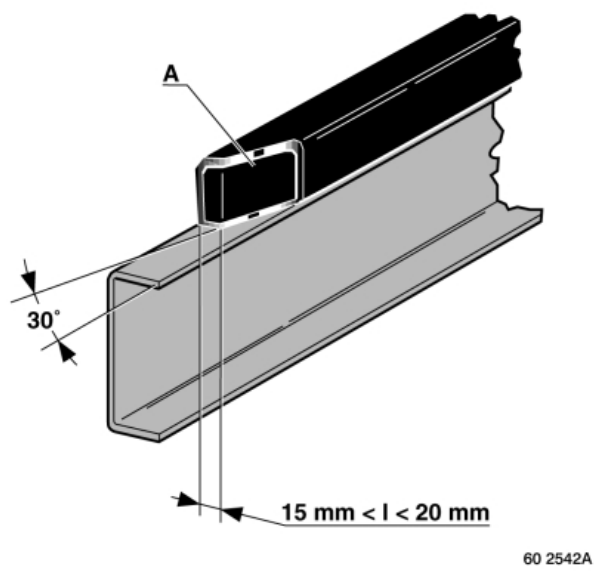

2.5 Nuts and bolts, tightening torques for parts in steel and cast iron

The torques indicated in the table are the nominal torques (i.e. average value calculated on the basis of the minimum and maximum torque).

Class III is the class covering precision tightening ($\pm 20\%$ of nominal torque) in accordance with Standard 01504002 (coefficient of friction 0.15 ± 003).

The tightening torques are given for nut and bolt hardware that is dry and coated with Dacromet.

Description	Characteristics	Class of Steel	Part Nos.	Tightening torque
Screw	H 10 x 125 L 30	10.9	50 03 101 460	60 N.m
	H 10 x 125 L 50	10.9	50 03 101 148	60 N.m
	H 12 x 125 L 40	10.9	50 03 101 151	110 N.m
	H 12 x 125 L 45	10.9	50 03 101 749	110 N.m
	H 12 x 125 L 50	10.9	77 03 101 679	110 N.m
	H 12 x 125 L 60	10.9	50 03 101 153	110 N.m
	H 14 x 150 x 40	10.9	50 03 101 161	170 N.m
	H 14 x 150 x 50	10.9	50 03 101 162	170 N.m
	H 14 x 150 x 60	10.9	50 03 101 163	170 N.m
	H 14 x 150 x 90	10.9	50 03 101 169	170 N.m
	H 14 x 150 x 100	10.9	50 03 101 660	170 N.m
	H 14 x 150 x 110	10.9	50 03 101 171	170 N.m
	H14 x 150 x 120	10.9	50 03 101 172	170 N.m
	H14 x 150 x 130	10.9	50 03 101 887	170 N.m
	H14 x 150 x 140	10.9	50 03 101 173	170 N.m
	H 16 x 150 x 50	10.9	50 03 101 103	220 N.m
Collar screw	H 10 x 125 L 30	10.9	50 03 002 048	60 N.m
	H 12 x 125 L 40	10.9	50 03 002 049	110 N.m


Description	Characteristics	Part Nos.
Cone washer	10 x 20 x 2.6	50 03 058 081
	10 x 24 x 2.8	50 03 058 071
	10 x 27 x 2.8	50 03 058 076
	12 x 30 x 3.2	50 03 058 075
	14 x 28 x 3	50 03 058 069
	16 x 32 x 3.4	50 03 058 034
	16 x 39 x 3.6	50 03 058 070
Flat washer	10 x 22 x 3	50 03 053 453
	10 x 27 x 3	50 03 053 455
	10 x 24 x 2.5	50 03 053 026
	12 x 28 x 5	50 10 054 526
	12 x 32 x 2.5	50 03 053 441
Cone washer "BELLEVILLE" type	14 x 30 x 5	50 03 053 511
	14.5 x 35 x 1.8	50 10 377 934

Description	Characteristics	Class of Steel	Part Nos.	Tightening torque
Nut	10 x 125	10	50 03 032 156	60 N.m
	12 x 125	10	50 03 032 157	110 N.m
	14 x 150	10	50 03 032 159	170 N.m
	16 x 150	10	50 03 032 236	220 N.m
Locknut DRH (flanged)	10 x 125	10	50 03 034 246	60 N.m
	12 x 125	10	50 03 034 248	110 N.m
	14 x 150	10	50 03 034 250	170 N.m

2.6 Addition of equipment to the bodywork

The attachment of equipment to the bodywork must be done with fluidtight crimping nuts.

Tooling and crimping nuts

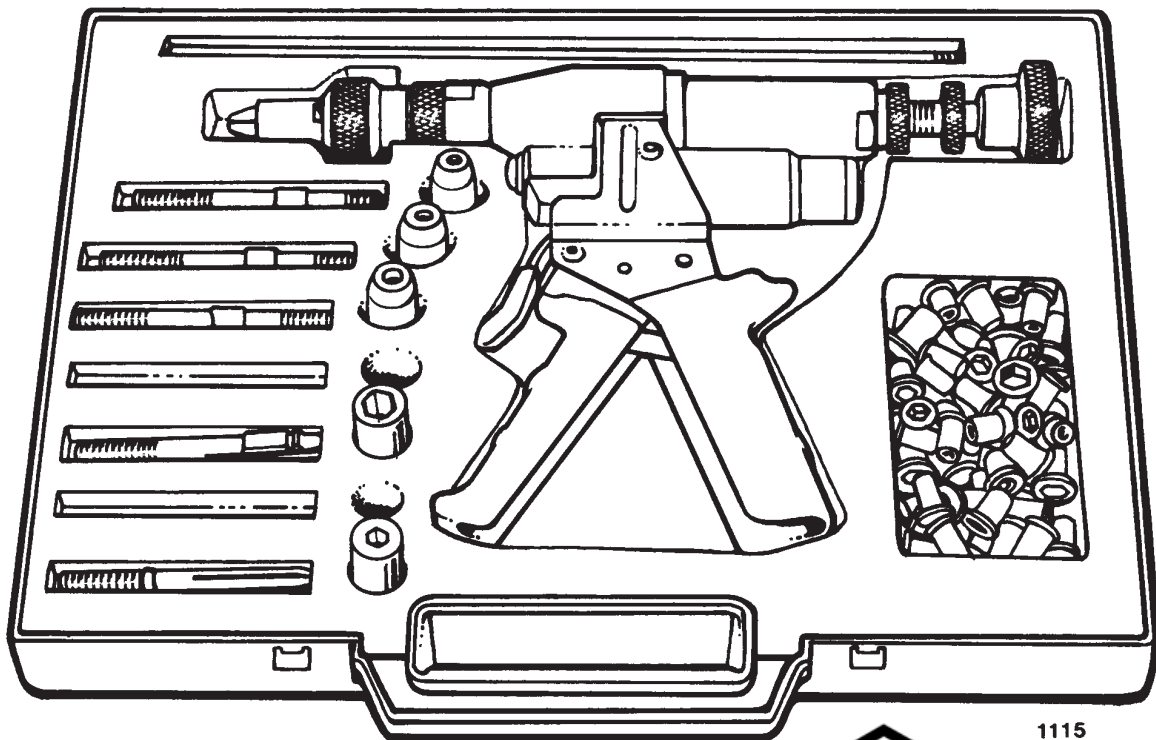

M6 crimp nut - hexagonal barrel

Part N° : 50 03 043 050



1115

60 1546

Method :


- Drill a dia. 9.2 mm diameter hole (refer to chapter entitled "Drilling of bodywork members for the fitting of accessories").
- Use the OPEX tooling from OTALU S.A. (RENAULT TRUCKS approval N° 8162).
- Use the OPEX tooling from OTALU S.A.
- Punch out the hexagonal.
- Insert the nut for crimping.

Information:

- Tightening torque max. 10 Nm.
- Length of barrel projecting under bracket after crimping : 17 mm.

M8 crimp nut - hexagonal barrel

Part N°: 50 03 043 052

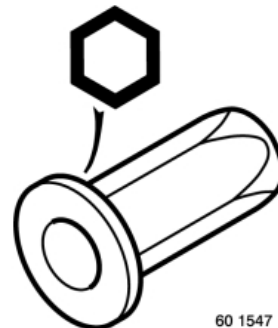

60 1547

Method:

- Drill a dia. 11.2 mm diameter hole (refer to chapter entitled "Drilling of bodywork members for the fitting of accessories").
- Use the OPEX tooling from OTALU S.A.
- Punch out the hexagonal.
- Insert the nut for crimping.

Information:

- Tightening torque max. 24 Nm.
- Length of barrel projecting under bracket after crimping : 21 mm.

2.7 Rear run-under guard

RENAULT TRUCKS obtains approval for its equipment to cover the requirements of its range. Their attachment being by means of bolts, this allows them to be moved down along the sidemembers to suit such modifications that the chassis may undergo. This must be observed, along with the maintenance of the attachment method detailed on the 1:20 scale bodywork drawing and compliance with the dimensional requirements under the regulations.

A vehicle which is not equipped at the time of delivery can be fitted afterwards, following a conversion making the fitting compulsory, using items which can be supplied from the Parts Stores of our dealers.

Changing of position of items of equipment

Modifications of a RENAULT TRUCKS vehicle for the fitting of bodywork and equipment requires technical approval to be obtained from the Product Applications Department of RENAULT TRUCKS

3. SPECIFIC EQUIPMENT FEATURES

3.1 Running the engine when vehicle stationary

Under the conditions of running an engine for a long period under load, it is vital to fit an additional cooler unit in order to keep the temperature of the engine at a normal level (water temperature approx. 80° C).

The prolonged use of the engine under these conditions can cause malfunctions which could adversely affect the life of the engine.

3.2 Mounting of power take-offs and flanged pumps

RENAULT TRUCKS power take-offs (PTOs) and their adapter kits should be ordered from the RENAULT TRUCKS Spare Parts Department. In order to carry out the fitting, refer to the specific information circulars that are available from the Product Applications Department.

Bearing in mind the weight and the large overhang required for certain PTOs having flanged pumps, the rear of these units should be supported by a suitable bracket attached to the rear of the gearbox.

Comply with the standard NF ISO 7653.

IMPORTANT

It is compulsory at the time of fitting a power take-off to ensure that there is a certain amount of play in the setting adjustment, so as to allow an ideal backlash of 0.15 to 0.25 mm then to fit a gasket or apply paste in order to achieve a good seal and also to top-up the oil level. (Refer to the vehicle maintenance handbook). Refer to our Product Information Sheet and 1:20 scale bodywork drawing on "power take-offs", which can be requested from our Product Applications Department.

3.3 Front power take-offs (crankshaft nose)

RENAULT TRUCKS assembly pre-arrangement

For belt drive units, pulleys with extra grooves fitted to the engine may be available.

Consult the Product Applications Department to obtain the relevant information and technical approval for the assembly.

3.4 Front and rear power take-offs

3.4.1 Propeller shaft alignment


In order to achieve satisfactory propeller shaft alignment, several minimum basic **criteria** have to be observed.

Angularity criteria (or: equivalent angle of inclination β_E permissible for all articulations).

This angle β_E must comply with the following condition:

$$\beta_E = \sqrt{|\beta_a^2 \pm \beta_b^2 \pm \beta_c^2 \pm \dots|}$$

$$\beta_E \leq 3^\circ$$

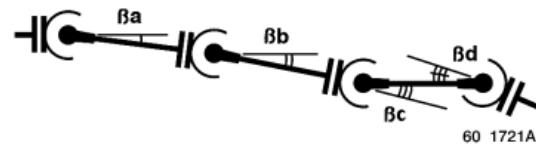


Rule for sign β :

Yoke N° 1 is to be considered as the reference yoke.

$\beta > 0$ when the leading yokes are parallel to the first leading yoke (Ma).

Example 1:

$$\beta_E = \sqrt{|\beta_a^2 + \beta_b^2 + \beta_c^2 - \beta_d^2|}$$

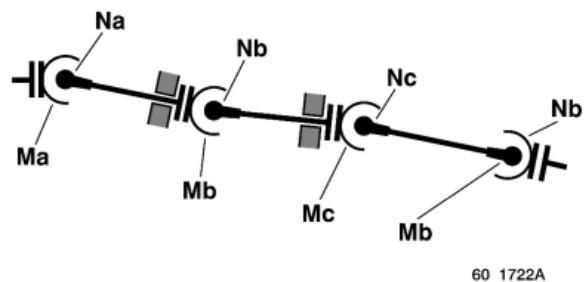


M - Leading yokes

N - Trailing yokes

$\beta < 0$ when the leading yokes are perpendicular to the first leading yoke (Ma).

Example 2:

$$\beta_E = \sqrt{|\beta_a^2 + \beta_b^2 - \beta_c^2 + \beta_d^2|}$$

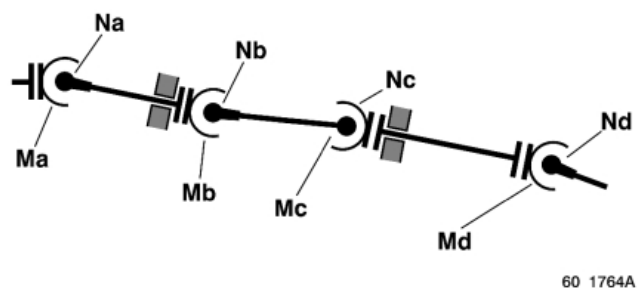

Angular acceleration criteria θ_1

Calculated criterion for a theoretical maximum speed of rotation (N).

$$\theta_1 = \left(\beta_E \times \frac{\pi}{180} \right)^2 \times \left(\frac{\pi \times N}{30} \right)^2$$
$$\theta_1 \leq 270$$

θ_1 : criterion of acceleration in rd/s^2
N: max. speed of rotation in rpm

NOTE

This value is calculated without dynamic amplification of the prop shaft tubes and bearings.

Measured criteria θ_2 :

The angular acceleration or torsional vibrations criteria value θ_2 must not exceed 1500 rd/s^2 at the PTO output or at any point whatsoever of the driveline for a downstream inertia of I such that $I \leq 0.2 \text{ kg/m}^2$.

$$\theta_2 \leq 1500 \frac{\text{rd}}{\text{s}^2}$$


NOTE

This limit value θ_2 takes into account possible dynamic amplification of the driveline.

Transversal stress criteria for prop shaft tubes and bearings.

Example β_1 and β_2 maximum not to be exceeded.

- $\beta_a < 2^\circ$ for a prop shaft with bearing.
- $\beta_b < 7^\circ$ for a prop shaft with sliding yoke.

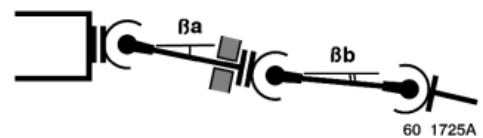

NOTE


If this 7° value has to be exceeded for space or clearance reasons, the vehicle manufacturer must be consulted.

3.4.2 Propeller shaft balancing

Permissible imbalance value (B):

$$B \leq 3 \frac{g \times cm}{kg} \text{ per balancing plane}$$

- 1 - 1/2 prop shaft
- 2 - prop shaft

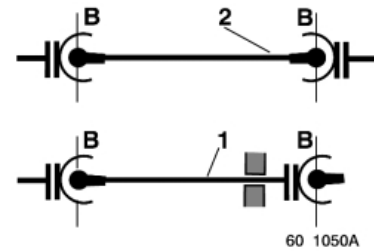

NOTE

$$g = m = 10 \text{ m/s}^2$$


3.4.3 Maximum permissible length of a prop shaft as a function of the rotating speed (L, L1 or L2)

L: Distance between centres of articulation of a prop shaft.

L2: Distance between centres of articulation welds of a half prop shaft.

L1: Distance between centres of articulations of a half prop shaft.

$$L1 = L2$$

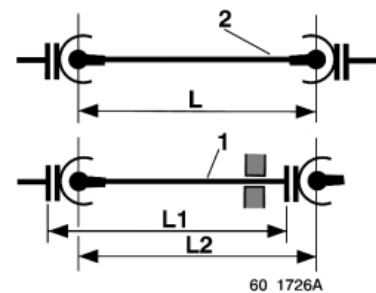

$$L = \sqrt{\frac{K}{Nt \times 1,2}} \quad \text{with} \quad K = 0,75 \times 1,22 \times 10^5 \times \sqrt{D^2 + d^2}$$

Nt = prop shaft maximum operating speed

1.2 = safety coefficient

D = prop shaft large diameter

d = prop shaft small diameter

3.5 Vehicle driveline (powertrain)

Any modification to the driveline is forbidden. For special cases, agreement must be obtained from the RENAULT TRUCKS Product Applications Department.

Any propeller shaft modifications must only be carried out in conformity with the requirements of paragraphs 3.4.2 and 3.4.3.

3.6 Mounting of handling cranes

The installer of the crane is responsible with regard to compliance with the regulations, and also for the stability of the vehicle. The recommendations of RENAULT TRUCKS are only concerned with the attachment of the equipment.

3.6.1 Mounting on the sub-frame

The mounting of a crane on the chassis behind the cab or in the rear overhang requires the fitting of a specific sub-frame.

The sub-frame module is defined in the graph of inertia in accordance with the lifting torque only for a crane mounted behind the cab and on rigid or drawbar rigid vehicles (refer to the next page).

For all mountings of cranes in the rear overhang, off-limits and on tractors, consult the RENAULT TRUCKS Product Applications Department.

The sub-frame must be in one single piece, starting from the rear of the cab, and extending as far back as the rear tip of the overhang. The front end must be finished in a single or double bevel (refer to the chapter 2.4.1 entitled "Finishing of the sub-frame behind the cab").


Should the crane be mounted in conjunction with another item of mobile equipment, one single sub-frame shall be designed in accordance with the item of equipment that places the most strain on the sidemembers.

3.6.2 Graph of the moment of inertia of the sub-frame as a function of the lifting torque

Example:

A chassis with sidemembers 252 mm long, fitted with a crane having a lifting capacity of 10 tonnes per metre. The chassis requires a sub-frame built of size 160 U-section beams (— direction of reading). The U-section can be replaced by any other steel section offering equivalent total inertia.

Height of sidemember

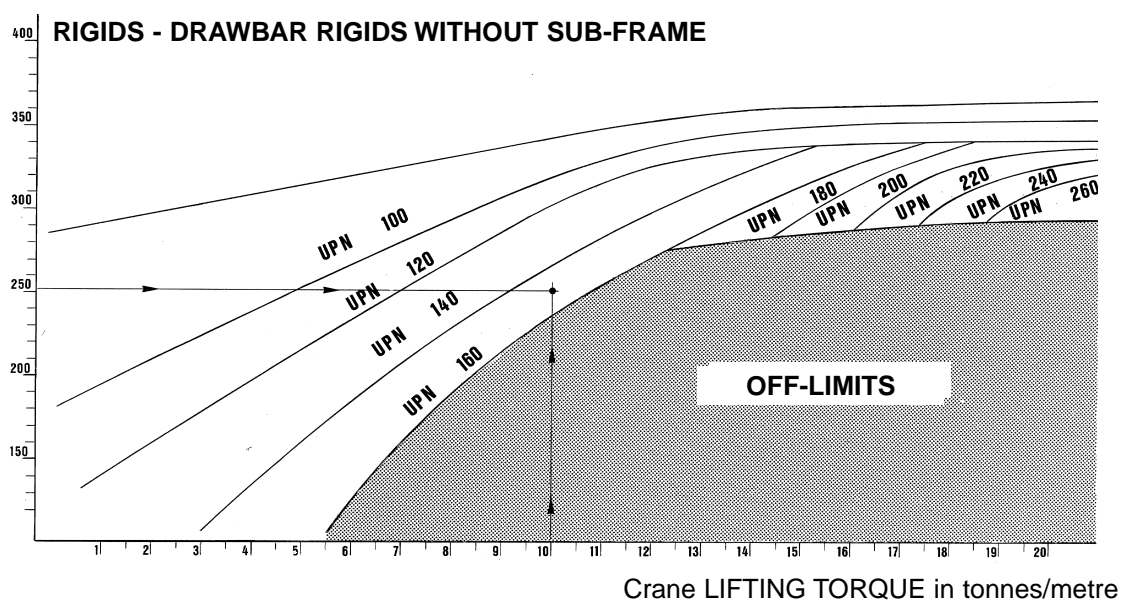

The U-section beams (UPN) can be replaced by any other steel section offering equivalent total inertia (I/V).

UPN 100 : I/V = 41200 mm ³	UPN 160 : I/V = 116000 mm ³	UPN 220 : I/V = 245000 mm ³
UPN 120 : I/V = 60700 mm ³	UPN 180 : I/V = 150000 mm ³	UPN 240 : I/V = 300000 mm ³
UPN 140 : I/V = 86400 mm ³	UPN 200 : I/V = 191000 mm ³	UPN 260 : I/V = 371000 mm ³

WARNING

Before undertaking the mounting of a crane on a vehicle, it is essential to make calculations to check the load distribution, and to determine the new maximum body length of the vehicle, whilst complying with:

- The plated gross vehicle weight (GVW).
- The maximum plated axle loads.
- The maximum rear overhang indicated in the Type Approval Department's descriptive sheet and the body-work diagram.

Should such limits be exceeded and in all cases where the work does not comply with the type approval department descriptive sheet, special authorization must be requested from the RENAULT TRUCKS Product Applications Department.

In addition to this, the bodybuilder will be responsible for commissioning the equipment.

3.6.3 Crane in the rear overhang


The installer of the crane is responsible with regard to compliance with the regulations, and also for the stability of the vehicle. The recommendations of RENAULT TRUCKS are only concerned with the attachment of the equipment.

The sub-frame required for such assemblies must be diagonally braced in accordance with the diagram below, using U-section beams with a module that is immediately lower than that recommended for the sub-frames.

Example: A sub-frame made of size 140 U-section beams shall be diagonally braced with size 120 U-section beams.

For a crane mounted in the rear overhang, in addition to the recommendations contained in the "WARNING" paragraph above, the following must also be observed:

- The minimum front axle load, for a vehicle fitted with a body and equipped with crane.

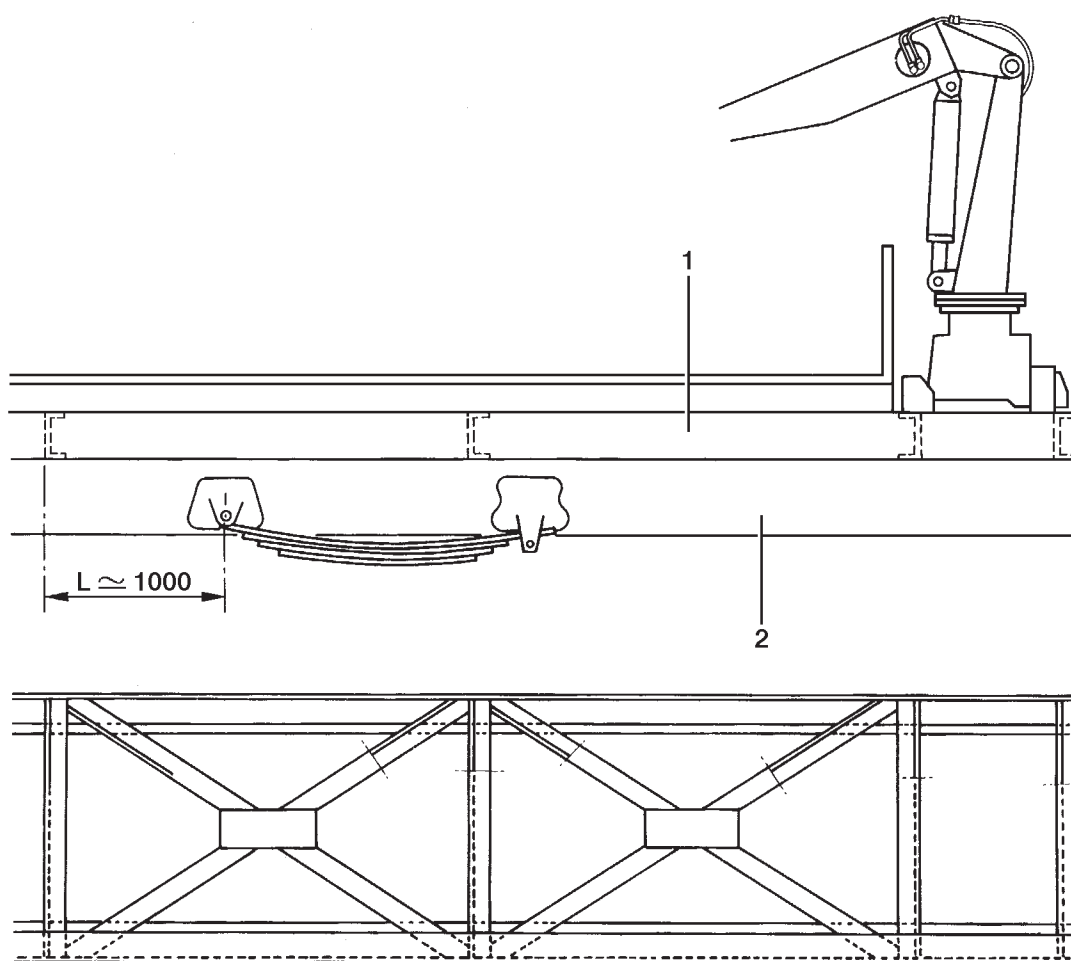

60 1720A

- 1 - Sub-frame
- 2 - Vehicle chassis

3.7 Tail lifts

3.7.1 Sub-frames

In the majority of cases, the mounting of a tail lift involves the fitting of a sub-frame to the vehicle. Such a sub-frame must reinforce the entire length of the chassis, with the bevelled front end being located as far forward as possible under the cab.

The module to be used for the sub-frame must be determined for tail lifts:

- without landing legs, for a capacity of 400 to 2,000 kg
- with landing legs, for a capacity of 1,000 to 2,000 kg
- by referring to the graph of inertia of the sub-frame depending on the load to be lifted, plus the information contained in the paragraph entitled "Special Recommendations", which also deals with tail lifts with a capacity of 1,500 kg without landing legs and tail lifts with a capacity of 2,000 kg with or without landing legs.

3.7.2 Attachment

The tail lift is to be fastened in position with bolted plates. In all cases, the design of the attachment should involve that of the body sub-frame as well. Nut and bolt hardware is to be of class 10.9 fine pitch with a diameter of 12 mm. The plates are to be fastened in position with at least 6 nuts and bolts on each side of the chassis and by 3 bolts and nuts or only by welding to the sub-frame.

If necessary, it may be necessary to wedge the tail lift beam or plate on the lower flange chassis sidemember, so as to avoid flexing of the sidemember.

NOTE

Do not weld the bolted plate to the chassis.

WARNING

In all cases of conversions for tail lifts, it is absolutely essential to calculate the new length of body, to ensure compliance with:

- The maximum plated gross vehicle weight (GVW).
- The maximum load on the front axle, with the vehicle fitted with its body and equipped with tail lift.
- The maximum plated loads on the front and rear axles.
- The maximum rear overhang indicated in the Type Approval Department's descriptive sheet and the body-work diagram.

If any loads are exceeded, you should consult the RENAULT TRUCKS Product Applications Department.

3.7.3 Electrical connections for a tail lift

Electrical connections should comply with the recommendations set out in the chapters entitled "Fitting of specific equipment" and "Electrical equipment".

3.7.4 Special recommendations for tail lifts from 1500 to 2000 kg without landing legs

1,500 kg tail lift

- This is only possible using our chassis with a GVW equal to or greater than 16 tonnes.

2,000 kg tail lift

- This is only possible using our chassis with a GVW equal to or greater than 19 tonnes.
- For off-limits and for vehicles with a lower capability, consult the RENAULT TRUCKS Product Applications Department.

Should the run-under guard have to be modified, care should be taken to ensure compliance with regulations in force.

3.7.5 Graph of the moment of inertia of the sub-frame as a function of the lifting torque

How to use the graph

- Draw a straight line joining the type of tail lift in question (lower part of the graph) to the mark corresponding with the height of the sidemember in mm.
- Draw a straight line from the value of the sidemember height.
- Read the value for the sub-frame at the intersection of these two lines.


NOTE

For the mounting of tail lifts on 6x2 vehicles, it is essential to consult the RENAULT TRUCKS Product Applications Department.

Example:

Take a chassis with 234 mm high sidemembers, equipped with a 750 kg tail lift.

It requires a sub-frame made of size 80 U-section beams.

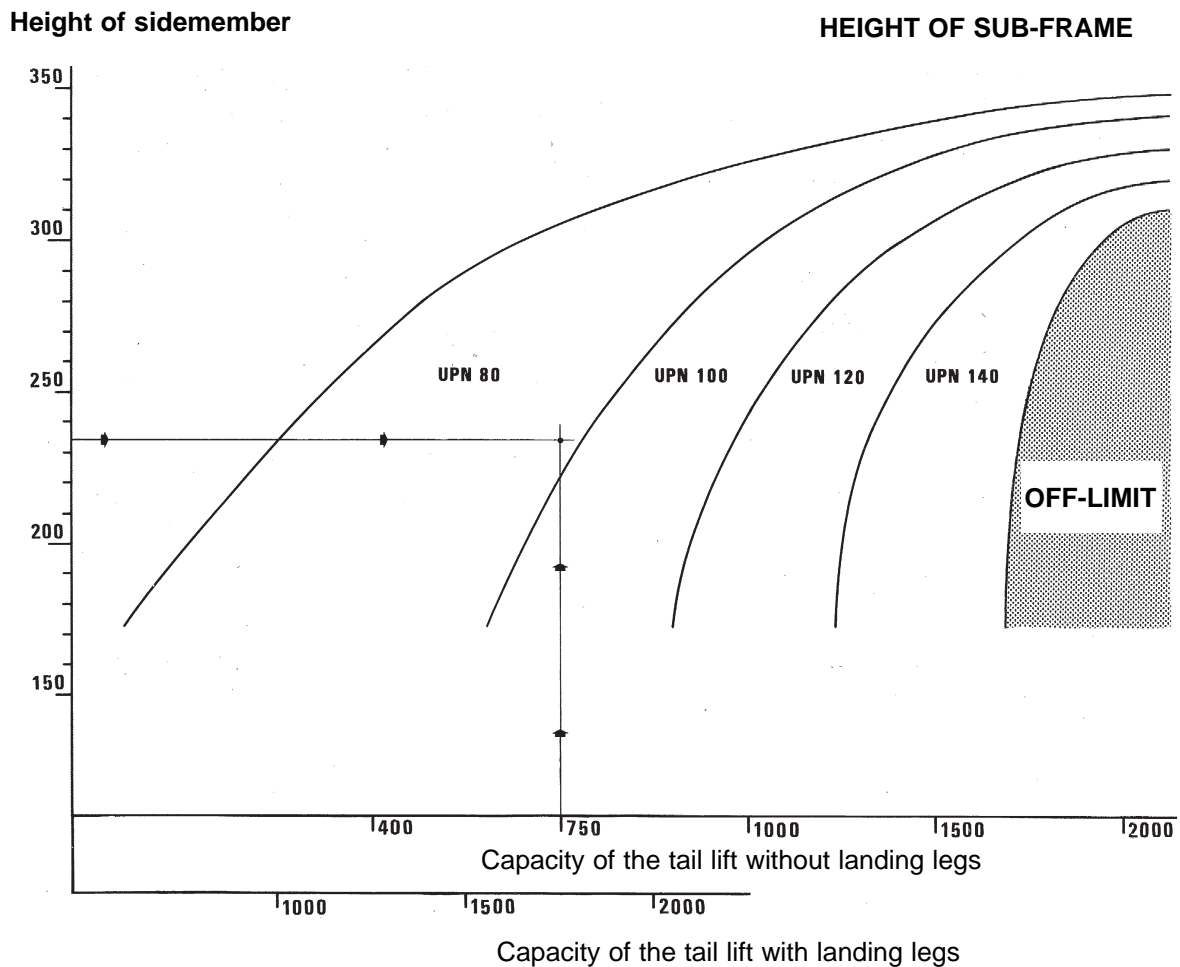

NOTE

The size 80 U-section beams can be replaced by any other section which gives an equivalent inertia (I/V).

UPN 80: $I/V = 26500 \text{ mm}^3$

UPN 120: $I/V = 60700 \text{ mm}^3$

UPN 100: $I/V = 41200 \text{ mm}^3$

UPN 140: $I/V = 86400 \text{ mm}^3$

3.8 Sub-frame box sections

The recommended box sections should:

- be constructed in sheet metal which is as thick or thicker than that used for the sub-frame.
- stretch over the entire rear of the sub-frame, starting gradually at least one metre in front of the foremost spring hanger of the rear spring.

WARNING

If the sub-frame is to be constructed in a material other than commercially available U-section beams, we approve all other sections on condition that the modulus of inertia of the "truck sidemember + sub-frame" section, measured at the centre-line of the rear axle, be at least equal to the modulus which we recommend (refer to the previous page).

It is forbidden to make any butt welds on the sub-frame in the area defined as follows:

- from the centre-line of the rear axle up to 500 mm to the rear of the rearmost spring hanger of the rear spring, in the case of 4x2 and 4x4 vehicles.
- from the centre-line of the middle axle up to 500 mm to the rear of the centre-line of the rear axle, in the case of all other vehicles.

3.9 Fitting of specific equipment (for example: refrigerator unit, tail lift)

3.9.1 Electrical connections

Refer to the recommendations for use (chapter on "Electrical equipment" in the General Section).

The power supply cable should be in one single piece, with a cross-section calculated for a max. rating of 5 Amps per mm². The power supply must be protected by a fuse and controlled by a specific master switch during fitting. It is compulsory for the cables to be connected to the battery terminals. The fuse and the master switch must be located as close to the battery connection as possible (in order to keep to a minimum the length of unprotected line).

The electric power and auxiliary wiring must compulsorily be independent from that of the vehicle network.

For this, you should contact the RENAULT TRUCKS Product Applications Department in order to obtain its permission.

In the case of conversion of an independent self-contained unit on the front end of the body, an access ladder and platform for maintenance purposes should be provided.

3.9.2 Installation of receivers or generators with a voltage of more than 24 V

Comply with the standards in force and with the safety regulations covering installations and safety of the person (decree dated 14/11/1988). The protective earth is to be made on the equipment, and never on the vehicle structure.

3.10 Tapping on the diesel fuel tank

It is forbidden to drill the tank for the installation of a tapping point.

3.11 Fifth wheels (baseplates and couplings)

Tractor chassis are normally supplied as original equipment with bolted angle-irons. In this case they allow for the longitudinal positioning of the baseplate for the fifth wheel on the chassis, in order to ensure good load distribution on the tractor axles.

The fifth wheel is located on these angle-irons by the use of a cross-member and/or a baseplate (in certain cases the baseplate is sufficient).

The fitting of the fifth wheel must allow for the manoeuvring of a swan-necked semi-trailer in accordance with the ISO Standard in force : ISO 015/1726 : Road vehicles – mechanical links between tractors and semi-trailers - interchangeability.

The bedplate and the baseplate must be independently mounted, with a minimum strength equal to that of the attachment for the fifth wheel.

Baseplates for each type of vehicle are available in several heights from the Spare Parts Department.

Refer to the Product Applications Department.

3.11.1 Mounting standards

Comply with the standard in force.

Kingpin 50 mm (2") dia.

The attachment of the fifth wheel to the chassis must be done using 12 nuts and bolts size M16, quality class 10.9.

Kingpin 90 mm (3.5") dia.


For details of the attachment of the fifth wheel, refer to the Product Applications Department or comply with the recommendations of the supplier.

These values apply equally for the attachment of the baseplate.


As far as swan-necked semi-trailers are concerned, which are not constructed in accordance with the ISO Standard in force, the attachment of the fifth wheel must take into account the instructions given above, whilst conforming with the capability of the tractor to manoeuvre, i.e. it must not come into contact with parts of the chassis, such as mudguards, rear lamps, registration plates, the back end of the chassis, the tyres, etc.

If the changing of position of the fifth wheel towards the front causes any interference of the mounts of the baseplate with those of a cross-member, you are obliged to refer to the Product Applications Department.

Drawing for drilling the baseplate for the attachment of the fifth wheel using 12 nuts and bolts dia. 16 mm (DIN Standard 74081)

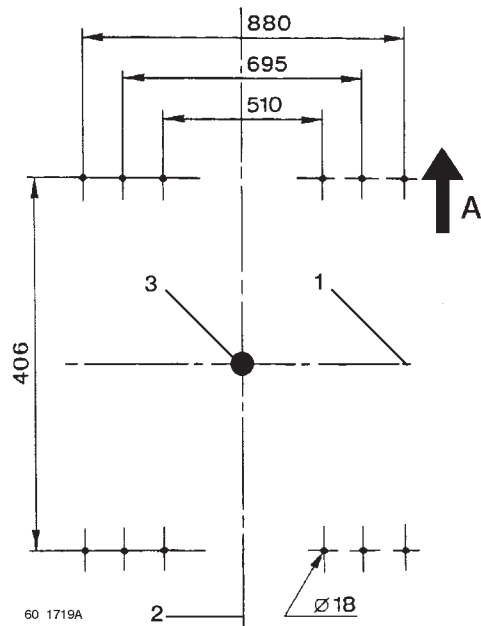

Drawing for drilling the baseplate for the attachment of the fifth wheel by 12 nuts and bolts dia. 16 mm with slotted holes (Standard NF R 41-171 dated October 1986)

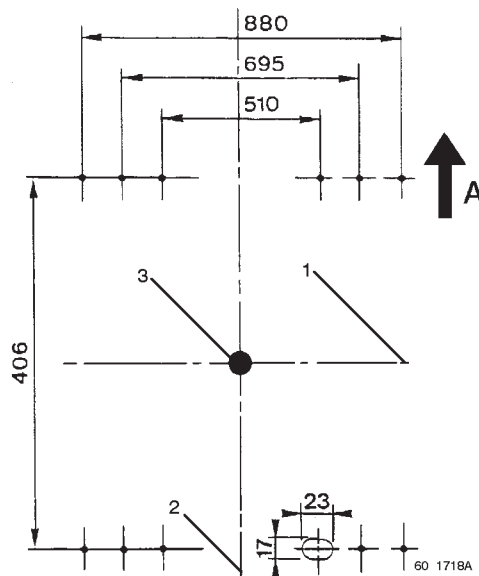

- A - Direction of movement of vehicle
- 1 - Lateral axis
- 2 - Longitudinal axis of the tractor engine
- 3 - Kingpin axis

**CHAPTER -B-
“RENAULT KERAX”
SPECIAL BODYBUILDING FEATURES**

1. PRESENTING THE “RENAULT KERAX” SERIES

The series hinges around:

- Three families of modular chassis:
 - LIGHT DUTY worksite supply
 - MEDIUM DUTY construction site
 - HEAVY DUTY harsh construction site.
- Four power levels: 270 / 320 / 370 / 420 hp
- Five axle spreads: 4x2 / 4x4 / 6x4 / 6x6 / 8x4

The bodybuilding function is optimized with:

- . a chassis featuring parallel sidemembers (L = 800 mm) over the major part of the body and whose top flanges are completely smooth;
- . a chassis frame assembly technology featuring bolting with locations allowing great flexibility of movement of position, removal/fitting of vehicle and body components;
- . fastening brackets in the forward part of the chassis and drillings distributed along the sidemembers making for easy attachment of all types of body;
- . a pre-arrangement for mounting a behind-cab crane, available as option on 4x2, 6x4 and 8x4 models;
- . pre-arrangements for a compressed air take-off and a 24 V plug socket on the chassis.

The CONSTRUCTION series takes a new step towards the “**ready-to-assemble**” vehicle.

This new series resumes the majority of the bodywork attachment principles that are already known on all **RENAULT TRUCKS** vehicles.

1.1 Make-up of the series

RENAULT KERAX 4x2 rigid 18/19 tonnes:

- 4 wheelbases (3800, 4100, 4500, 5000 mm)

RENAULT KERAX 4x4 rigid 18/19 tonnes:

- 4 wheelbases (3500, 3800, 4100, 4500 mm)

RENAULT KERAX 6x4 rigid 26 tonnes:

- 6 wheelbases (3150, 3500, 3850, 4200, 4600, 5000 mm)

RENAULT KERAX 6x6 rigid 26 tonnes:

- 2 wheelbases (3850, 4600 mm)

RENAULT KERAX 8x4 rigid 32 tonnes:

- 6 wheelbases (4200, 4550, 4500, 5063, 5365, 5665, 6160 mm)

Depending on your vehicle's equipment

Engine: DCI 11 C+ J01, DCI 11 E+ J01, DCI 11 G+ J01 and DCI 11 I+ J01
- cubic capacity 11,116 cc
- 4 power levels (270, 320, 370, 420 hp)

Engine rear PTO: PAM 1131
PAM 1132

Clutch: BI 400
430 DTE
MFZ 430
GMFZ 430

Gearbox: EATON FS 8309
ZF 8S 151
ZF 9S 109
ZF 16S 151
ZF 16S 221
ZF 16S 251
ZF 16S 151 + NMV 221

Power take-off: ZF N.109.10B
ZF NH.1 B/C or Hydrocar S 81 B/C
ZF NH.4 B/C or Hydrocar S 84 B/C
ZF NL.1C or Hydrocar S 81 Z2
ZF N221-10.B/C
Hydrocar 2266 B/C

Propeller shafts: Tubular shafts with universal joints

Front axle: E83 (PA 941 or 945) TRM

2nd axle (8x4): E83

Rear drive axle: P 1541
P 1545
PMR 2140EL (PMA 1140 + PR 1140)
PMR 2141L (PMA 1141 + PR 1141)
PMR 2541M (PMA 1841 + PR 1841)
PMR 3345H (PMA 1845 + PR 1845)

With inter-wheel differential lock.

With inter-axle and inter-wheel differential locks.

Steering:	TRW TAS 87 ZF 8098 with incorporated hydraulic power assistance	
Front suspension:	Leaf springs, hydraulic shock absorbers Leaf springs, hydraulic shock absorbers and anti-roll bars	
Rear suspension:	Leaf springs, hydraulic shock absorbers and anti-roll bars Air springs Hydraulic shock absorbers and resilient mountings Pivot-mounted oscillating leaf springs (6x4, 6x6, 8x4)	
Brakes:	All air	
Retarders:	Exhaust brake Electric retarder Jake engine-brake ZF hydrodynamic "INTARDER"	
Electrics:	24 Volts current	
	2 batteries	170/190 Ah
	Alternator	BOSCH NL1 80A
	Starter	MITSUBISHI 24V 5.5 kW

1.2 Electronic management of “RENAULT KERAX” vehicles

1.2.1 Operating principle

Engine electronic management is used to improve engine performance while optimizing fuel consumption and pollutant emissions (in order to meet Euro 3 standard).

The electronic system consists of two principal electronic control units:

- the **EECU** (Engine Electronic Control Unit):


This is located on the engine for the DCI 11 and manages, among other things, the fuel pump solenoid valves, the exhaust brake... on the basis of information it receives from the different engine, speed, air temperature, fuel pressure... sensors.

- the **VECU** (Vehicle Electronic Control Unit):

This is located on the dashboard at the side of the connection unit and manages operation of the different vehicle equipment items (windscreen wash/wipe...), controls (accelerator, parking brake, electric retarder...), together with “bodybuilder” functions (PTO, related engine speeds...).

An instrument panel display (AFFI 2000) makes the interface between vehicle and driver. Not only classic information such as distance travelled, average or instant fuel consumption... is displayed, but also information on the state of the vehicle or its body (tailgate incorrectly closed, interior lighting in service...) coupled in case of danger with the STOP warning light or a buzzer.

All these modules are interlinked by a digital communication bus (CAN bus) that allows them to exchange the necessary orders and information.

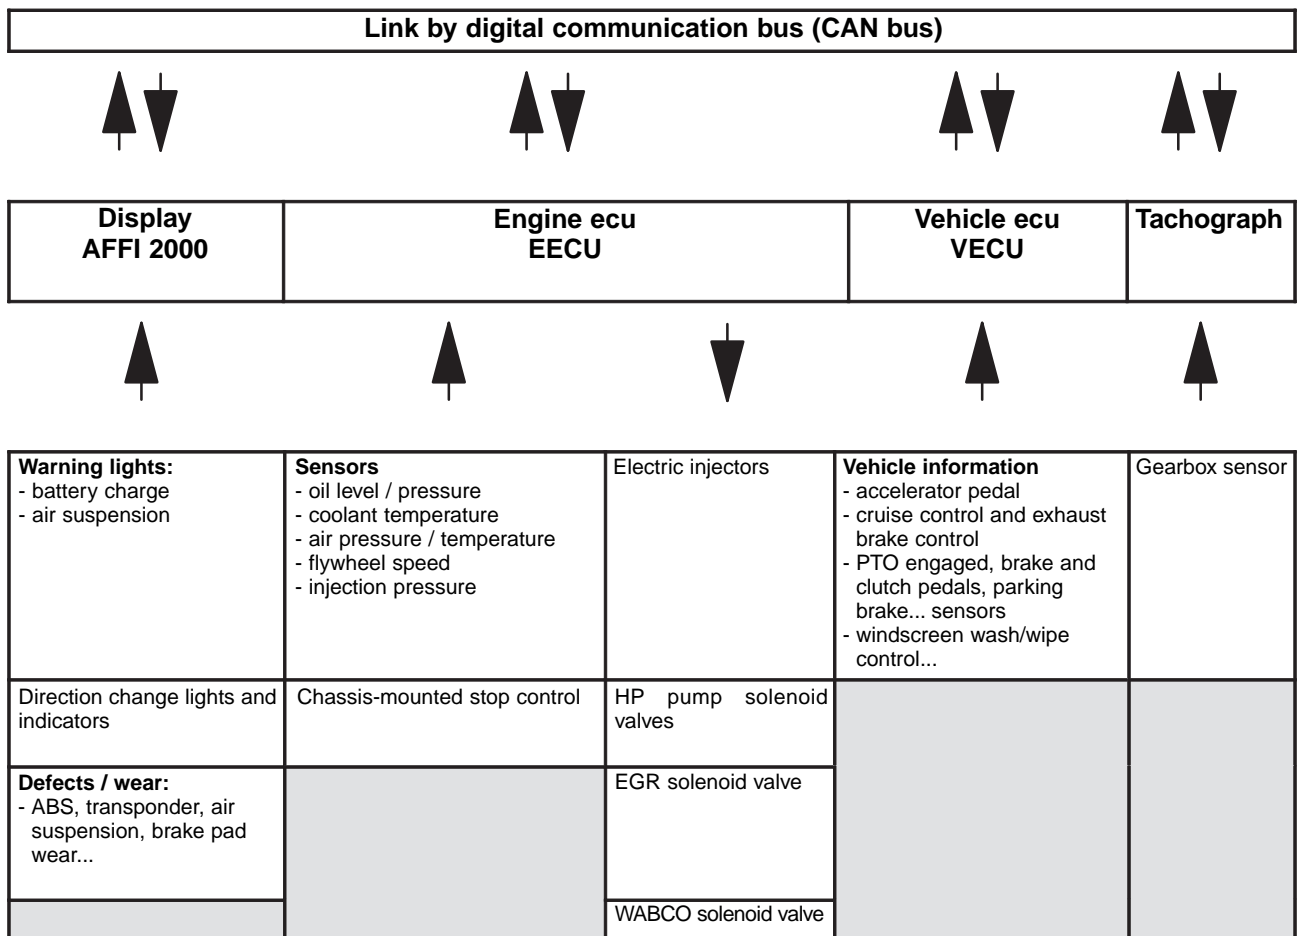

It is forbidden to cut the engine ECU wiring harness located in the battery compartment (for extension or shortening purposes).

Any changing in position must be done in an area permitted by range of movement of the wiring harness - take care to protect the ECU against splash and spray.

1.2.2 Bodybuilders' electrical pre-arrangements

The vehicle electrics is managed by the vehicle electronic control unit (VECU).

For a detailed description of the electrical pre-arrangements, see the "Electrical pre-arrangements" chapter.

1.3 Warning



Any work on the fuel system is forbidden.

On engines equipped with common rail fuel-injection operating at very high pressure, the presence of air may lead to damage to the pump.

Observe the rules governing common rail system cleanliness and bleeding, that is to be performed whenever any work is carried out on the system.

For further information, consult the RENAULT TRUCKS Product Applications Department.

On the low pressure circuit, changing of position of a fuel tank, adding unions or components, risks creating extra head losses:

- The specification risks not being met both at supply pump inlet and at pump return.
- The pressure regulation device risks malfunctioning (the system is sensitive to head losses).
- Check the air take-offs, make sure the fuel level is correct even when the vehicle is on an incline and during the brake application phases (difficulty in starting or stalling of the engine).
- The fuel filters must still be the last part before the HP pump inlet.
- The position of the prefilter must still be the same on the hydraulic circuit (between the injector return and the feed pump inlet).



On account of the use of electronic boxes, the installation of equipment may cause electromagnetic disturbance and oblige bodybuilders to proceed with new approval of the vehicle in respect of Electromagnetic Compatibility.



The management of engine speeds in PTO mode is managed by the electronics.

For trade vehicles, the subsequent installation of electrical pre-arrangements requires significant and complex intervention work (installation of cab and chassis wiring harnesses, re-definition of vehicle and engine ECU parameters...).



It is forbidden to walk on or place heavy articles on the engine for risk of damaging the HP injector pipes and the plastic rocker covers.





Guarantee access to the air intake, exhaust and fuel supply circuits.

The radiator inlet and outlet surfaces must not be modified.


The cooling flow must be conserved.

2. GENERAL REMARKS ON THE "RENAULT KERAX" SERIES

2.1 Identification of the vehicle

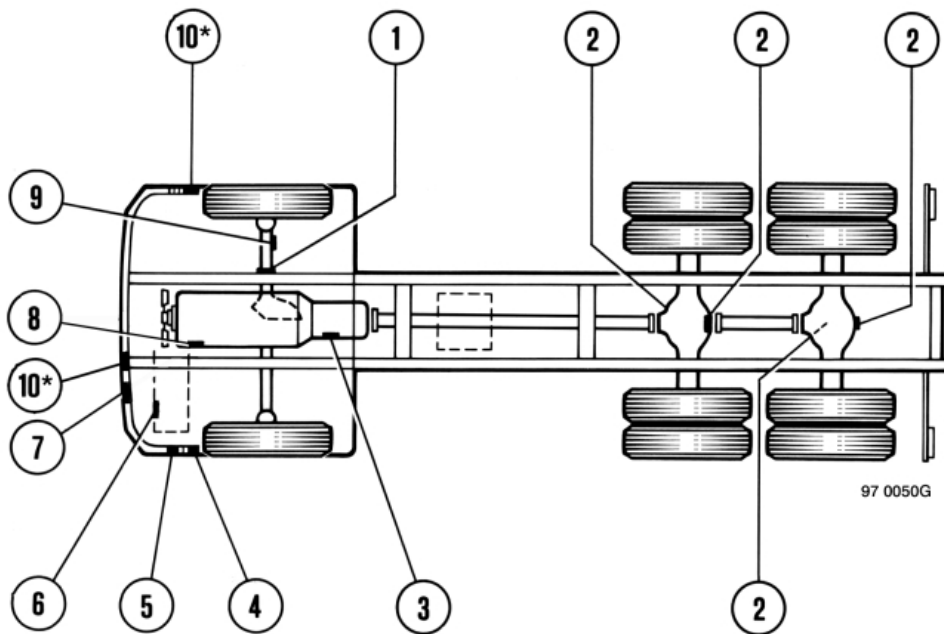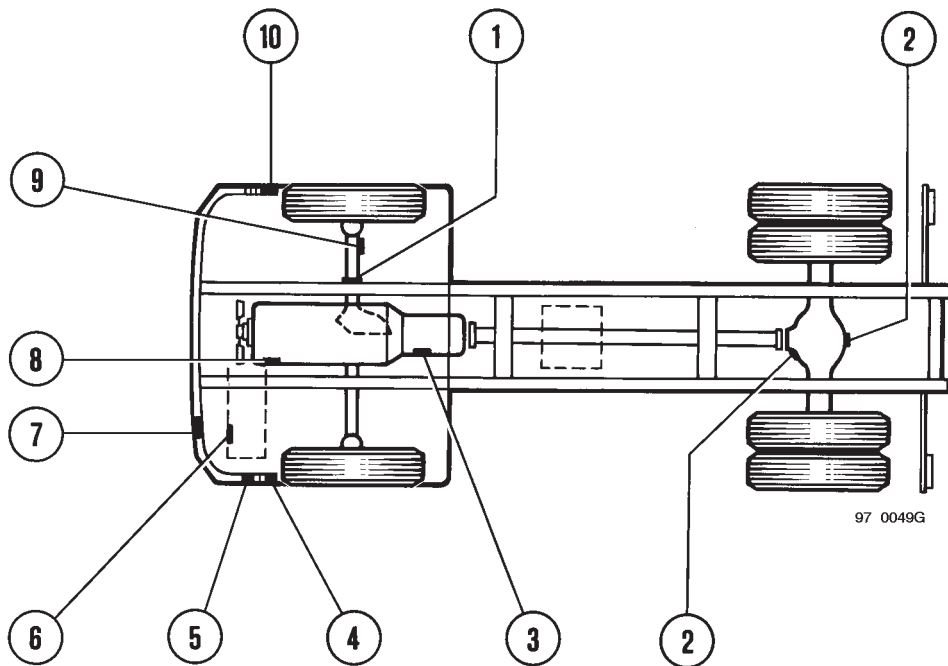

View from above

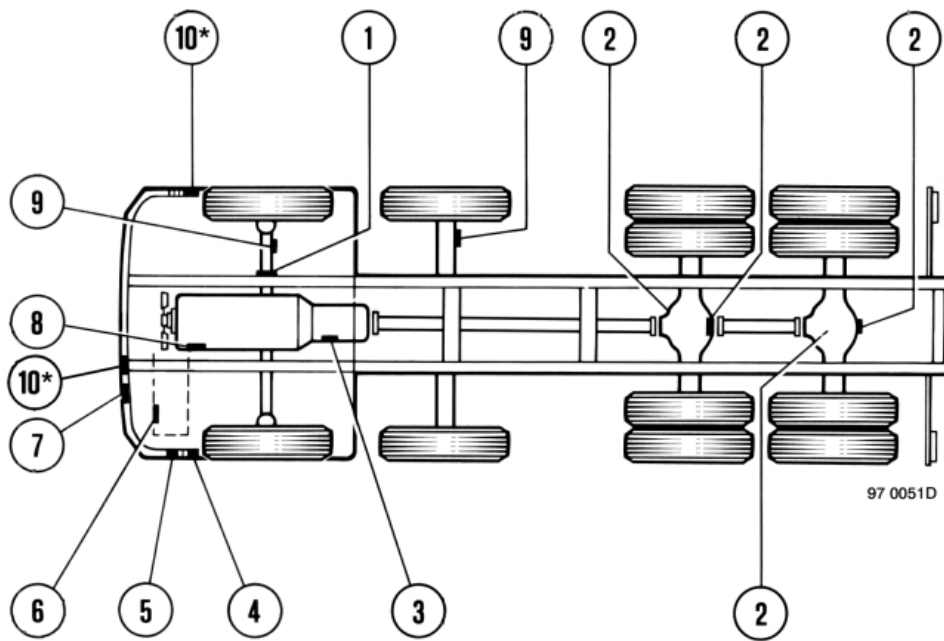

View from above

* : Depending on your vehicle's equipment

- 1 - Chassis
- 2 - Rear drive axle
- 3 - Gearbox
- 4 - Manufacturer's plate
- 4 - Pollution index
- 5 - Manufacturing plate
- 6 - Tachograph plate
- 7 - CAM reference
- 7 - Paint reference
- 8 - Engine
- 9 - Axle
- 10 - Load sensing valve plate

IMPORTANT


The identification markings must remain visible and accessible without need for removing any bodywork component.

2.2 General drilling principles

2.2.1 Drilling cab panels for fitting accessories

This allows access to weld nuts and sealed crimping nuts for the assembly of accessories.

The recommendations below will help avoid damage to the roof headlining at the time of drilling.

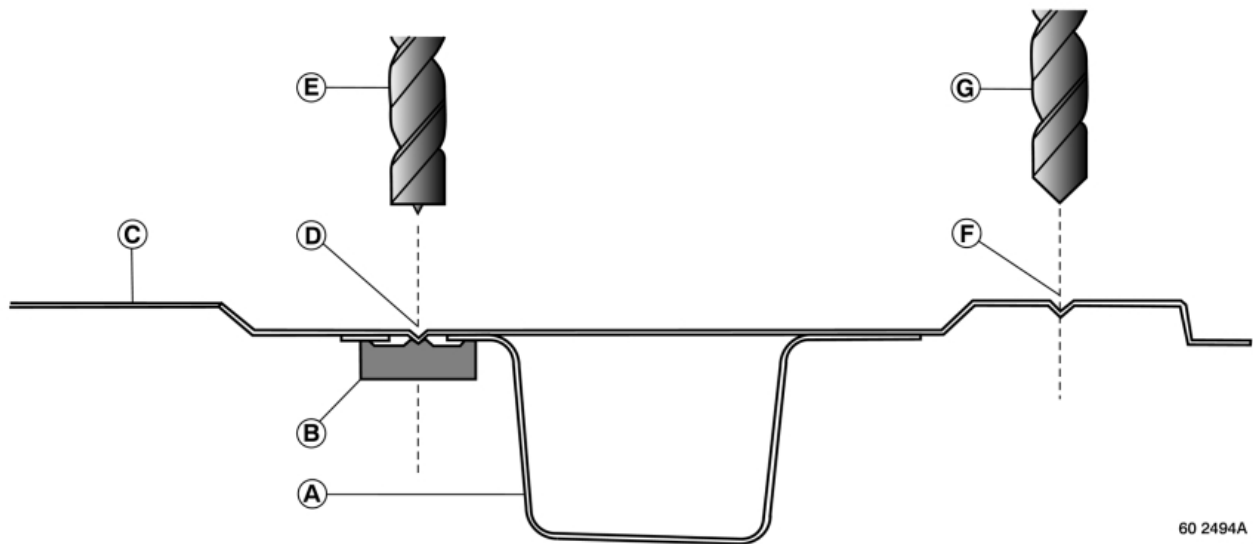

A - Roof stiffener

B - Weld nut on stiffener

C - Bodywork panel

D - Positions of impressions for drilling and access to weld nut

E - Centring drill with stop:

dia. 11 mm for crimping nut dia. 8 mm

F - Positions of impressions for drilling and access to crimping nut

G - Centring drill with stop:

dia. 9 mm for crimping nut dia. 6 mm

Anti-corrosion protection:


Deburr the holes after drilling.

Protect the metal with a zinc aerosol spray available from the Spare Parts department, ref. N° 77 01 406 425.

2.2.2 Drilling in sidemembers



- No drilling in the flanges of sidemembers.
- No drilling more than 3 holes on the same vertical.

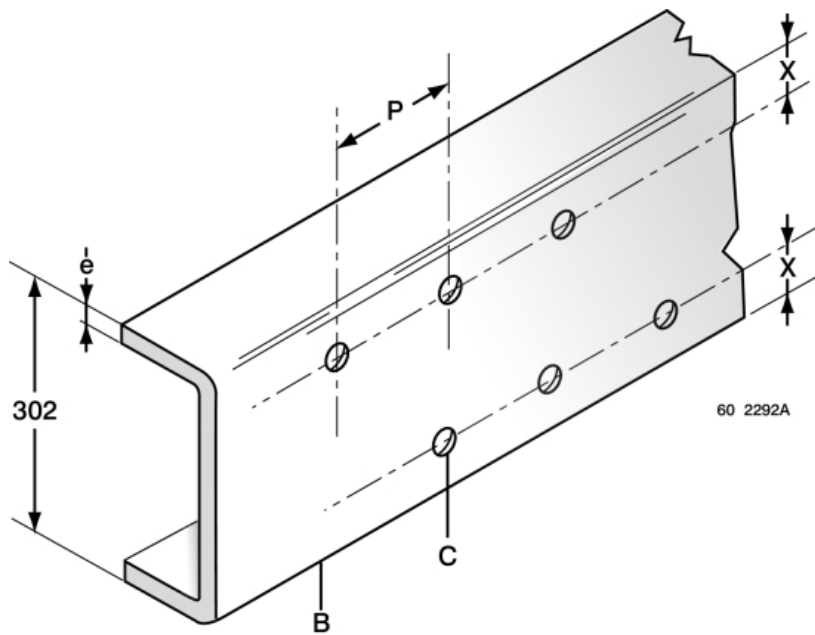

B - Chassis zero (RENAULT TRUCKS reference axis)

C - Max. authorized drilling dia.:
13 mm for 12 mm screws
15 mm for 14 mm screws

e - Sidemember thickness = 8 mm

P - Between-centres distance between two drillings = 45 mm

X - 40 mm without stiffener, 52 mm with stiffener

Anti-corrosion protection and paint retouches to the chassis

Protect the metal with a zinc aerosol spray, ref. N° 77 01 406 425.

Retouch paintwork with a grey chassis aerosol paint spray, ref. N° 50 01 848 147.

These consumables are available from the RENAULT TRUCKS Spare Parts department.

2.4 Minimum load on front axle

In order to guarantee suitable vehicle ride behaviour, stability and handling under maximum safety conditions, the minimum load on the front axle must be applied whatever the vehicle load and equipment conditions.

For special cases, consult the RENAULT TRUCKS Product Applications Department.

IMPORTANT

- *Never exceed the maximum permissible load on the front axle.*
- *Application of the load in the rear overhang of the vehicle is detrimental to vehicle ride behaviour, stability and handling. Great prudence is recommended when driving under such conditions.*
- *Watch that the centre of gravity of the load is positioned laterally as close as possible to the centre of the vehicle.*

2.5 Soundproofing screens and heat shields

2.5.1 Instructions for soundproofing screens

Soundproofing screens should neither be removed, modified nor displaced so as not to downgrade the vehicle sound level, which is covered by official homologation.

If it is unavoidable for them to have to be removed, they must without fail be put back into place when the work is completed.

After removal, only perfectly clean screens should be refitted.

The screens are to be cleaned using a cloth. If necessary, use soapy water (all other products are to be forbidden).



No solvents or paints are to be applied at all on either the inner or the outer faces of soundproofing screens.

Any damage to the internal protective film of the screen requires the screen to be replaced.

In the event of on-vehicle welding or the use of a sanding disk, provide efficient protection to the screens.

If the screens have been removed, provide efficient protection to the wiring harnesses.

Pay particular attention that there are no inflammable products present on the screen protective films.

Overtightening of screen attaching nuts and bolts may lead to damage.

Observe the recommended tightening torques without fail.

- screen bracket / chassis fastenings: 20 Nm \pm 20%
- screen / chassis bracket fastenings: 8 Nm \pm 20%

2.5.2 Instructions for heat shields

It is forbidden to remove or modify these shields. They play a part in the safety of your vehicle.

During chassis painting operations, take care to efficiently protect the hot face of heat shields against splashing paint and especially the shields surrounding the electric retarder. In effect, these shields are only effective if the surfaces are free from any foreign matter.

2.6 Side impact guards

Side impact guards must comply with the laws in force and should not impede access to chassis components (spare wheel, air and fuel tanks, air dryer...).

3. INSTALLATION OF BODYWORK

3.1 Use of 1/20th scale drawings and calculation sheets

Technical data sheets are tools used by sales engineers to present the range or series. They cannot be representative of particular vehicles.

To obtain precise information, refer to the 1/20th scale drawings, calculation sheets or type approval department reports to be found in the RENAULT KERAX CD-ROM.

Only these documents will give you accurate and reliable information on vehicles according to tonnage, air intake, cab type, weights...

3.2 Example of a search

Valid to date - If the RENAULT KERAX CD-ROM is modified, consult the RENAULT TRUCKS Product Applications Department.

- 1 - Click on the chosen language.
- 2 - Click on “**1/20th scale bodybuilder’s drawings**”.
- 3 - Click on “**Chassis cab drawings**”.
- 4 - Choose the vehicle model.

Rigid							Tractor	
Construction	Distribution	Concrete mixer	Public works concrete mixer	Public works	Tipper	Quarry	Construction	Quarry
4x2	6x4	6x4	6x4	6x4	6x4	6x4	4x2	6x4
4x4	8x4	8x4		8x4	8x4	6x6	4x4	6x6
						8x4	6x4	
RH drive				Crane mounting pre-arrangement				
6x4		8x4		4x2		6x4		

- 5 - Choose the drawing N° according to wheelbase and engine power rating (click on “**5430128171**”).


	Kerax construction
	4x2
Wheelbase	270 à 420 ch
3800	5430128168
4100	5430128171
4500	5430128174
5000	5430128177

6 - Click on “**Visualize PDF format**”.

Drawing N° 5430128171
Visualization of PDF format
Recording of DXF format
Access to grids

7 - Visualize the drawing and print out.

On the calculation sheet table (A), choose the grid N° according to the engine power rating, suspension and grid N° to consult (e.g. 5430128451).

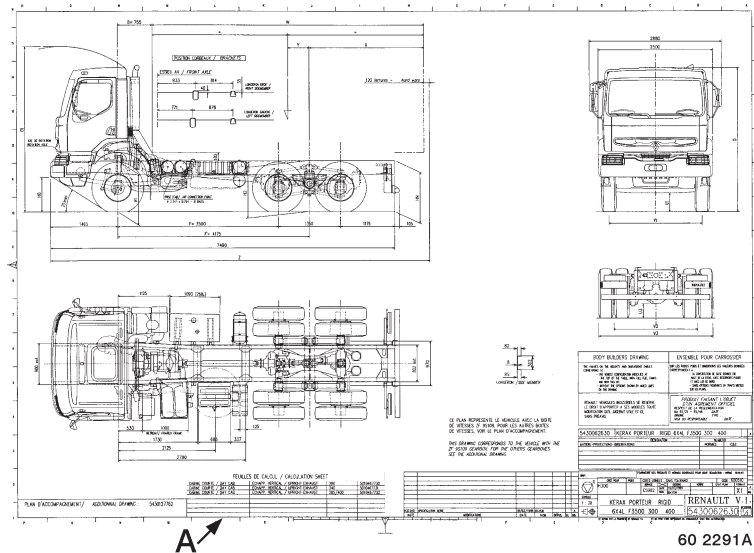

8 - Go back to the last screen.

9 - Click on “**Access to grids**”.

Drawing N° 5430128171
Visualization of PDF format
Recording of DXF format
Access to grids

10 - Write down the grid N° "5430128451", click on "Find".

Grid N° **5430128451**
Find

11 - Click on "Visualization of PDF format".

Grid N° 5430128451
Visualization of PDF format

12 - Visualize the grid and print out.

- A - Calculation grid number
- B - Vehicle identification
- C - Vehicle make-up
- D - 1/20th scale drawing number
- E - Wheelbase
- F - Body start dimension
- G - Height



See without fail;

- cab accompanying drawings (overall dimensions, tilting radius...)
- chassis accompanying drawings (position of appliances...).

	Destination : CER 17/11/1999	RENAULT V. I.	
	PTAC : 26000	GAMME KERAX	
	Charge essieu: 7100/19000		
	Cabine : H800 CO BTP	5010467730 A	A
	Pneumatique : 12R22.5		B
C	Suspension : ME:PA3L0/ME:PAL.HN402	Mime : 33EXA1	
	Boite vitesse: 98 109 PAM	Modèle : 332 PORTE MALAHEUR	
	Moteur : MIDR62045D41	Type : P 6X4 LIGHT 300/400	
	Essieux AV : ES3KL		
	Essieux AR : PMA141, PR1141A	PLAN 1/20:E 3500 5430062629/630	
	Reservoir : 260L	:E 3050 5430127639/656	

D	No du plan		

E	Empattement P 3500 3850		
	Empattement fictif F 4175 4525		

	Long. chassis nu A 7490 7840		
	Porte à faux AR N 1850 1850		
	Porte à faux AR mini 1385 1385		
	Cote ext. longeron 0 0		

F	W max 5657 6267		
	W min 5611 6217		
	X max 2237 2497		
	X min 2191 2447		
	Dimensions carrossables Y min 591 637		
	Y max 614 662		
	Z max 7997 8607		
	Z min 7951 8557		

	Pds chassis-cabine T 7783 7802		
	AV 4283 4304		
	AR 3500 3498		
	Pds avec chauffeur T 7933 7952		
	et 1 passager(s) AV 4441 4461		
	AR 3492 3491		

	Charge pour Ptc C 18067 18048		
	PTAV pour W min AV 7100 7100		
	PTAR pour W max AR 19000 19000		

	Répartition charge AV 2559 2539		
	totale avec Ymin AR 15508 15509		
	Poids total AV 7000 7000		
	AR 19000 19000		

	Répartition charge AV 2559 2639		
	totale avec Ymax AR 15408 15409		
	Poids total AV 7100 7100		
	AR 18900 18900		

G	# vide charge	Garde au sol en charge	U1 378
	H1 1066 1009	Voie AV	U3 296
	H2 1113 1050	AR	V1 2052
	O 3087 3040	Hors tout	V2 1840
	O1 3545 3490		V3 2437
	H0 694 639	[Charge essieu AR/Charge essieu AV <= 4.20]	
	NB 1134 1067		

	NBR CONFIG. TOTAL : 8	CONFIG. : 1	

60 2290A

3.3 Body start dimension

3.3.1 Behind-cab surrounds

To prevent the components forming the rear surrounds of the cab from entering into contact with the bodywork, a minimum body start dimension, depending on the height of the sub-frame employed, is to be observed.

The components forming the rear surrounds of the cab are:


- vertical exhaust,
- different air intakes,
- front wings and wing brackets.

Regular cab 1.6 m

4x2, 4x4, 6x4, 6x6, 8x4 vehicles:

- lateral exhaust tail pipe,
- normal air filtration.

X - axle centre-line

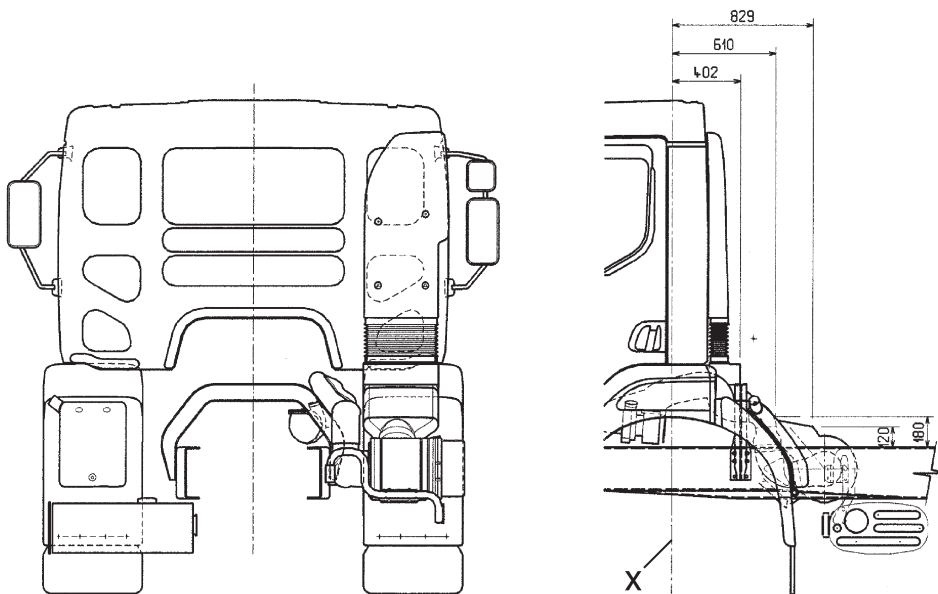


60 2338A

Regular cab 1.6 m

4x2, 4x4, 6x4, 6x6, 8x4 vehicles:

- lateral exhaust tail pipe,
- reinforced air filtration.

X - axle centre-line

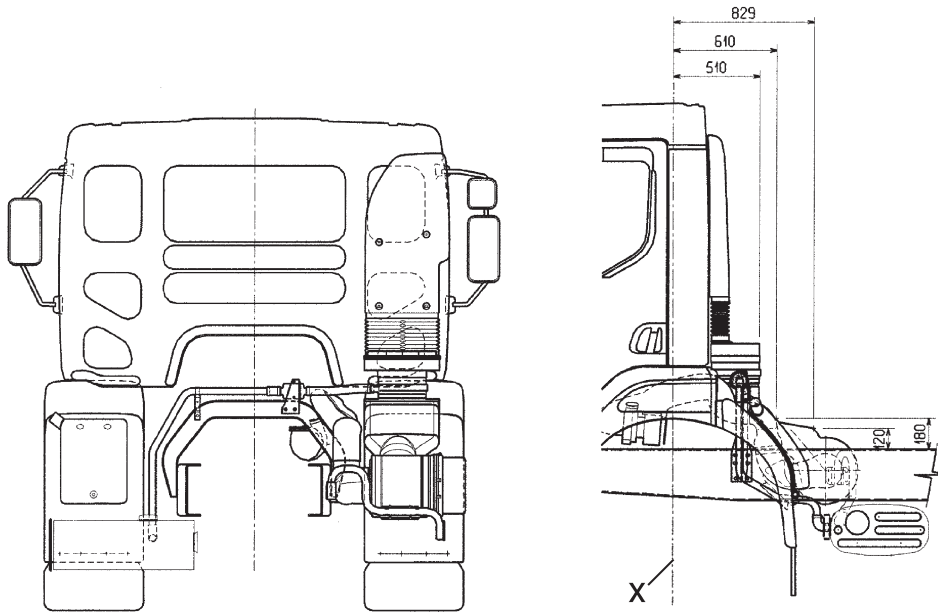


60 2339A

Regular cab 1.6 m

4x2, 4x4, 6x4, 6x6 vehicles:

- vertical exhaust tail pipe,,
- normal air filtration.

X - axle centre-line

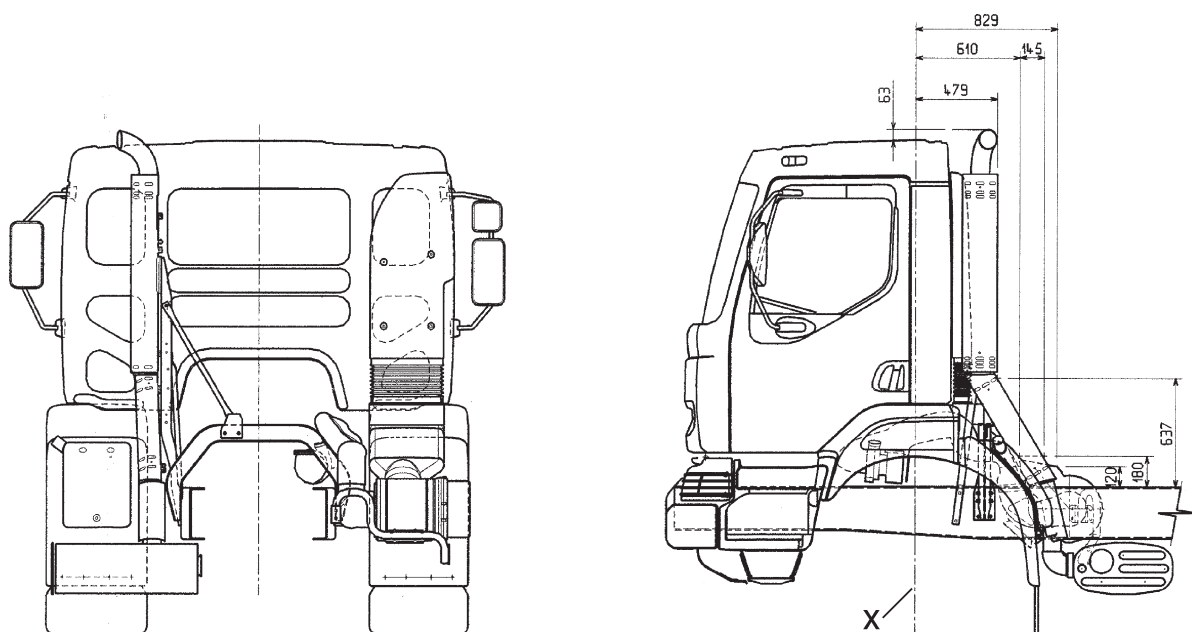



60 2336A

Regular cab 1.6 m

4x2, 4x4, 6x6, 6x4, 6x6 vehicles:

- vertical exhaust tail pipe,
- reinforced air filtration.

X - axle centre-line

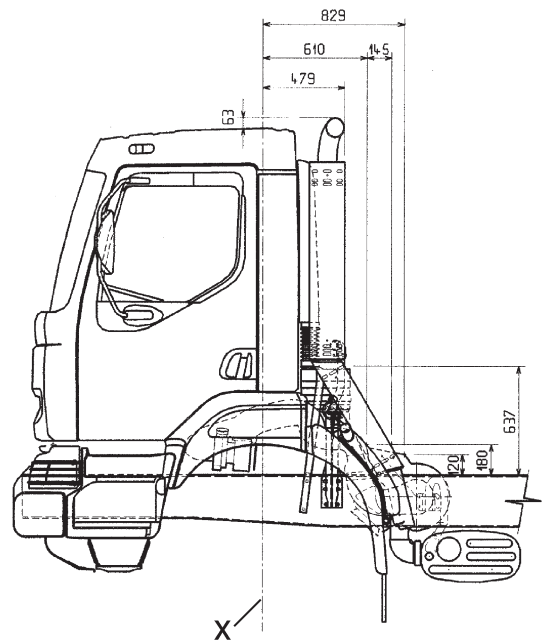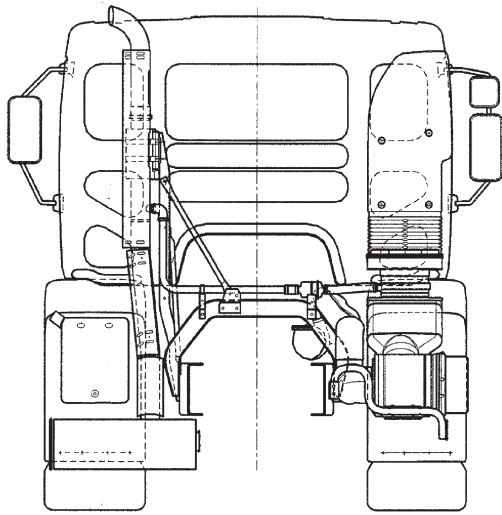



60 2337A

Regular cab 1.6 m

8x4 vehicles (4x2, 6x4 with behind-cab crane option):

- vertical exhaust tail pipe,
- normal air filtration.

X - axle centre-line

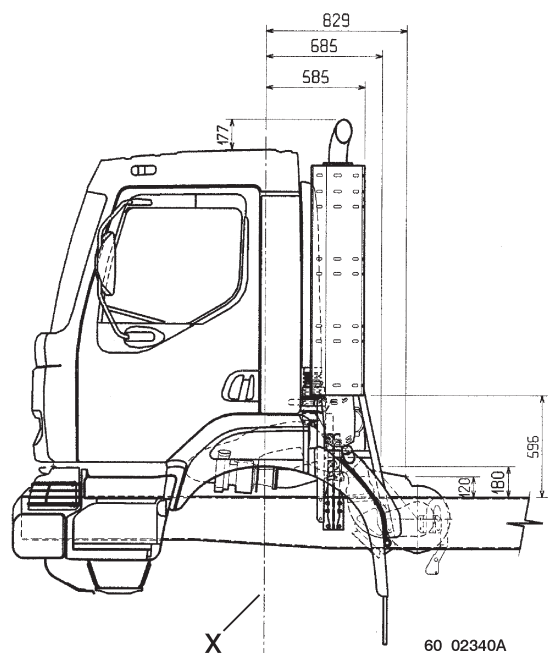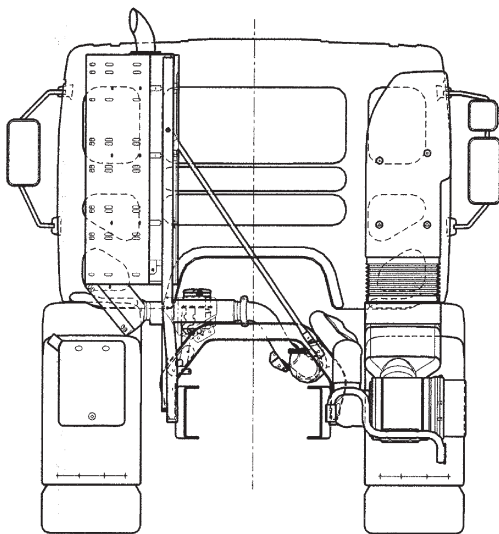


60 02340A

Regular cab 1.6 m

8x4 vehicles:

- vertical exhaust tail pipe,
- reinforced air filtration.

X - axle centre-line

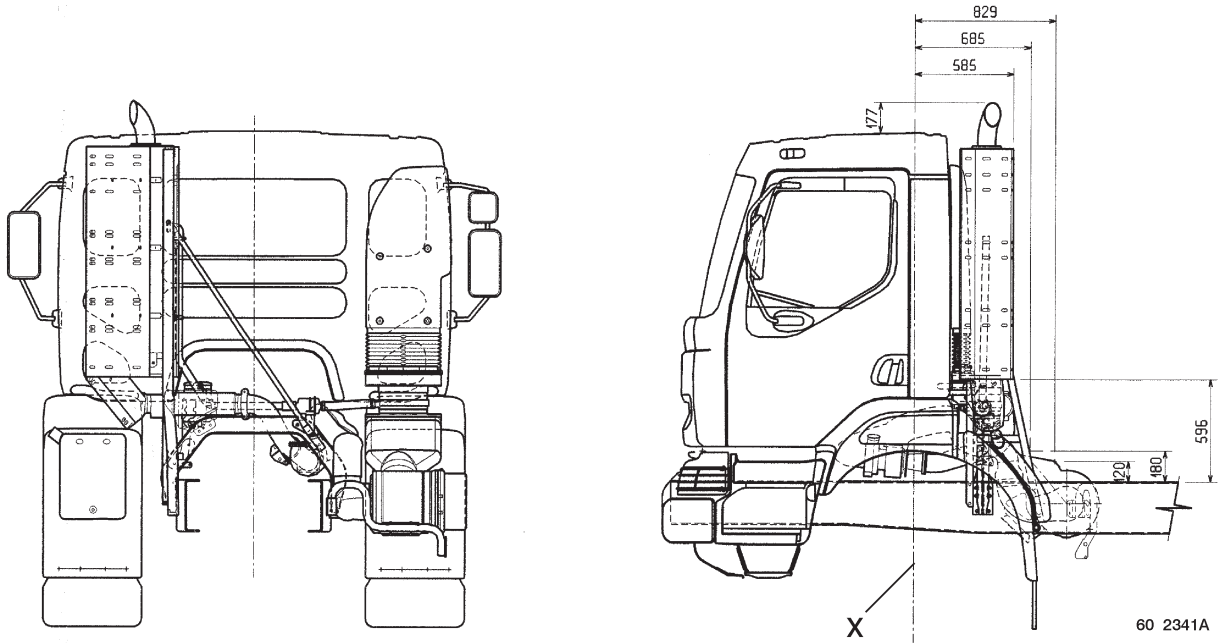


60 2341A

Medium cab 2 m

4x2, 4x4, 6x4, 6x6, 8x4 vehicles:

- lateral exhaust tail pipe,
- normal air filtration.

X - axle centre-line

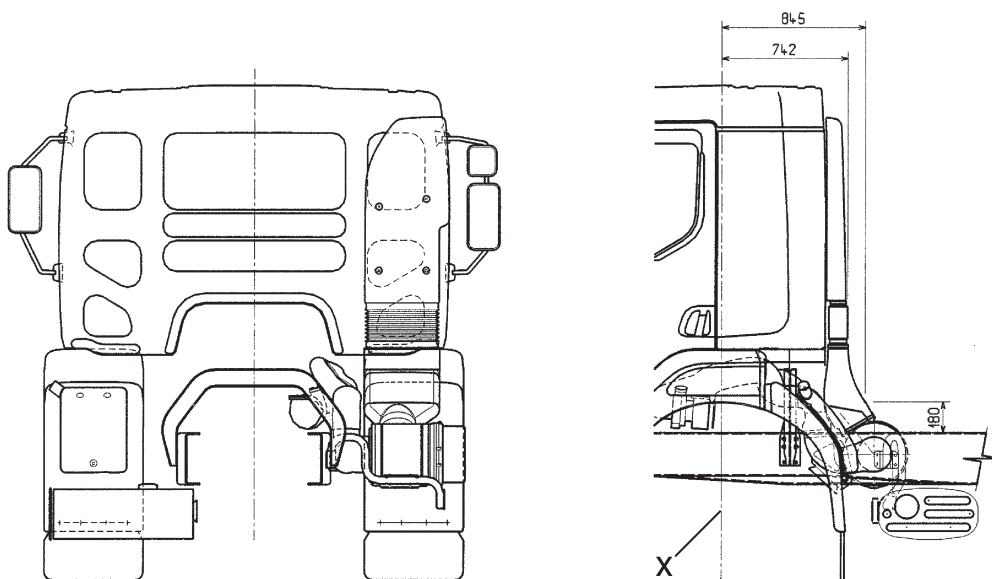


60 2346A

Medium cab 2 m

4x2, 4x4, 6x4, 6x6, 8x4 vehicles:

- lateral exhaust tail pipe,
- reinforced air filtration.

X - axle centre-line

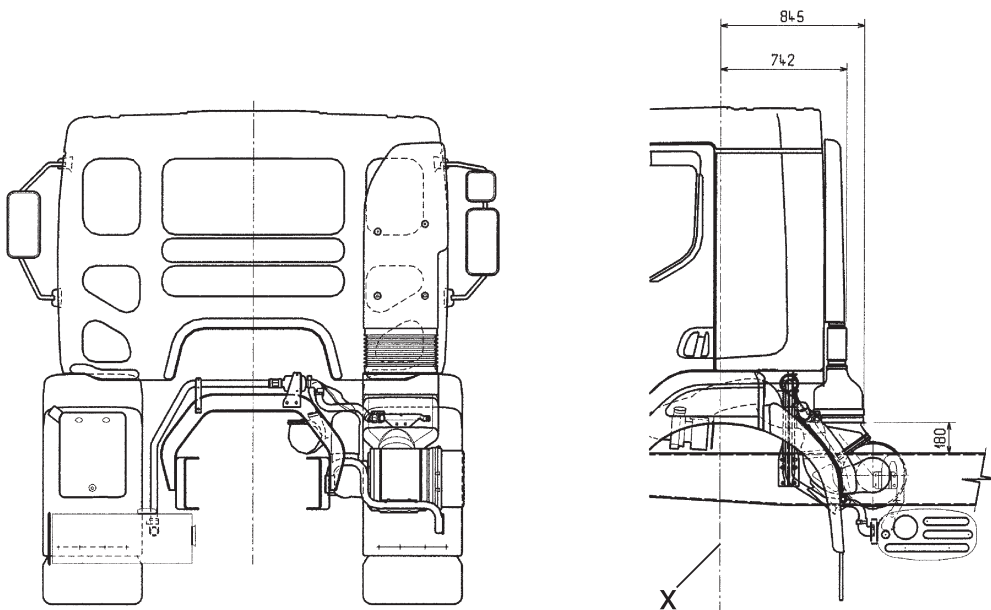


60 2347A

Medium cab 2 m

4x2, 4x4, 6x4 vehicles:

- vertical exhaust tail pipe,
- normal air filtration.

X - axle centre-line

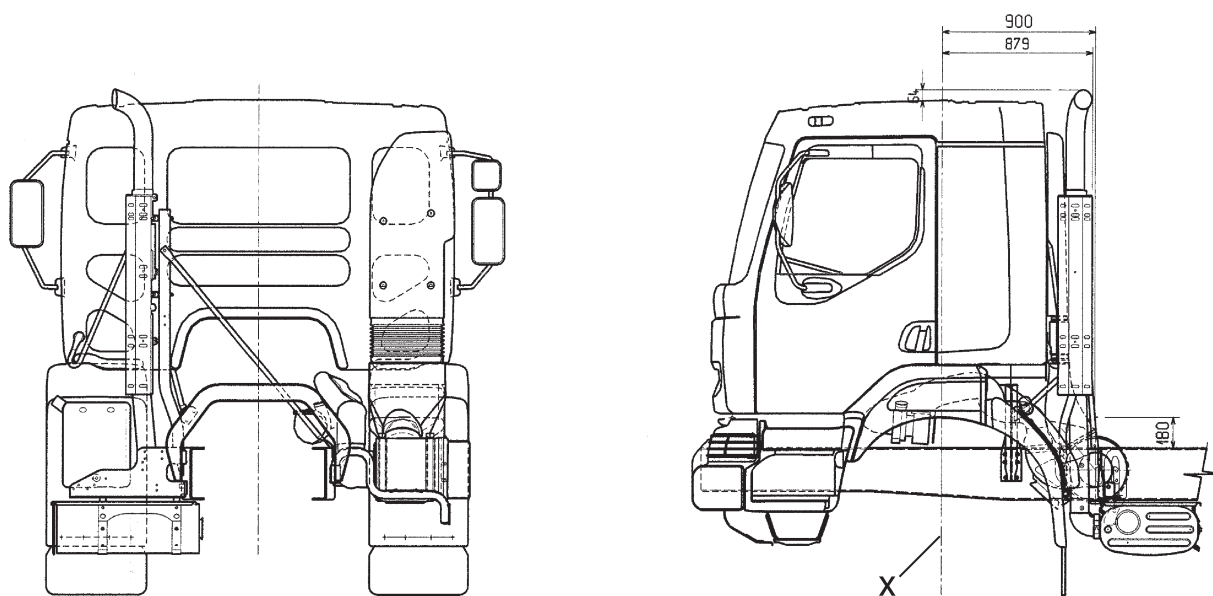



60 2344A

Medium cab 2 m

4x2, 4x4, 6x4, 6x6 vehicles:

- vertical exhaust tail pipe,
- reinforced air filtration.

X - axle centre-line

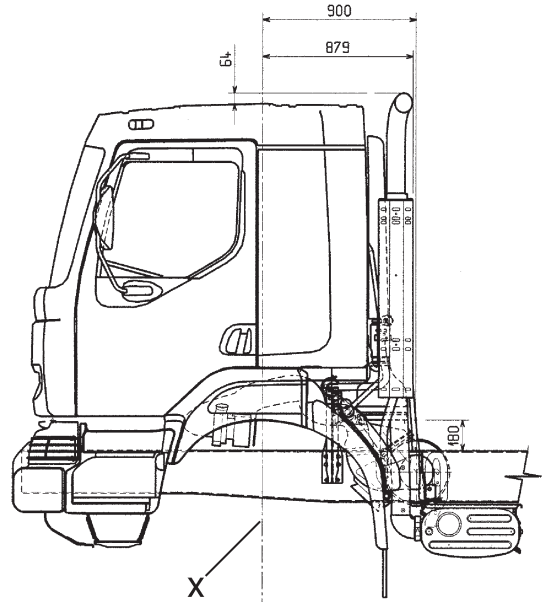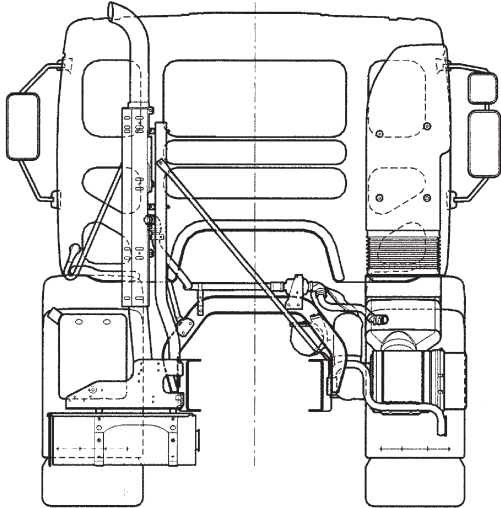



60 2345A

Medium cab 2 m

8x4 vehicles:

- vertical exhaust silencer,
- normal air filtration.

X - axle centre-line

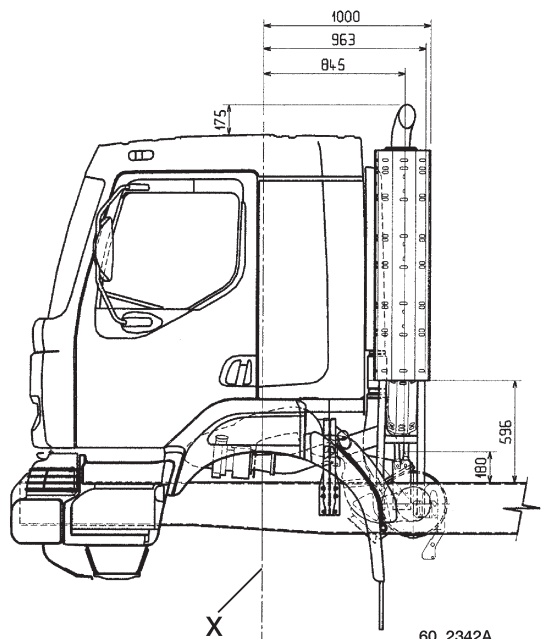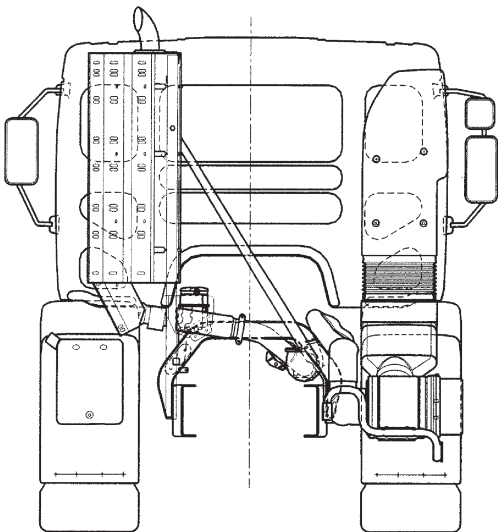


60 2342A

Medium cab 2 m

8x4 vehicles:

- vertical exhaust silencer,
- reinforced air filtration.

X - axle centre-line

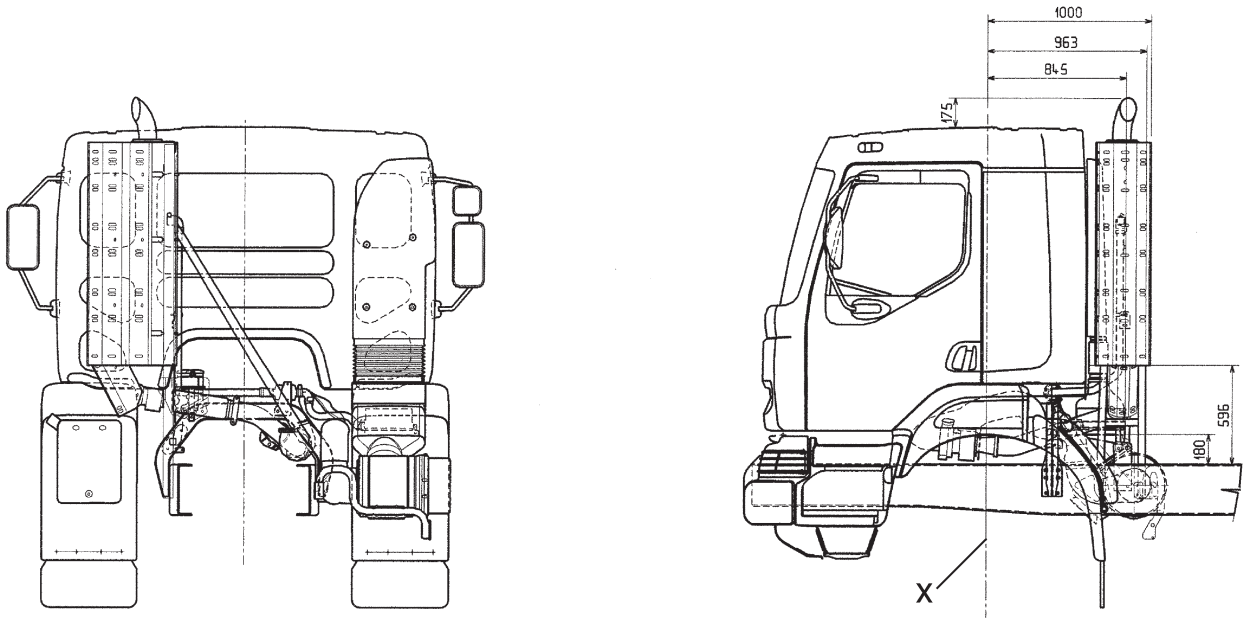


60 2343A

Long cab 2.2 m

4x2, 6x4, 6x6, 8x4 vehicles:

- lateral exhaust tail pipe,
- normal air filtration.

X - axle centre-line

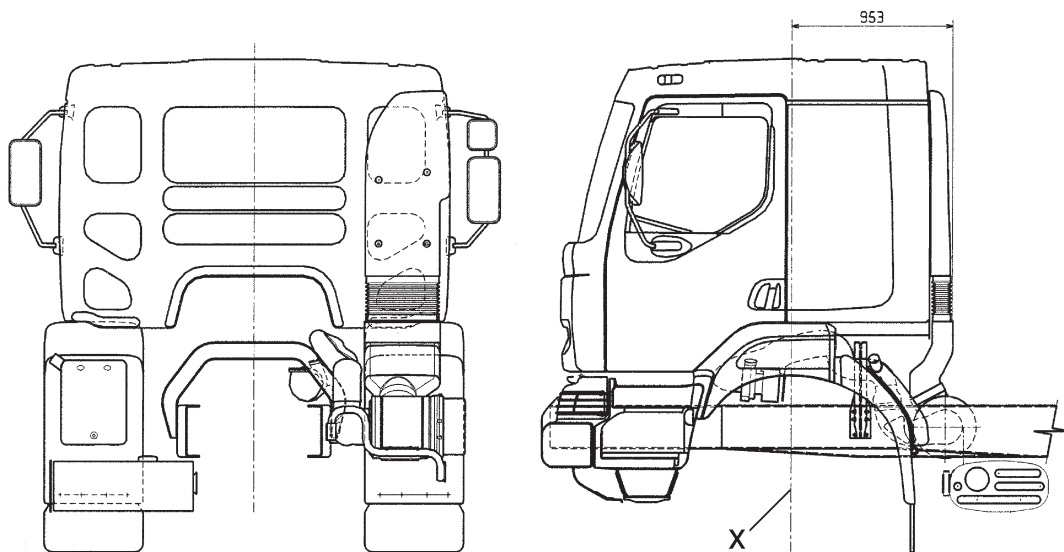


60 2349A

Long cab 2.2 m

4x2, 6x4, 6x6 vehicles:

- vertical exhaust tail pipe,
- normal air filtration.

X - axle centre-line

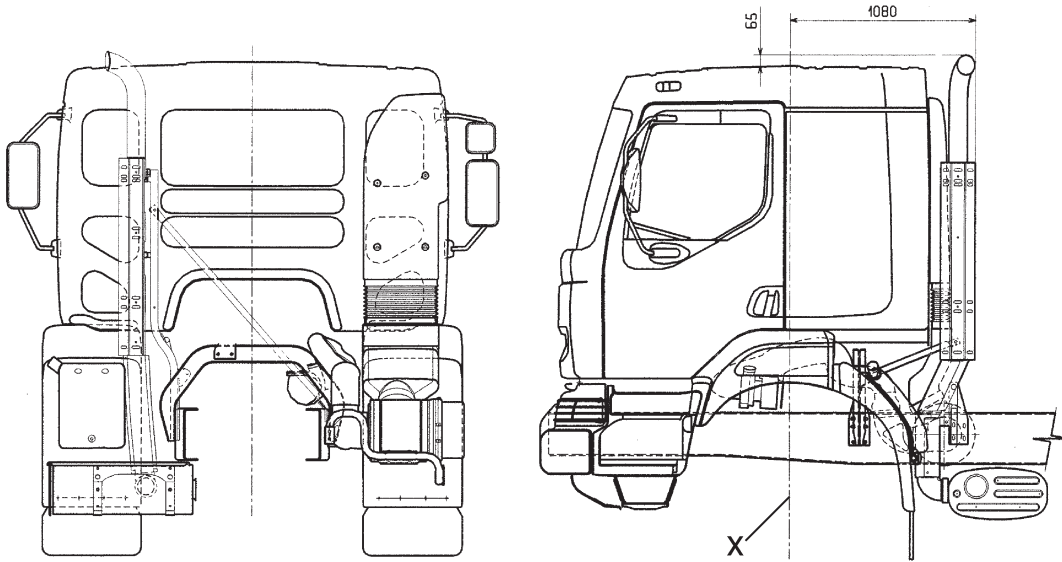

60 2348A

3.4 Attachment of bodywork

It is essential to comply with the stipulations hereafter for attaching bodywork of equipment to our vehicles. For special cases, contact the RENAULT TRUCKS Product Application Department.

The bodywork must be correctly attached so that both the static and dynamic stresses are freely transmitted without causing excessive local strain, which could prejudice the reliability of the chassis frame or affect the road behaviour of the vehicle.

The use of brackets mounted in production to the chassis is compulsory.

The fastening of body sub-frames or undercarriages must without fail be carried out according to the recommendations defined in this document.

Sub-frames or undercarriages must be continuous and fit perfectly over the entire length of the chassis.

Sub-frames or undercarriages should always be tapered towards the front (i.e. under the cab), so as to avoid sudden variations in inertia.

Protection against exhaust heat radiation: the closeness of the bodywork to the exhaust pipe and the fitting of certain accessories (electric retarder, etc...) may require the installation of a suitable heat shield by the bodybuilder.

Inertia stop

All bodies or equipment must be fitted with an inertia stop to the rear of each sidemember to retain the body against motion. Use plates U and V.



BANS

- Attachment of sub-frames by U-bolts, clamps or equivalent systems (hooks).
- Use, drilling or welding of spring hangers.
- Any modification to: chassis, driveline, suspension (except if contained in the Guide for Fitting Bodywork).
- Attachment of sub-frames by welding to sidemembers.
- Drilling of stiffener gussets.
- Welding, notching of sidemembers, gussets or cross-members.
- Use or modification of our nut and bolt hardware for the attachment of a body or a sub-frame (except for special cases specified in this document).
- Dismantling of brackets attached to the chassis (unless specified otherwise in this document).
- Insertion of wooden blocks between sub-frames and the chassis.


3.5 Attachment of sub-frames to brackets

3.5.1 Cab guiding and fastening zone

- A - Semi-flexible attachment (first, second and/or third brackets)
- B - Fixing plates
- C - Semi-flexible fastening position (A) in relation to front axle centre-line
- D - Lateral guiding and elastic fastening zone
- E - Plate guiding and fastening zone
- F - Sidemember height = 302 mm
- X - Front axle centre-line


(See following pages).

4x2, 4x4, 6x4, 6x6 vehicles

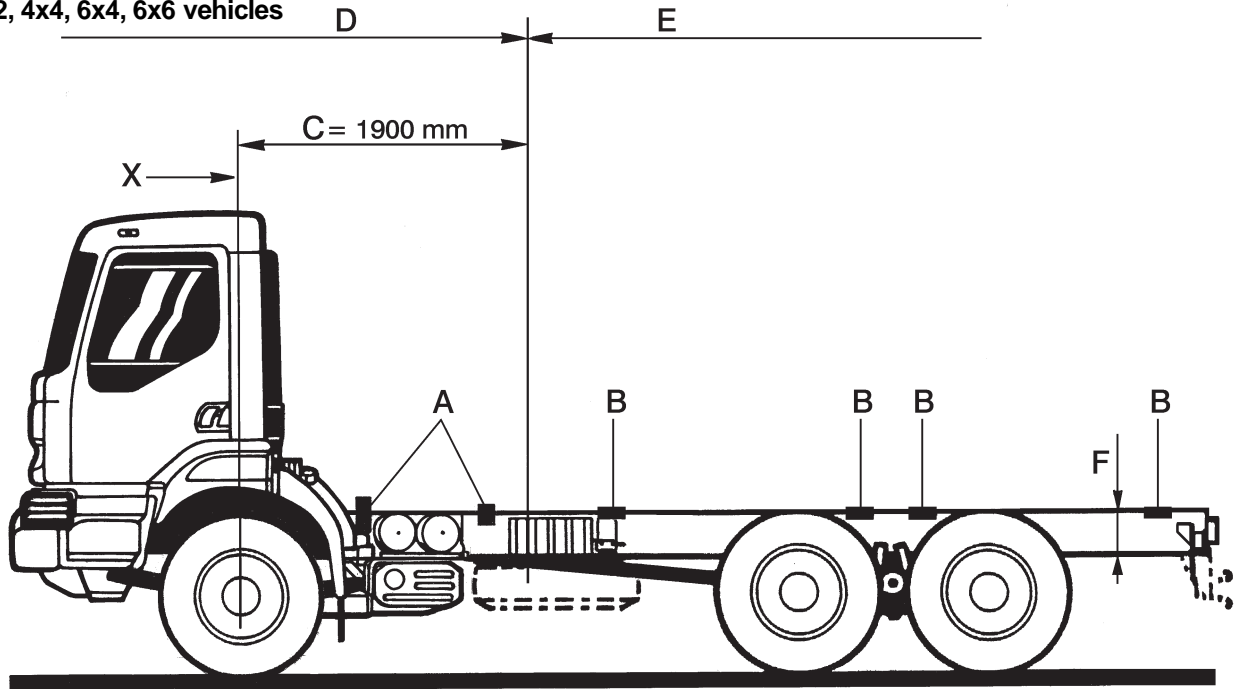

60 1274C

8x4 vehicle

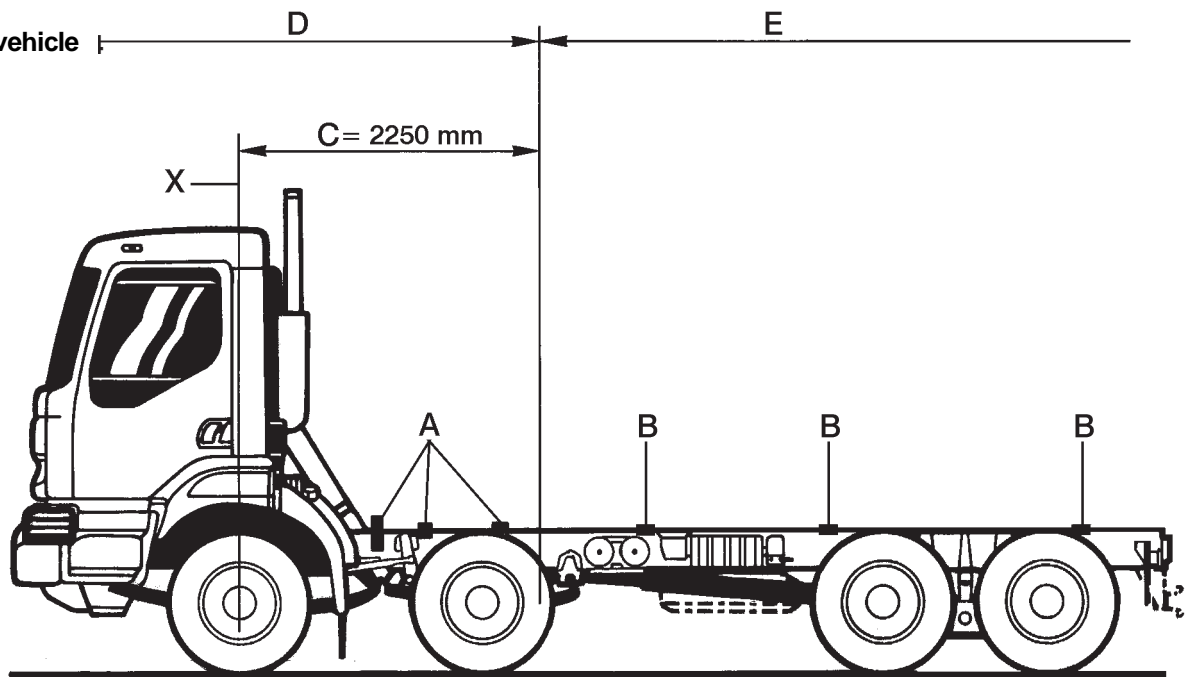

60 1275B

3.5.2 Vertical positioning of brackets

Regular and medium cabs without vertical exhaust - 4x2, 4x4, 6x4, 6x6 rigids


Two bracket assemblies are fitted on the RENAULT KERAX chassis:

- The first (A) and second (B) brackets are raised.

Regular and medium cabs without vertical exhaust - 8x4 rigid

Three bracket assemblies are fitted on the RENAULT KERAX chassis:

- The first (A), second and third (B) brackets are raised.

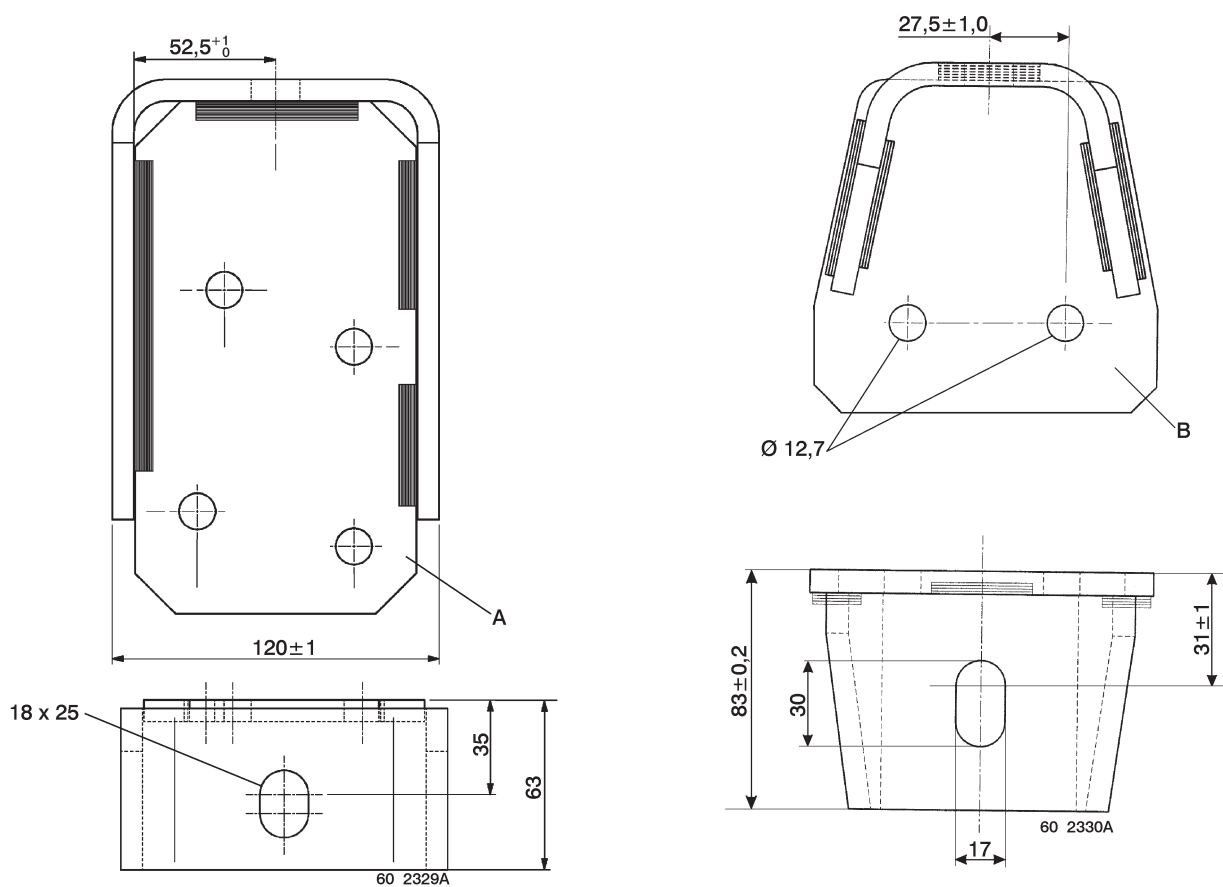

Long and medium cabs with vertical exhaust - 4x2, 4x4, 6x4, 6x6 rigids


Two bracket assemblies are fitted on the RENAULT KERAX chassis:

- The first (C) and second (B) brackets are raised.

Long and medium cabs with vertical exhaust - 8x4 rigid

Three bracket assemblies are fitted on the RENAULT KERAX chassis:

- The first (C), second and third (B) brackets are raised.

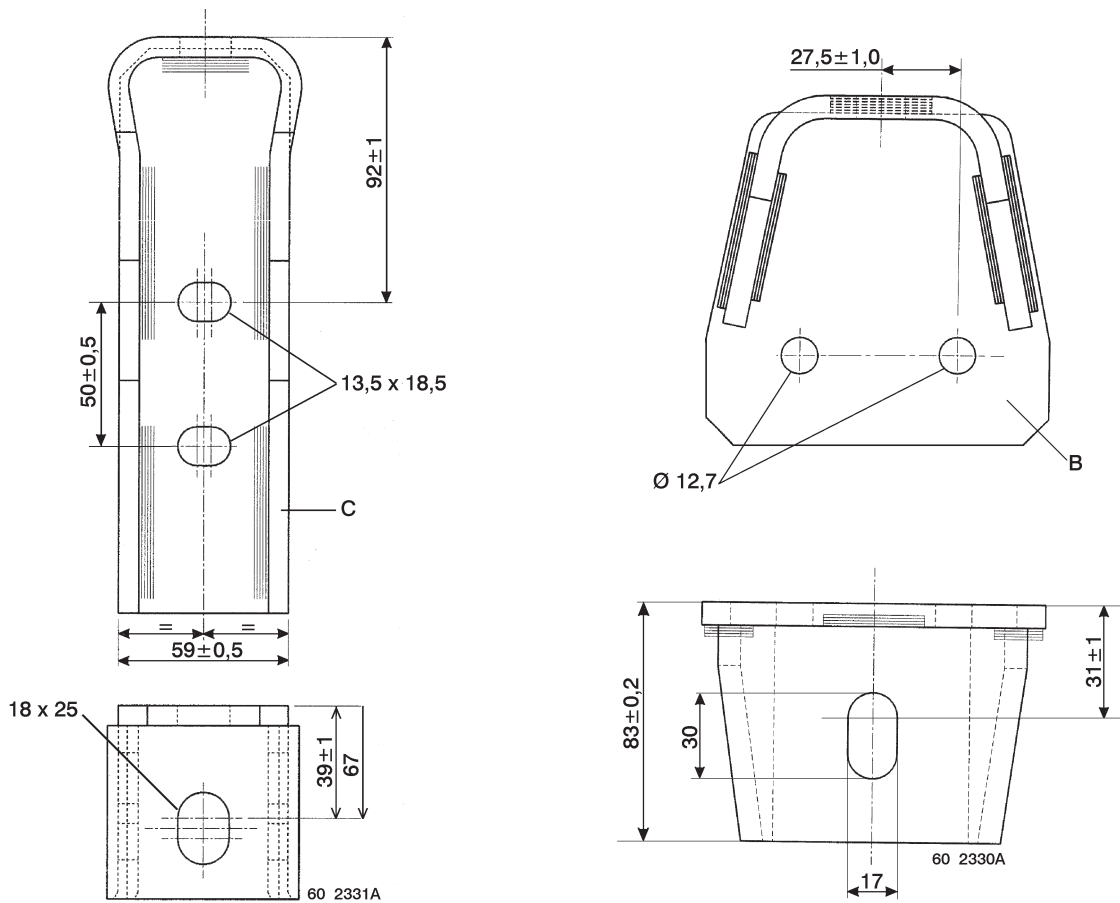


3.5.3 Assembly conditions

All the brackets are raised.

Depending on the axle spread:

- A - First bracket assembly
- B - Second or third bracket assembly
 - 3 mm protrusion for 4x4 vehicles
 - 11 mm protrusion for 6x6 vehicles
- C - First bracket assembly (* 2 m and 2.2 m cab in all cases)

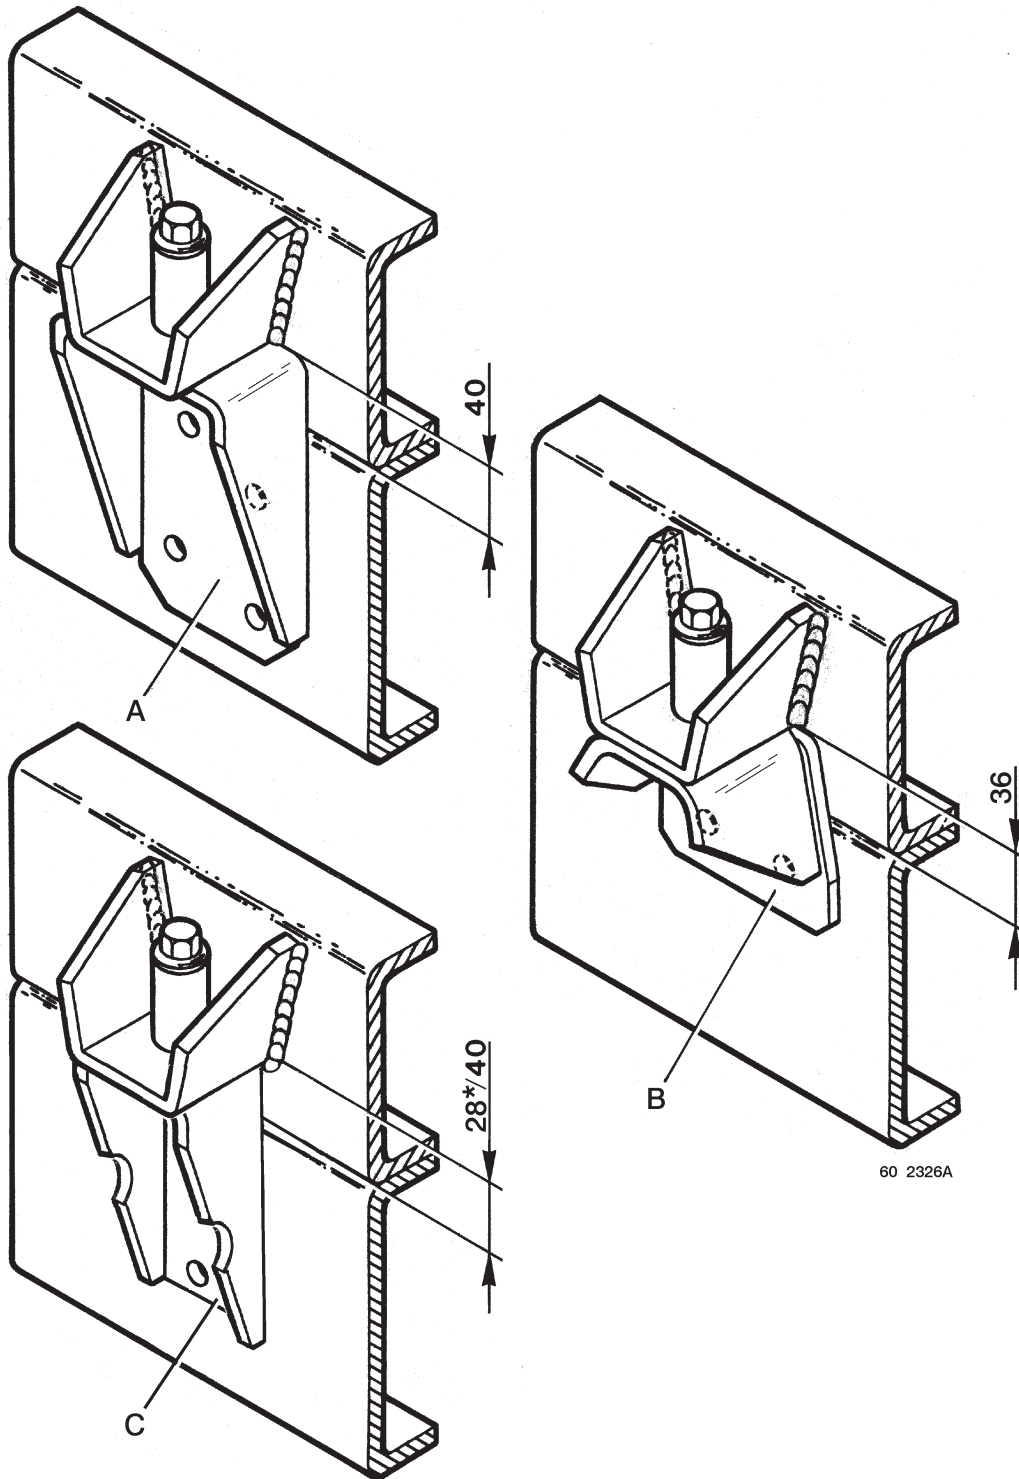

60 2326A

Semi-flexible attachment

4x2, 4x4 kit 5010562370

6x4, 6x6 kit 5010562371


8x4 kit 5010562372

Extra to kit 5010562373



- 1 - Hexagon bolt M 14 x 150 x 110, class 10.9
- 2 - 2 plain washers 14 x 30 x 5
- 3 - Steel spacer 15x38-65 (min.)
After cutting, true both faces
- 4 - Flanged nut DRH M 14 class 10 or other locknut except nut with nylon ring (e.g. Nyloc)
- a - Slight clearance before tightening
Tighten contacts to torque 20 to 30 Nm
- b - Clearance 2 mm max.

Tighten to torque: 170 Nm

Note: Give priority to attaching using a spacer positioned above the bracket.

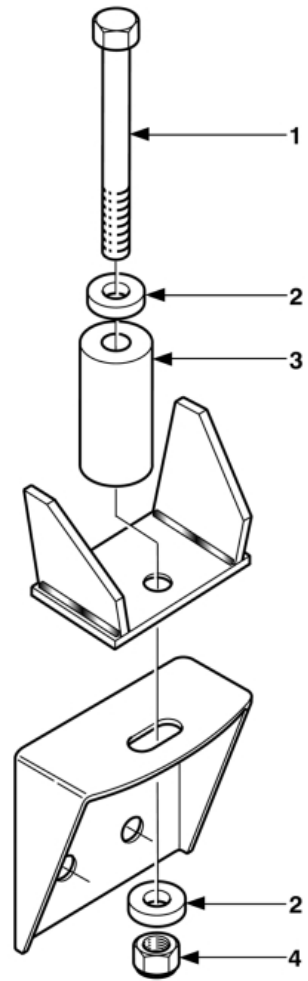


60 2559A

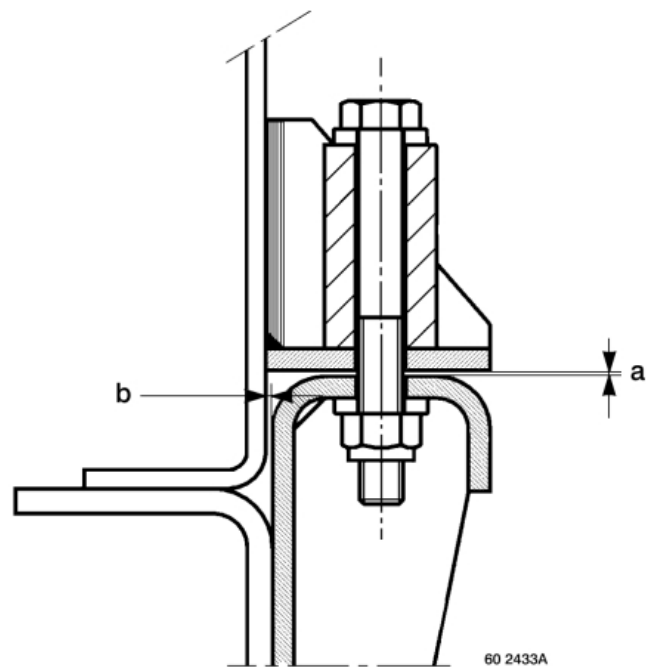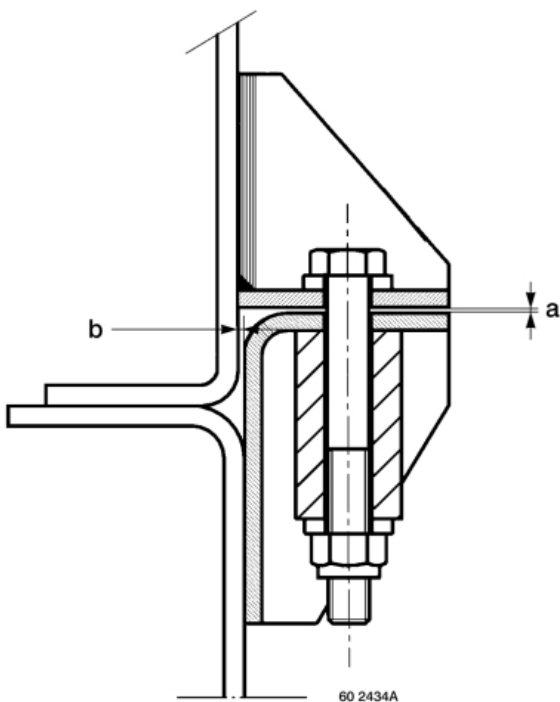


3.5.4 Body fastening plates for 4x2, 4x4, 6x4, 6x6, 8x4 vehicles


R - Lateral plate between-centres distance 55

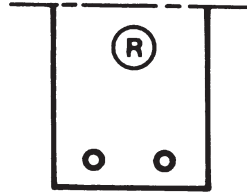


S - Lateral plate to tandem

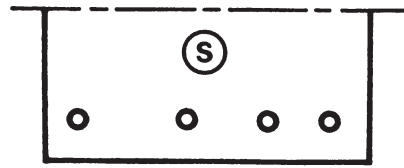


T - LH and RH lateral plate specific to elastomer suspension

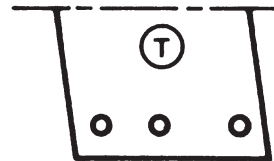

U - Rear extremity plate 10 holes

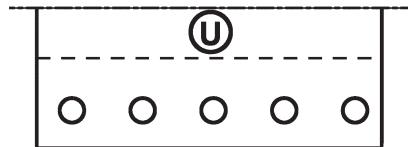

V - Rear extremity plate 10 holes

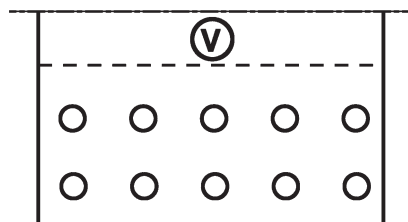

60 2293A


Plates fastening principle

Lateral plate

Sheet steel S355 MC (EN 10149-2)

General drilling tolerance ± 0.5 mm for holes between-centre distance

L = Sidemember top

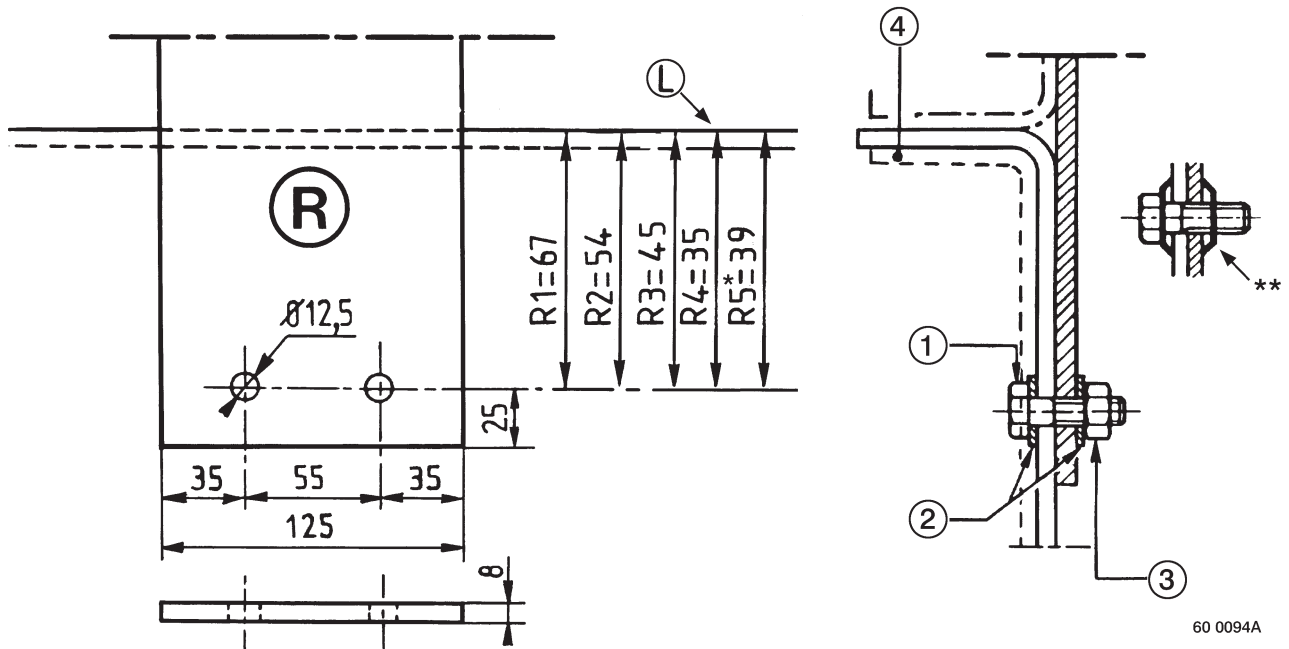

* Holes dia. 15 mm exclusively

** Direction of assembly of taper washers

For lateral plates R/S/T


1 - Hexagon bolt M 12 x 125 x 40 to 70, class 10.9

2 - 2 plain washers 12 x 30 x 3.2

3 - Hexagon nut M 12 x 125, class 10

4 - Stiffener according to type


Tighten to torque: 110 Nm

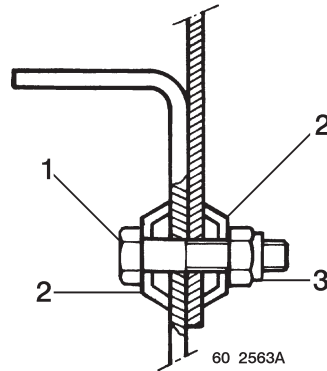

Lateral plate to tandem

Sheet steel S355 MC (EN 10149-2)

General drilling tolerance ± 0.5 mm for holes between-centre distance
L = Sidemember top

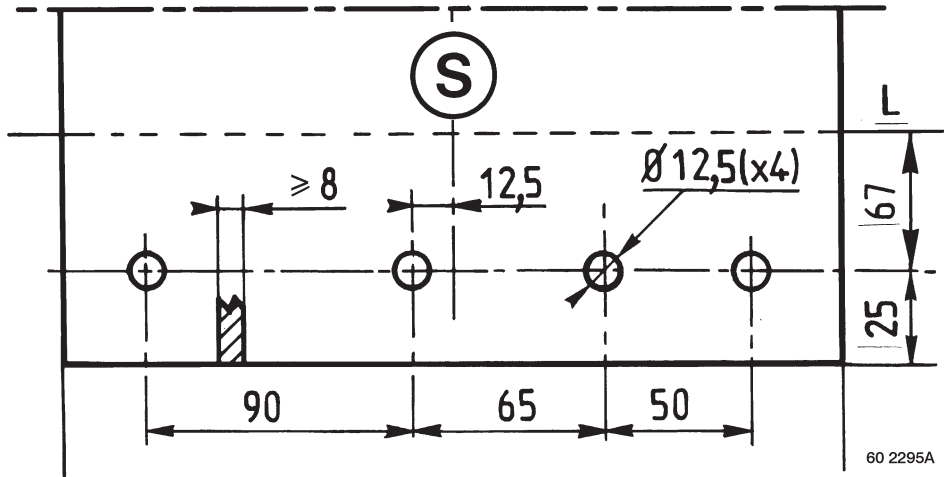


RH and LH lateral plate specific to elastomer suspension

Sheet steel S355 MC (EN 10149-2)

General drilling tolerance ± 0.5 mm for holes between-centre distance
L = Sidemember top

LH front and RH rear assembly to tandem and other parts position symmetrical.

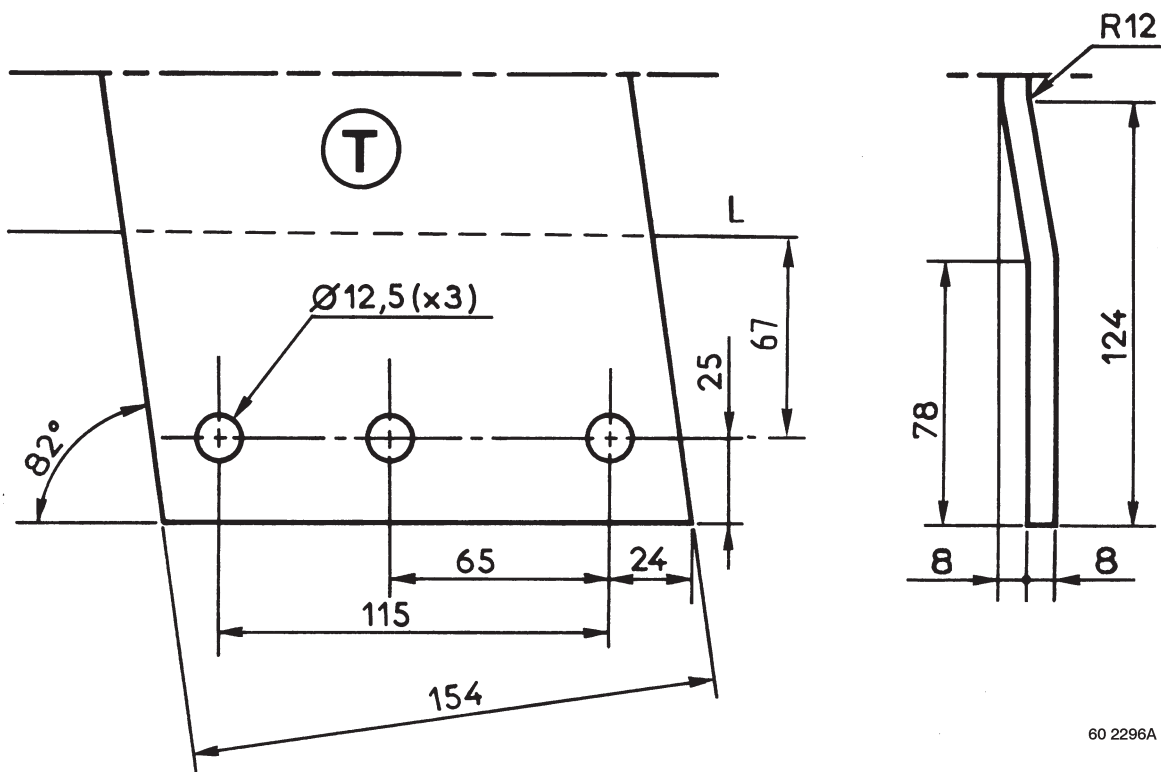

Rear extremity plate 5 holes


Sheet steel S355 MC (EN 10149-2)

General drilling tolerance ± 0.5 mm for holes between-centre distance

L = Sidemember top

A = 270 mm

Sheet metal thickness 8 mm

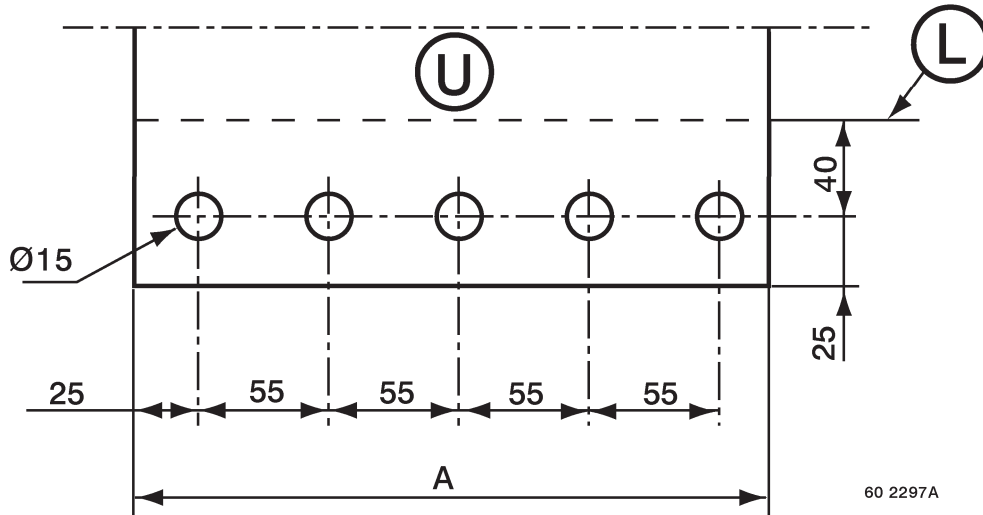

Fastening by at least 4 bolts.

Rear extremity plate 10 holes


Sheet steel S355 MC (EN 10149-2)

General drilling tolerance ± 0.5 mm for holes between-centre distance

L = Sidemember top

A = 270 mm

Sheet metal thickness 8 mm for 6x4 and 6x6, 10 mm for 8x4

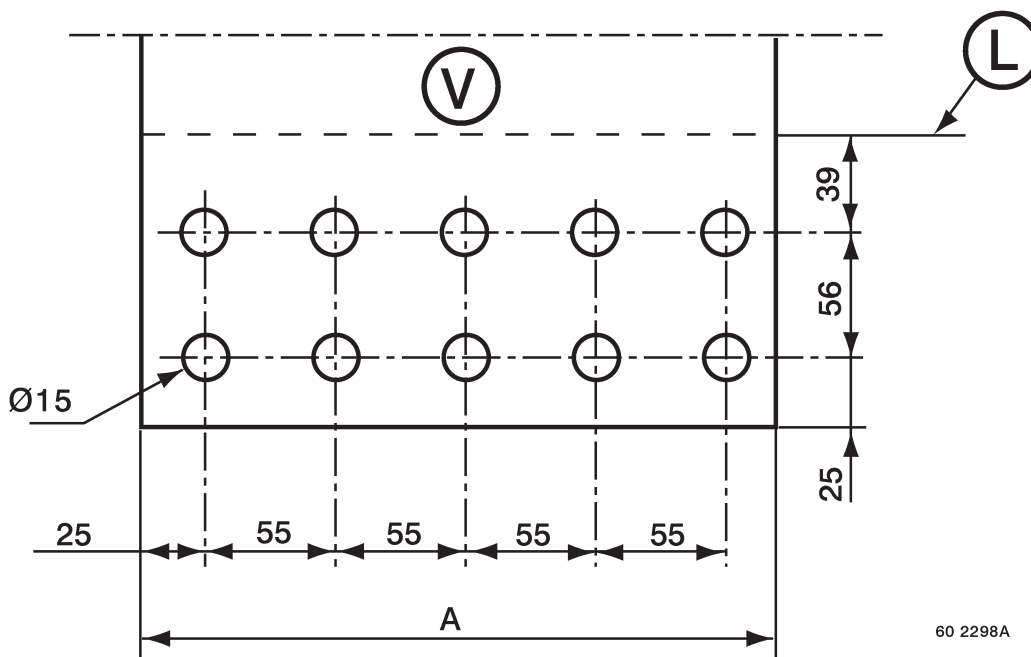

Hexagon bolt M 14 x 150, class 10.9

Plain washer 14 x 30 x 5

For lateral plates U/V

1 - Hexagon bolt M 14 x 150 x 50, class 10.9


2 - 2 plain washers 14 x 30 x 3.2

3 - Hexagon nut M 14 x 150, class 10

Tighten to torque: 170 nm

7 bolts minimum for 6x4 and 6x6

9 bolts minimum for 8x4

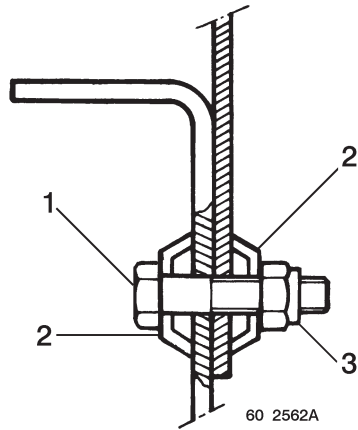

Regular cab 4x2 rigid

E	P.A.F	L	C1	C2	C3	C4	C5	C6	C7	C8	C9				
3800	1200	D	833	814	1048	760	345	310	410						
		G	771	876	968	840									
4100	1575	D	833	814	1048	1060			968			1063	720	740	405
		G	771	876	968	1140									
4500	2000	D	833	814	968	707	900	345	310	870	575				
		G	771	876		640									
5000	2300	D	833	814	968	940	1100	345	310	870	575				
		G	771	876											

P.A.F - Overhang (tandem centre-line - sidemember extremity)

D - RH sidemember

G - LH sidemember

E - Wheelbase

X - Axle centre-line

Y - Rear drive axle centre-line


Overhang

8 holes (A) for wheelbase:

- 3800 RH & LH sidemember

10 holes (A) for wheelbases:

- 4100, 4500 & 5000 RH & LH sidemember

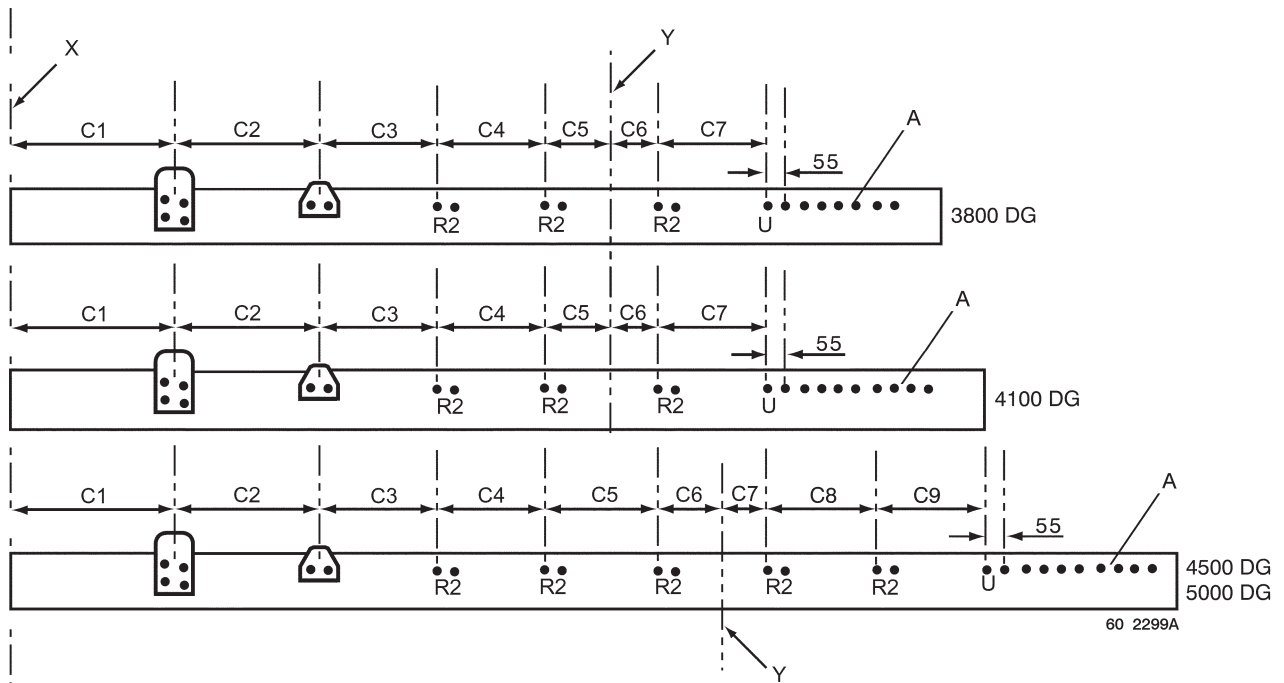

Regular cab 4x4 rigid

E	P.A.F	L	C1	C2	C3	C4	C5	C6	C7	C8	C9
3500	1150	D	833	774	752	810	331	300	420		
		G	771	836	963	599					
3800	1200	D	833	774	752	1110					
		G	771	836	1026	836					
4100	1575	D	833	774	752	650	760	331	300	730	
		G	771	836	916	647	599				
4500	2000	D	833	774	752	1050	760				
		G	771	836	951	745	866				

P.A.F - Overhang (tandem centre-line - sidemember extremity)

D - RH sidemember

G - LH sidemember

E - Wheelbase

X - Axle centre-line

Y - Rear drive axle centre-line

Overhang

7 holes (A) for wheelbase:


- 3500 RH & LH sidemember

8 holes (A) for wheelbase:

- 3800 RH & LH sidemember

10 holes (A) for wheelbases:

- 4100 & 4500 RH & LH sidemember

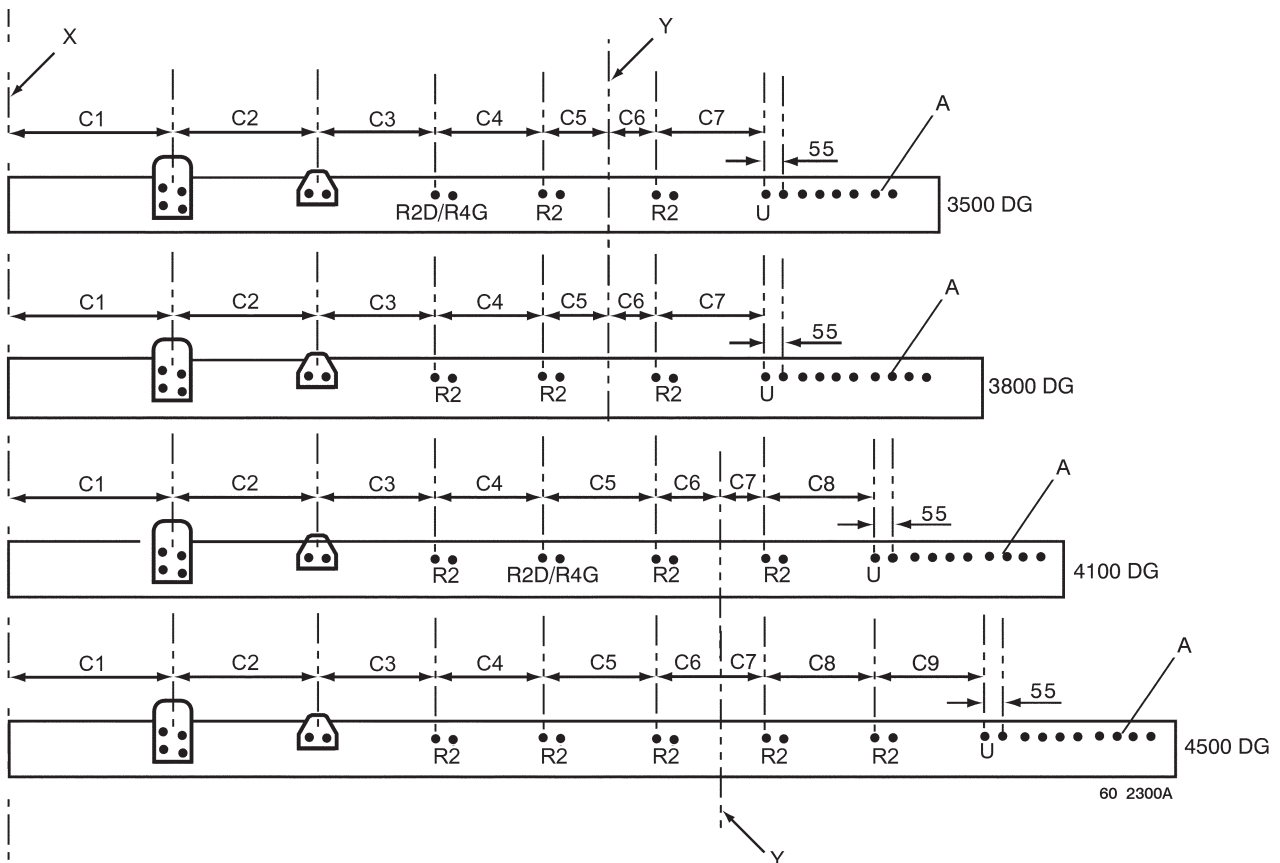

Regular cab 6x4 rigid

E	P.A.F	L	C1	C2	C3	C4	C5	C6	C7	C8	C8*	C9	C10	C11							
3150	1515	D	833	814	552	613	563			750											
		G	771	876																	
	1605	D	833	814																	
		G	771	876																	
	1850	D	833	814																	
		G	771	876																	
1925	D	833	814																		
	G	771	876																		
3500	1605	D	833	814	913	602		450	450	750											
		G	771	876																	
	1850	D	833	814																	
		G	771	876																	
	1925	D	833	814																	
		G	771	876																	
3850	1605	D	833	814	913	765	750		450	750											
		G	771	876																	
	1850	D	833	814																	
		G	771	876																	
	2560	D	833	814																	
		G	771	876																	
4200	2560	D	833	814	968	1060			750	815		795									
		G	771	876																	
4600	2560	D	833	814																	
		G	771	876																	
5000	3365	D	833	814		920		540		750					450	815		815	795	860	740
		G	771	876																	

P.A.F - Overhang (tandem centre-line - sidemember extremity)

D - RH sidemember

G - LH sidemember

E - Wheelbase

X - Axle centre-line

Y - Rear drive axle centre-line

Overhang :

5 holes (A) for wheelbase:

- 3150 RH & LH sidemember (1515 mm overhang)

7 holes (A) for wheelbase:


- 3150 RH & LH sidemember (1605 mm overhang)

- 3500 RH & LH sidemember (1605 mm overhang)

- 3850 RH & LH sidemember (1605 mm overhang)

9 holes (A) for all the others.

Regular cab 6x4 rigid

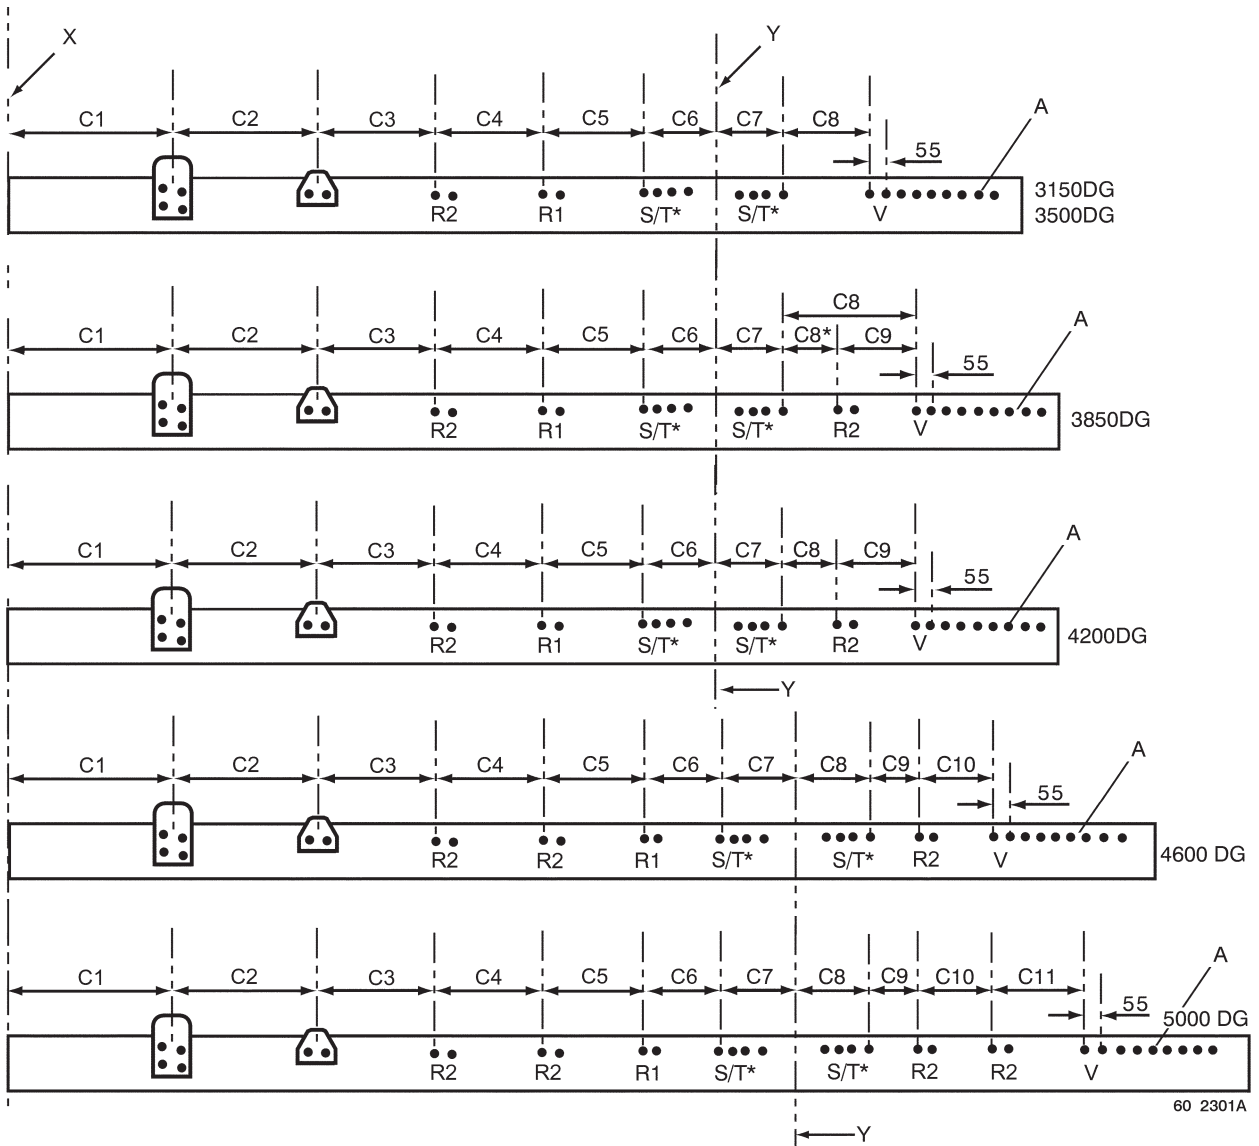

Regular cab 6x6 rigid

E	P.A.F	L	C1	C2	C3	C4	C5	C6	C7	C8	C9	C10	
3850	1605	D	833	774	1003	820	645	450	450	750			
		G	771	836									
4600	2560	D	833	774		730	840	645		450	450	815	795
		G	771	836									

P.A.F - Overhang (tandem centre-line - sidemember extremity)

D - RH sidemember

G - LH sidemember

E - Wheelbase

X - Axle centre-line

Y - Rear drive axle centre-line


Overhang :

7 holes (A) for wheelbase:

- 3850 RH & LH sidemember

9 holes (A) for wheelbase:

- 4600 RH & LH sidemember

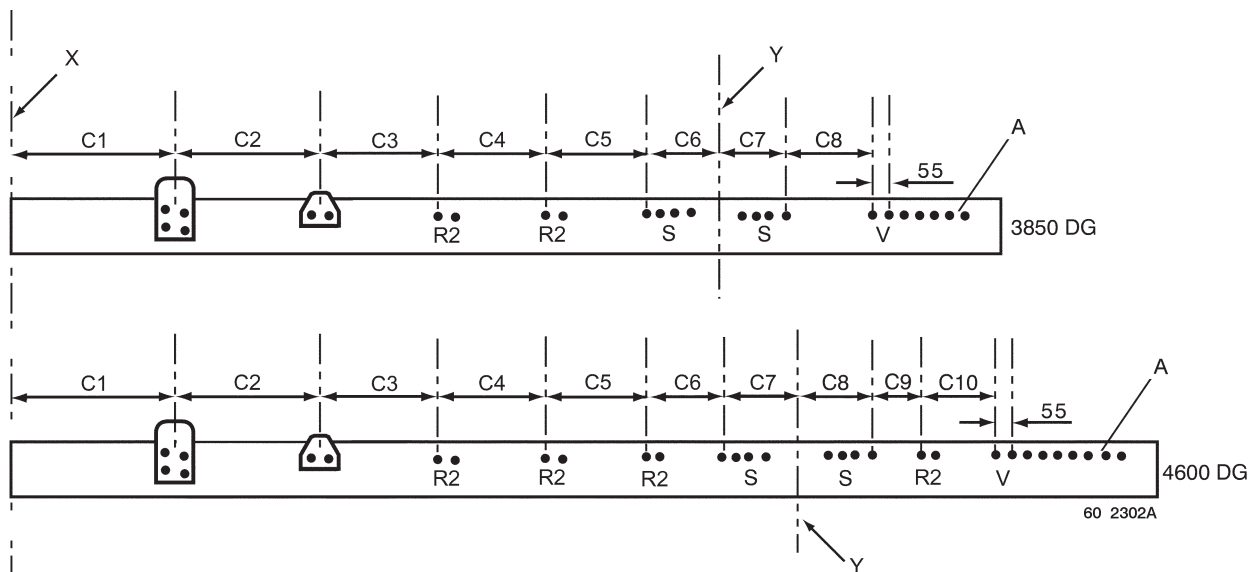

Regular cab 8x4 rigid


E	P.A.F	L	C1	C2	C3	C4	C5	C6	C7	C8	C9	C10	C11	C12	C13										
4200	1515	D	833	642	712	373	1115	750	450	450	750														
		G	829	646		483	1005																		
	1605	D	833	642		373	1115																		
		G	829	646		1005																			
4550	1605	D	833	642		483	1091	1014		450															
		G	829	646																					
5063	1605	D	833	642			483	1100	768	750				750											
		G	829	646				893	975																
	3007	D	833	642				1100	768					1025				1033							
		G	829	646				893	975																
5365	1605	D	833	642				483	1100	610	460		450												
		G	829	646					893	687	590														
5665	1605	D	833	642	483				1100	610	760								750			750			
		G	829	646					893	687	890														
	2700	D	833	642					1100	610	760	915	835												
		G	829	646					893	687	890														
6160	2202	D	833	642		483			1100	610	577	678	750		450	750	502								
		G	829	646					893	687	707														

P.A.F - Overhang (tandem centre-line - sidemember extremity)
 D - RH sidemember
 G - LH sidemember
 E - Wheelbase
 X - Axle centre-line
 Y - Rear drive axle centre-line

Overhang :

- 5 holes (A) for wheelbase:
 - 4200 RH & LH sidemember (1515 mm overhang)
 - 5365 RH & LH sidemember (1605 mm overhang)
 7 holes (A) for wheelbase:
 - 4200 RH & LH sidemember (1605 mm overhang)
 - 4550 RH & LH sidemember (1605 mm overhang)
 - 5063 RH & LH sidemember (1605 mm overhang)
 - 5665 RH & LH sidemember (1605 mm overhang)
 9 holes (A) for all the others.


Regular cab 8x4 rigid

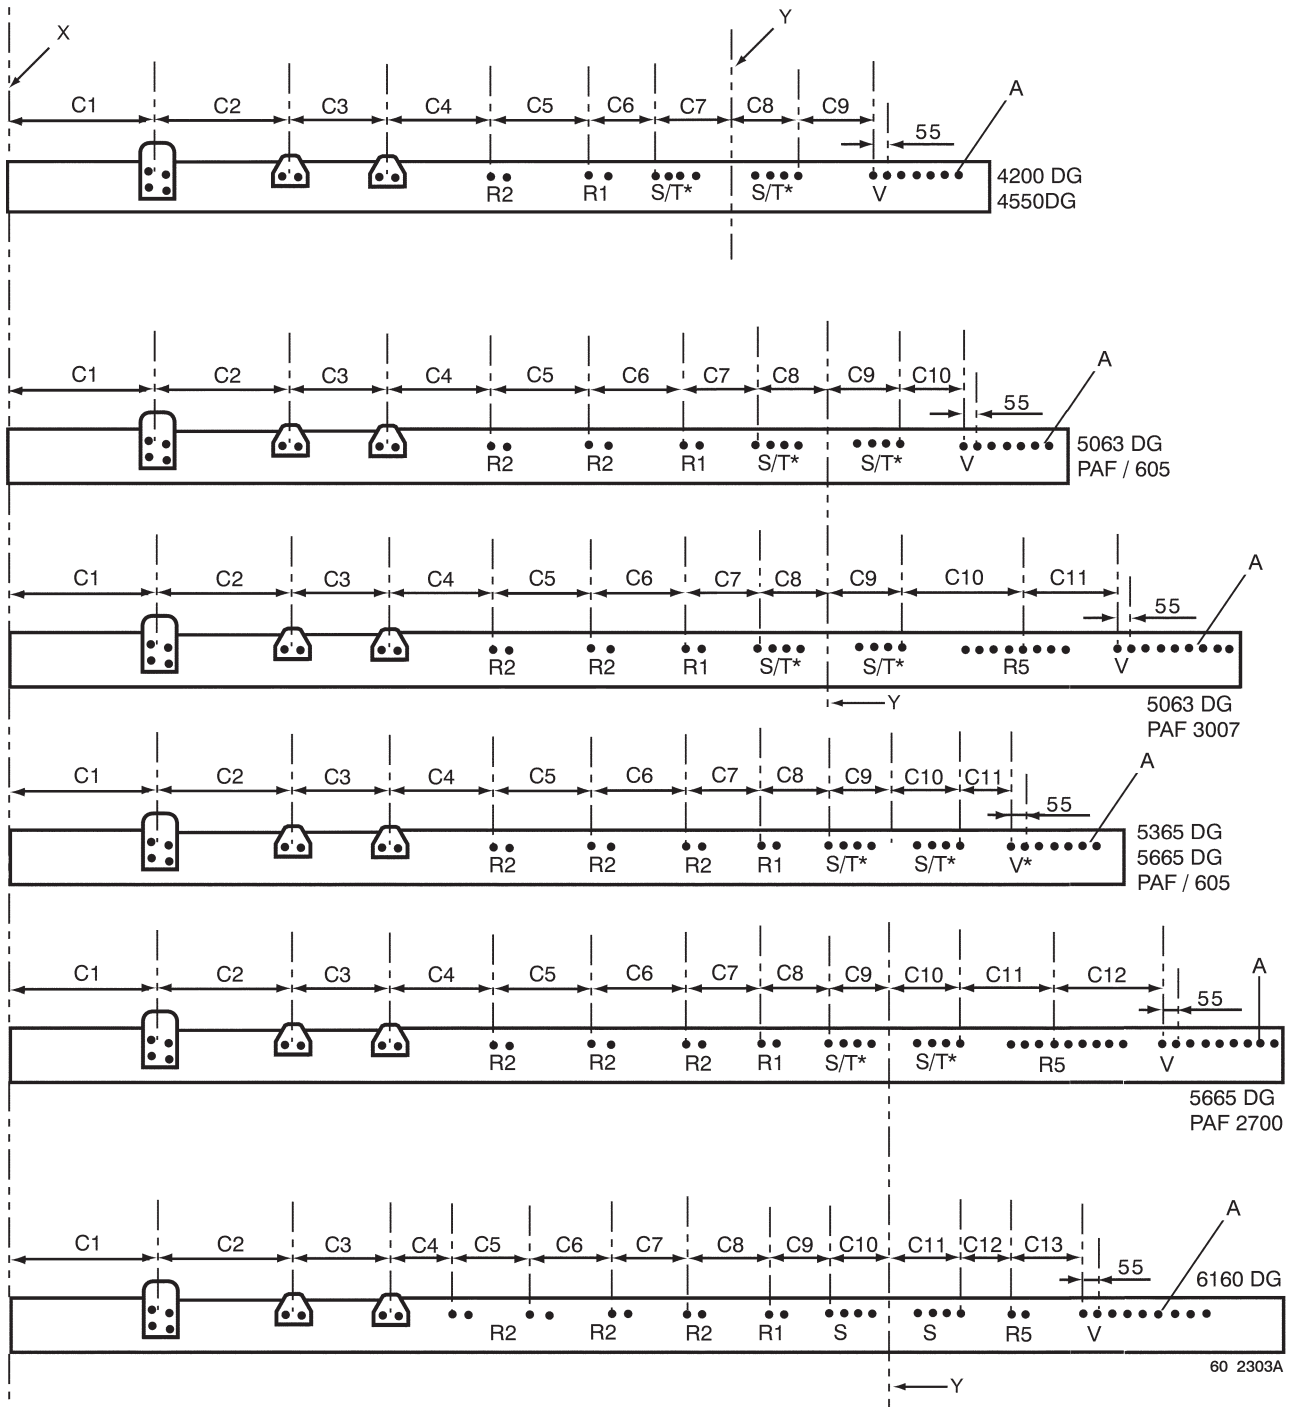

4x2, 4x4, 6x6 rigid

On medium cabs, vertical exhaust and long cabs, only the position of the first bracket is different - in the entire zone (A), the positions of the brackets are identical to those on regular cabs (see preceding pages).


* medium cab with vertical exhaust exclusively
(A) identical to each regular cab axle spread

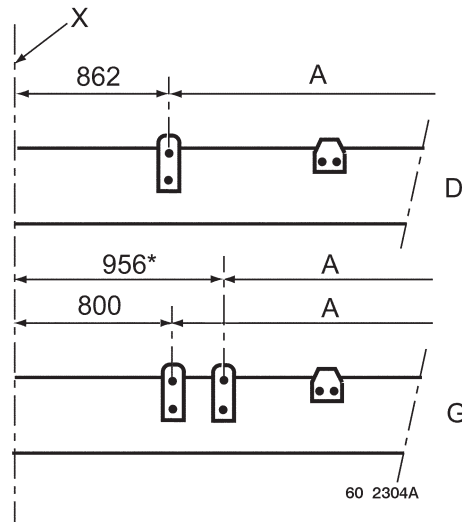

8x4 rigid

On medium cabs, vertical exhaust and long cabs, only the position of the first bracket is different - in the entire zone (A), the positions of the brackets are identical to those on regular cabs (see preceding pages).


(A) identical to each regular cab axle spread

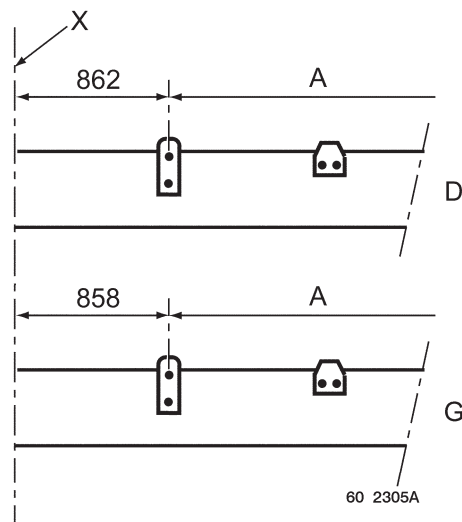

3.5.5 Sub-frame sections

Minimum height in relation to range of movement of suspensions

Protrusion of tyres above the sidemembers, to be taken into account when determining the sub-frame heights. A minimum sub-frame height is dictated by the range of movement of the rear suspension. The employment of a sub-frame with insufficient height has as consequence potential damage to the bodywork of equipment due to friction from the rear tyres.

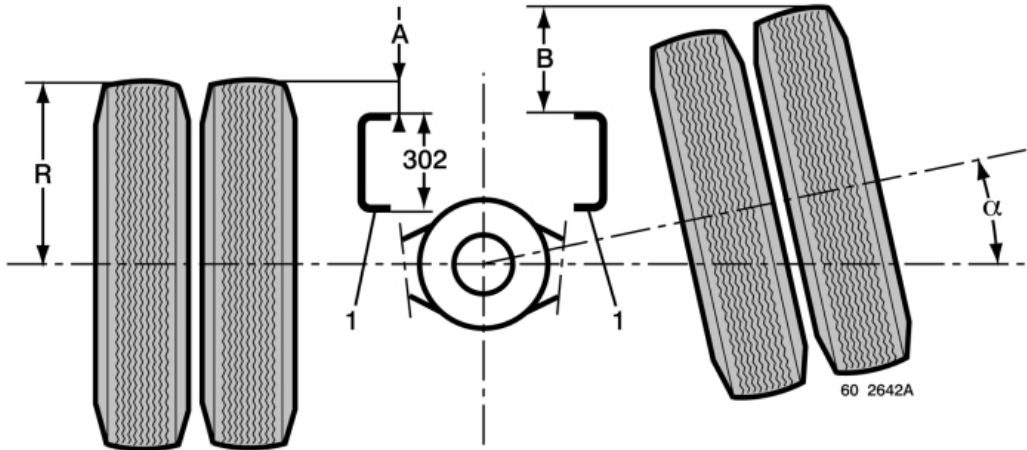

R = Free radius
1 - Chassis

	Height above sidemember							
	4x2	4x4	6x4 – 8x4 $\alpha = 12^\circ$ Tandem 3041		6x4 – 8x4 $\alpha = 13^\circ$ Tandem 3045		6x6 $\alpha = 13^\circ$ Tandem 3045	
Tyres	B	B	A	B	A	B	A	B
11R22.5	X	X	98	251	98	238	X	X
12R22.5	X	X	115	268	115	255	X	X
13R22.5	180	108	135	288	135	275	51	191
12.00R20	X	X	134	287	134	274	50	190
12.00R24	X	X	X	X	182	322	102	242
275/80R22.5	X	X	79	232	79	219	X	X
295/80R22.5	X	X	95	248	95	235	X	X
315/70R22.5	X	X	80	233	80	220	X	X
315/80R22.5	X	X	111	263	111	250	27	166
365/85R20	X	X	X	X	X	X	53	192
385/65-13R22.5	X	X	119	268	119	255	X	X
395/85R20	X	X	X	X	X	X	79	216

ELECTRICAL PRE-ARRANGEMENTS

4. ELECTRICAL PRE-ARRANGEMENTS

4.1 Available power supplies

The electrical pre-arrangements are necessary to obtain certain functions (e.g. special machine warning light) and contribute towards improved assembly quality for optimized cost price.

Any electrical connection must mandatorily be made to the available power supplies made available by RENAULT TRUCKS.

It is forbidden to make an electrical tapping to the different wiring harnesses on the vehicle.

Use and adapt the connectors and wiring harnesses approved and distributed by RENAULT TRUCKS.

The cable sections must be adapted to the required use (5 Amps per mm²).

Comply with the circuit protections recommended by RENAULT TRUCKS.

It is forbidden to change the rating of the fuses.



4.2 Electrical pre-arrangements

In the cab on the dashboard

- Two switches with warning light:
 - (1): vehicle interior lighting,
 - (2): equipment power supply, machine unlocking.

In the cab on the display

- Four pictograms integrated in the instrument panel are dedicated to the bodybuilder function:
 - pictogram (3): tailgate in working position (coupled to stop light and tripping of buzzer if road speed above 5 km/h),
 - pictogram (4): chassis equipment alert (available to bodybuilder, coupled to stop light).
 - pictogram (5): sideboard open (coupled to stop light and tripping of buzzer if road speed above 5 km/h),
 - pictogram (6): tipper raised (coupled to stop light and tripping of buzzer if road speed above 5 km/h).
- Display of pictograms:
 - pictograms (3) & (6) are displayed when the corresponding wires are connected to earth:
 - pictogram (3): wire 651 on the black connector, on stand-by in connection unit,
 - pictogram (6): wire 8087 on the black connector, on stand-by in connection unit,
 - pictogram (4) is displayed when the wire 8084 is connected to "+" 24V.
 - pictogram (5) is displayed when the wire 8086 is connected to "+" 24V.

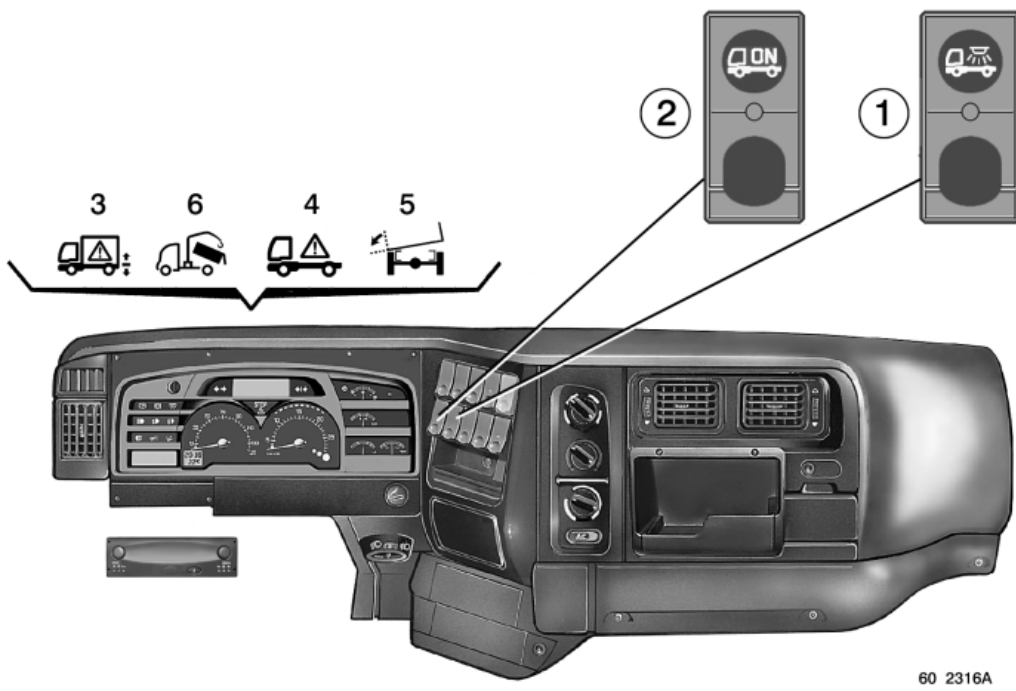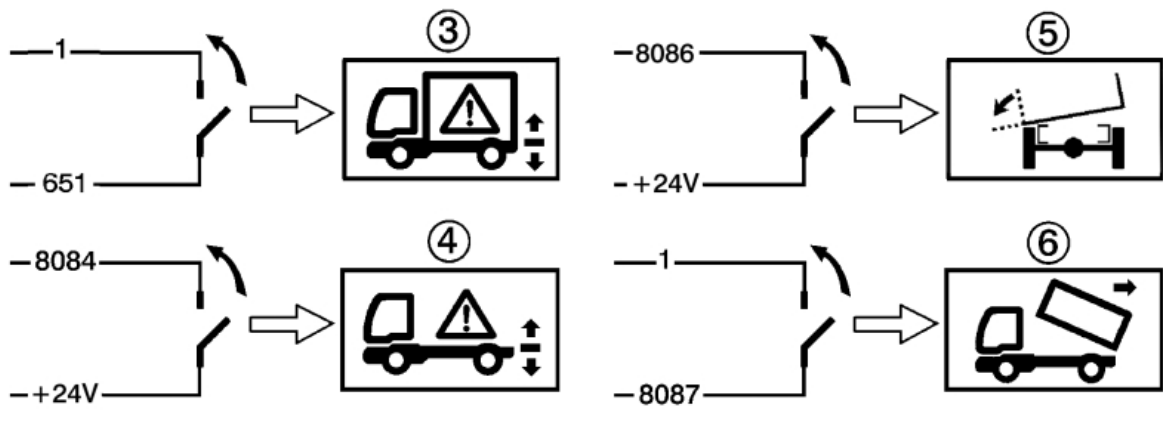


60 2316A

Available power supplies in the cab on the connection unit

One green connector (**A**) on stand-by delivers cab available power supplies:

- wire 045: variable engine speed, reduction in engine speed (in speed regulation mode regulated by earthing),
- wire 047: variable engine speed, increase in engine speed (in speed regulation mode regulated by earthing),
- wire 088: PTO N°1 speed
- wire 208: after master switch "+" power supply
- wire 618: chassis lighting (10A) "+" power supply, controlled by chassis lighting switch
- wire 651: pictogram (3) display (see preceding pages)
- wire 1025: variable engine speed, zero speed information (earth if parking brake activated),
- wire 1026: PTO N° 2 speed
- wire 1141: PTO N° 3 speed
- wire 8067: available power supply (fast idling),
- wire 8083: equipment "+" power supply, controlled by machine unlocking switch
- wire 8084: pictogram (4) display (see preceding pages)
- wire 8086: pictogram (5) display (see preceding pages)
- wire 8087: pictogram (6) display (see preceding pages)

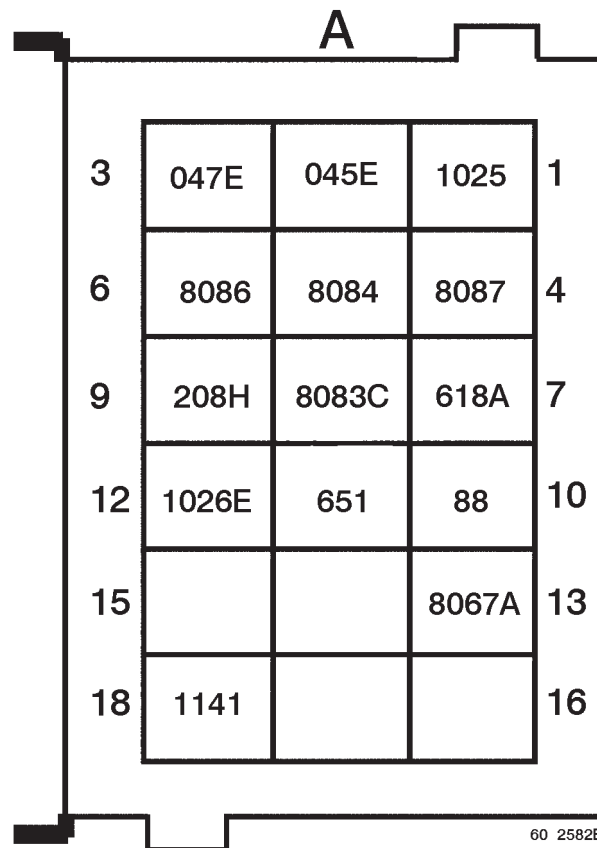

Assembly

Parts to be used, available from the RENAULT TRUCKS Spare Parts department:

- connector, ref. N° 5010 214 969
- secondary lock, ref. N° 5010 480 368
- clips:
 - wire section 0.6 to 1 mm², ref. N° 5010 214 345
 - wire section 1 to 2 mm², ref. N° 5010 214 346

Possibility of passing a wiring harness through the gap (1) left under the connection unit.

It is recommended to fasten the wiring harness of connector (**A**) with a Colson cable tie, using the hole (2) located on the connector angle-bracket.

Available power supplies in the cab on the connection unit

One grey connector (B) on stand-by delivers cab available power supplies:

- wire 1: earth
- wire 275: after ignition "+" power supply

Assembly



Parts to be used, available from the RENAULT TRUCKS Spare Parts department:

- connector, ref. N° 5010 293 074
- contact (0.9 to 3.1 mm²), ref. N° 5010 347 347
- contact (2.9 to 6 mm²), ref. N° 7701 997 034
- contact (5.9 to 10 mm²), ref. N° 7701 997 035

Available power supplies in the cab in the overhead ledge

Two wires (C) on stand-by deliver ledge available power supplies:

- wire 1: earth
- wire 305: marker lights power supply

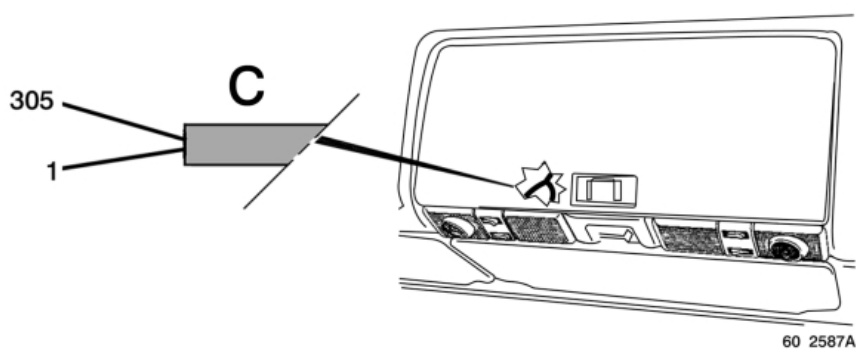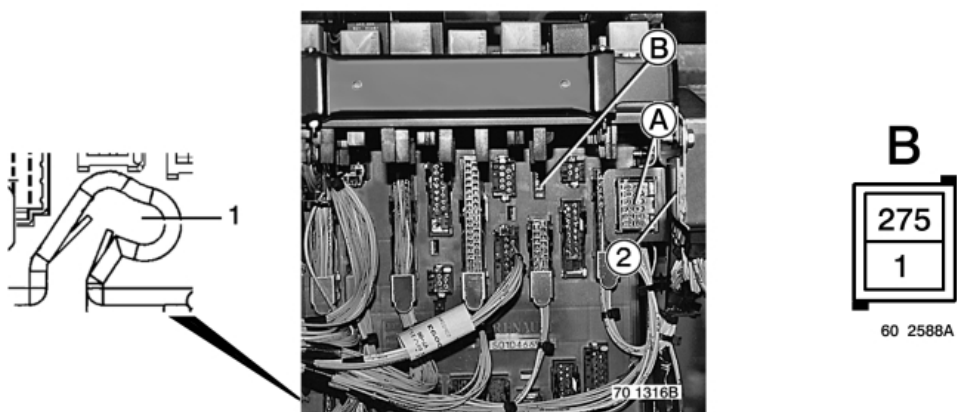




In the battery compartment

- Seven wires on stand-by (D) in the battery compartment:
 - wire 1: earth (2 mm²)
 - wire 208: after master switch “+” power supply
 - wire 275: after ignition “+” power supply
 - wire 632: available power supply (bodybuilder equipment control)
 - wire 2057: alarm info
 - wire 1: earth (5 mm²)
 - wire 0403: alarm info (rigid body perimetric protection box)

In the right-hand sidemember

Two wires (E), under the rear cross-member, on stand-by deliver chassis available power supplies:

- wire 1: earth
- wire 632: “+” power supply, side/parking lights

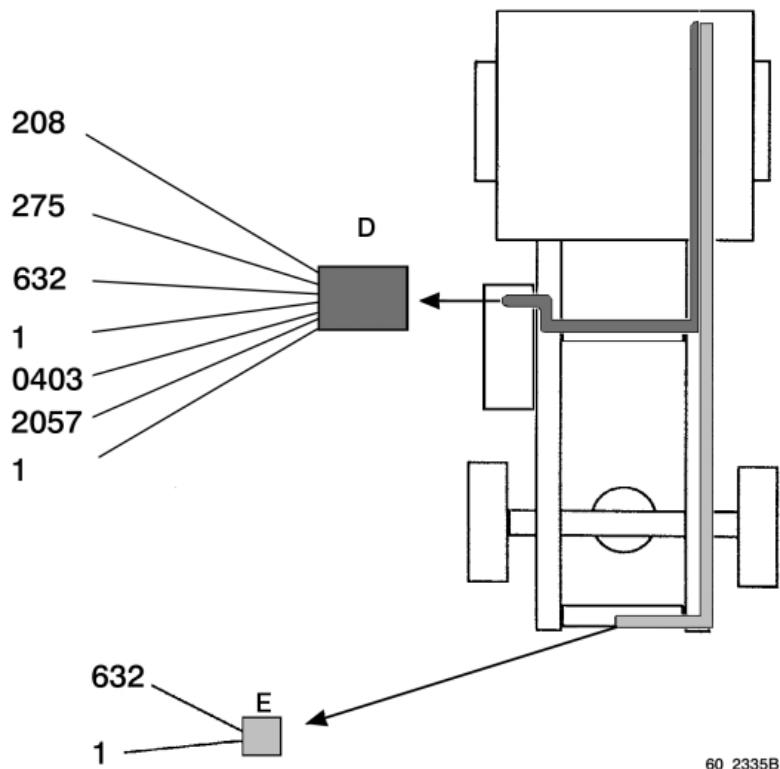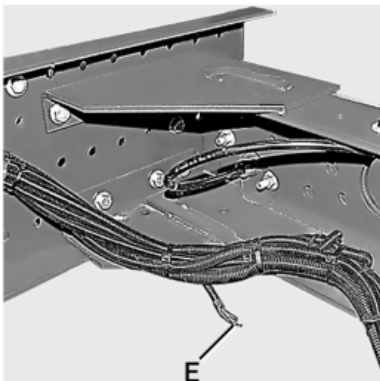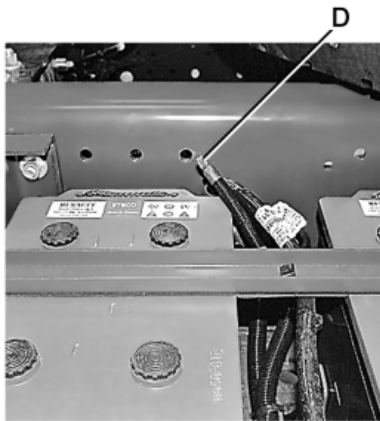

60 2335B

4.3 Management of engine speed

There are 2 ways of operating the fast idling mode:

- by the steering wheel fingertip control,
- by the variable speed controls.

4.4 Power take-off wiring

4.4.1 Vehicle fitted with one PTO

When the vehicle is equipped with a power take-off, the procedure for engaging it is unchanged (see Driving handbook).

It is possible to choose between two pre-programmed speeds according to the vehicle use (see following table).

If wires 88 and 1026 are not connected, PTO speed 1 is activated.

If wires 88 and 1026 are connected, PTO speed 2 is activated.

- A) Determining the rotating speed

When the vehicle is equipped with a power take-off, engagement of the PTO causes earthing of wire 88 corresponding to a regulation speed.

Engagement of PTO = earthing of wire 88

For other regulation speeds, it is necessary to connect wires 1026 and/or 1141 to earth.

Engagement of PTO alone (wire 88 earthed) =
Regulation at 1st regulation speed,
PTO A speed of RENAULT TRUCKS diagnostics tool (DIAGNOSTICA)
OR
Engagement of PTO and wires 88 and/or 1026 and/or 1141 earthed =
Regulation at 2nd, 3rd or 4th regulation speed

Note:

- Wires 1026 and 1141 can be connected to earth from the chassis pre-arrangement.
- Engagement of the PTO can be simulated by earthing wire 88.


- B) Using the chassis-mounted fast idling variable speed control

Variable chassis-mounted speed control (example of connection)

- Install a single-function switch (1) between wires 1025 and 045.
- Install a single-function switch (2) between wires 1025 and 047.

When switch (1) is closed, the engine speed increases.

When switch (2) is closed, the engine speed decreases.

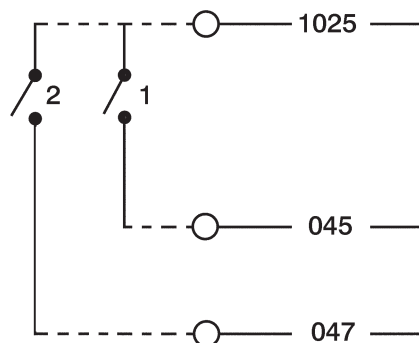

60 2194A

It is possible to install a single-function 3-position switch to avoid having to use the two acceleration and deceleration controls at the same time.

Upon the first pulse on one of the two controls, the engine passes to the pre-programmed speed, then the engine speed is adjusted by means of the controls.


IMPORTANT

All the chassis-mounted controls are doubled up on the steering wheel fingertip controls.

- C) Controlling speed regulation without cruise control (e.g. demand for fast idling)

The earthing of wire 8067 is used either as demand for compacting for refuse collectors or as demand for engagement of PTO A for vehicles equipped with ASTRONIC gearbox and allows regulation of the rotating speed from the chassis.

This thus replaces moving the steering wheel fingertip control ring to the ON position.

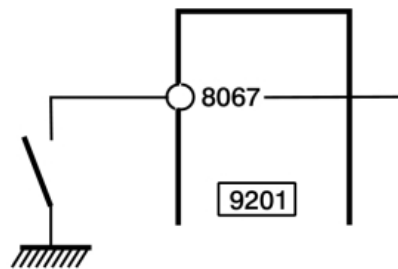

60 2623A

4.4.2 Vehicle fitted with two PTOs

- A) Determining the rotating speed

When the vehicle is provided with two PTOs, engagement of the 1st PTO causes earthing of wire 88 corresponding to a regulation speed and engagement of the 2nd PTO causes earthing of wire 1026 corresponding to a different regulation speed.

Engagement of PTO A = earthing of wire 88
Engagement of PTO B = earthing of wire 1026

If both PTOs are engaged at the same time (and therefore if wires 88 and 1026 are earthed at the same time), regulation will be made at the lowest regulation speed.

Earthing of wire 88 = Regulation of PTO A at two regulation speeds
of RENAULT TRUCKS diagnostics tool (DIAGNOSTICA)
OR
Earthing of wire 1026 = Regulation of PTO B at two regulation speeds
of RENAULT TRUCKS diagnostics tool (DIAGNOSTICA)
OR
Two PTOs engaged =
Regulation at lowest regulation speeds
of RENAULT TRUCKS diagnostics tool (DIAGNOSTICA)
(as a function of the combination of the earthing of wires 88 and/or 1026 and/or 1141)

- B) Using the chassis-mounted fast idling variable speed control

(See chapter 4.4.1 – B).

- C) Controlling speed regulation without cruise control

(See chapter 4.4.1 – C).

4.4.3 Vehicle fitted with three PTOs

- A) Determining the rotating speed

When the vehicle is provided with three PTOs, engagement of the 1st PTO causes earthing of wire 88 corresponding to a regulation speed and engagement of the 2nd PTO causes earthing of wire 1026 corresponding to a different regulation speed and engagement of the 3rd PTO causes earthing of wire 1141.

Engagement of PTO A = earthing of wire 88
Engagement of PTO B = earthing of wire 1026
Engagement of PTO C = earthing of wire 1141

If the three PTOs are engaged at the same time (and therefore if wires 88, 1026 and 1141 are earthed at the same time), regulation will be made at the lowest regulation speed.

Earthing of wire 88 = Regulation of PTO A at regulation speed of RENAULT TRUCKS diagnostics tool (DIAGNOSTICA)
OR
Earthing of wire 1026 = Regulation of PTO B at regulation speed of RENAULT TRUCKS diagnostics tool (DIAGNOSTICA)
OR
Earthing of wire 1141 = Regulation of PTO C at regulation speed of RENAULT TRUCKS diagnostics tool (DIAGNOSTICA)
Two or three PTOs engaged =
Regulation at lowest regulation speeds of RENAULT TRUCKS diagnostics tool (DIAGNOSTICA)
(as a function of the combination of the earthing of wires 88 and/or 1026 and/or 1141)

- B) Using the chassis-mounted fast idling variable speed control

(See chapter 4.4.1 – B).

- C) Controlling speed regulation without cruise control

(See chapter 4.4.1 – C).

4.4.4 Vehicle fitted with one engine rear PTO or no PTOs at all

In this case, it is the bodybuilder who will earth wires 88 and/or 1026 and/or 1141 according to the situation.

- A) Determining the rotating speed

When the vehicle is not provided with any PTO, to declare the desired regulation speed, it is necessary to earth the corresponding wires 88, 1026 and/or 1141, where each combination corresponds to a different regulation speed.

1, 2 or 3 wires earthed (wires 88 and/or 1026 and/or 1141) =
Combination corresponding to one regulation speed

Note:

These wires can be earthed from the chassis pre-arrangement.

IMPORTANT

For modification to the regulation speeds, it is necessary to consult your RENAULT TRUCKS dealer, who will change the settings using the diagnostics tool (Diagnostica).

4.5 Use of the steering wheel fast idling fingertip control

Move the ring (1) to the "ON" position (except refuse collectors).

To vary the idling speed, turn the ring (2) to bring "R+" or "S-" opposite the mark (3), then release it.


Depress the accelerator pedal to bring the engine to the required engine speed and in this position, turn the ring (2) to bring "S-" opposite the mark (3) so as to memorize the speed, then release it.

Release the accelerator pedal.

To fine tune the engine speed:

- Turn ring (2) to bring "R+" opposite the mark (3) to increase the speed.
- Turn ring (2) to bring "S-" opposite the mark (3) to reduce the speed.

Any action on the brake pedal or any gearshifting or moving the ring (1) to the "OFF" position overrides the feature.

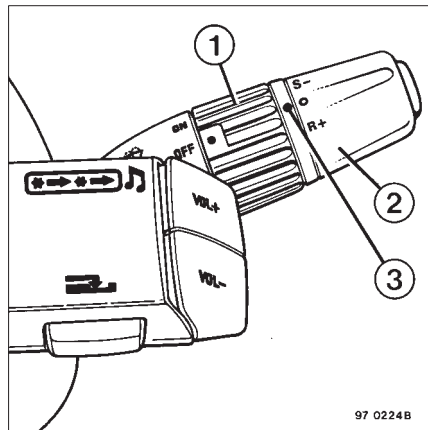

4.5.1 Vehicle fitted with a power take-off

When the PTO is in operation, move the ring (1) to the "ON" position. The first action on the ring (2) ("S-" or "R+") calls up the works set engine rotating speed (1200 rpm) (or 950 rpm for vehicles equipped with a second PTO).

Rotating speed

In the event of hydraulic pump drive, do not exceed the rotating speed indicated by the equipment manufacturer.

The engine speed is limited to 1500 rpm by the works setting.

Depending on the equipment fitted by the equipment manufacturer, this engine speed can be modified by means of the RENAULT TRUCKS test tool.

IMPORTANT

Avoid actuating the accelerator pedal during the use of the fast idling feature.

4.6 Engine speed information

It is possible to retrieve engine speed information by connecting up to terminal W (A) of the alternator.

- Drive ratio of engine with capacity higher than 6 litres: 3.2


Lugs used on terminal W:

The nut type lug is recommended for ease of use and quality (resistance to fatigue and vibration).

- Nut lug M4: 5010 306 473, 5010 480 479, 5010 306 616

- Nut lug M5: 5010 306 474, 5010 306 617

- Nut lug M6: 5010 306 579, 5010 480 495

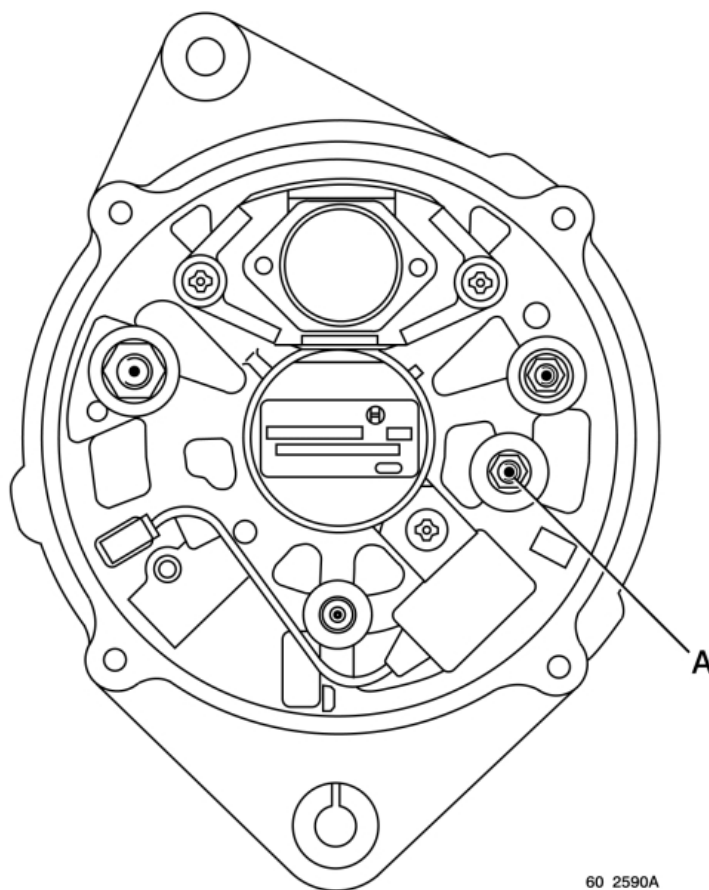


60 2590A

4.7 Chassis-mounted starting and stopping controls

Non-standard equipment is available (engine starting box ref. N° 5010 567 213) where you will find a second connector (A) identical to the one shown in chapter 4.2 and located in the same surroundings.

- At terminal 13 – wire 0002
- At terminal 14 – wire 0003
- At terminal 15 – wire 292
- At terminal 18 – wire 2920
- 1 – Engine starting pushbutton
- 2 – Engine stopping pushbutton
- 3 – Starting authorization tell-tale light

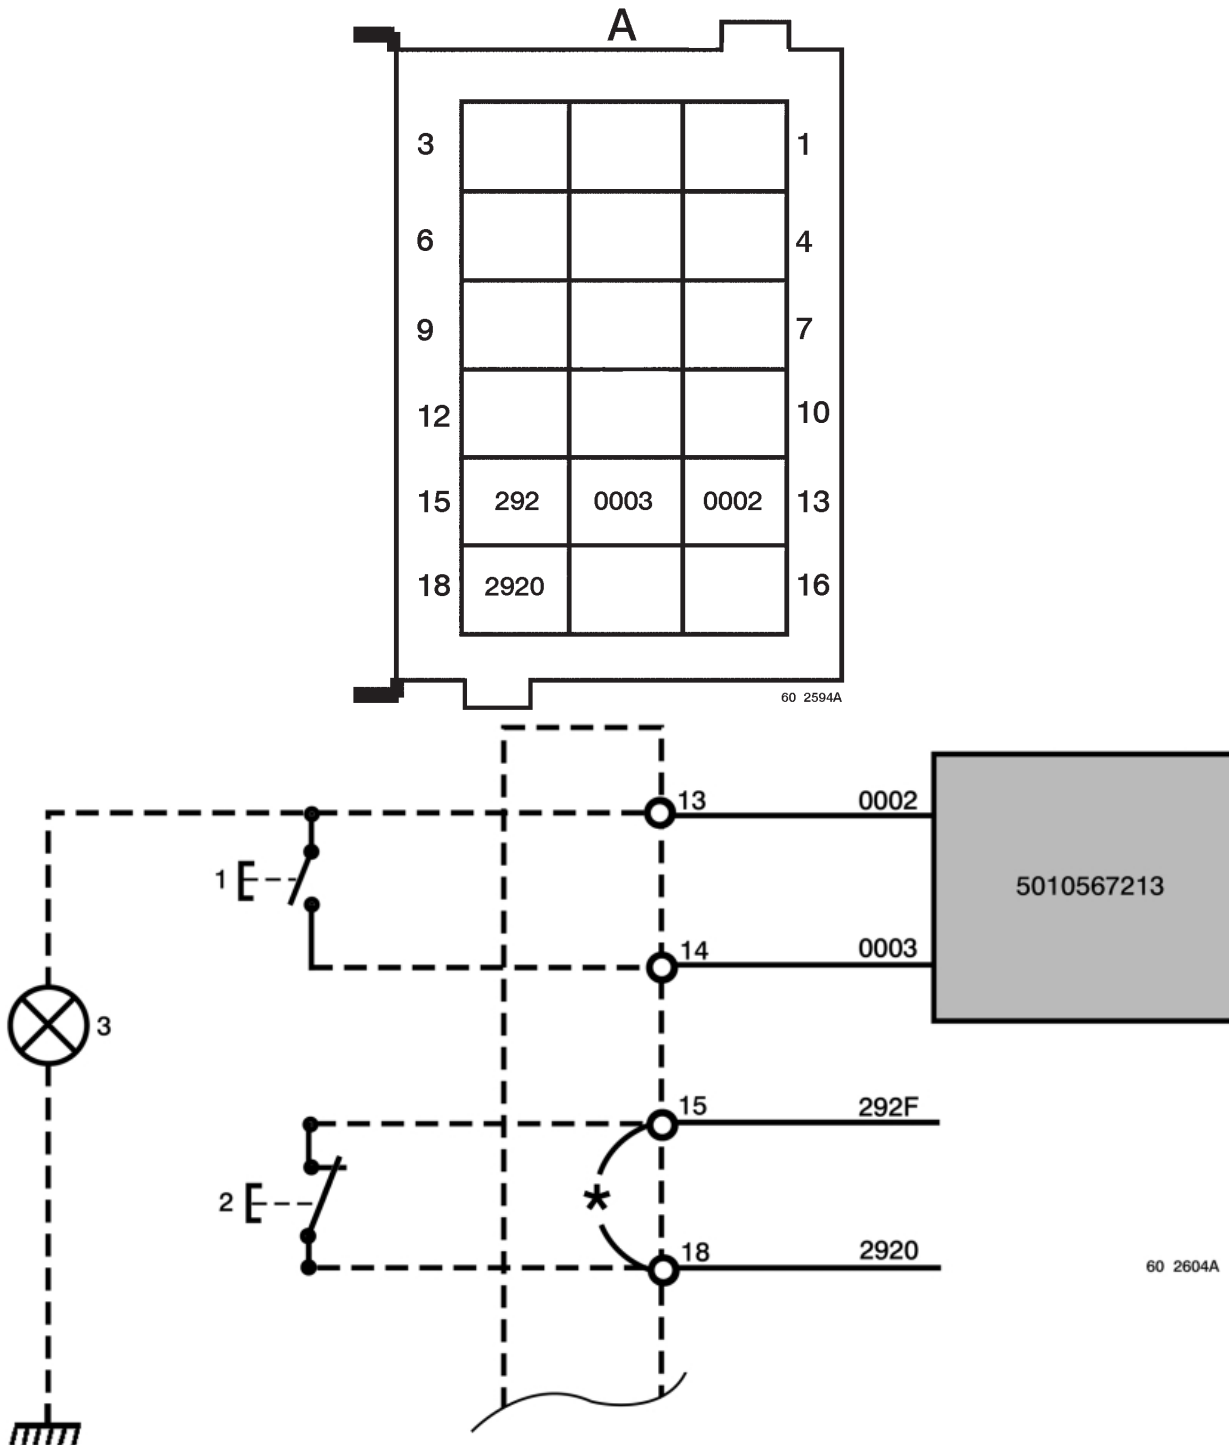


* Shunt in place, to be removed when wiring the chassis-mounted remote engine stop button.

4.8 Chassis-mounted stop control


The solution consists of installing an engine stop switch and another switch on the chassis as standard.

- A – Power unit wiring harnesses
- B – Connector, ref. N° 5010 306 102
- C – Bodybuilder wiring harnesses
- D – Connector ref. N° 5010 306 117
- E – Connector ref. N° 5010 306 102
- F – Engine stop switch on engine
- G – Engine stop switch on chassis


A – B – F = RENAULT TRUCKS assembly
 C – D – E – G = Bodybuilder's assembly

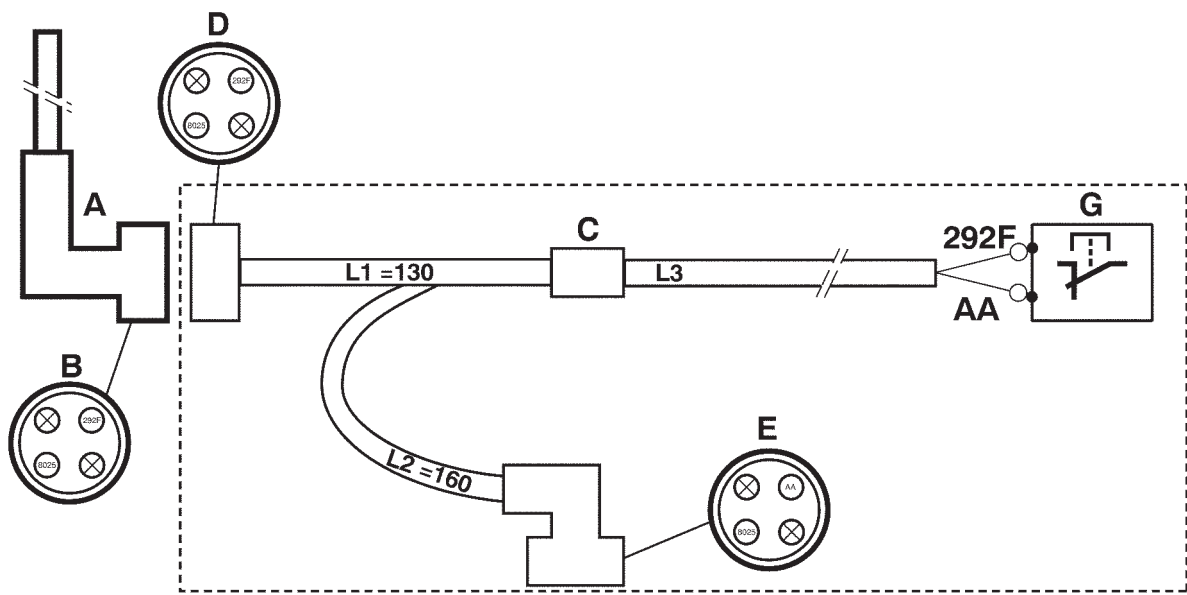

60 2584A

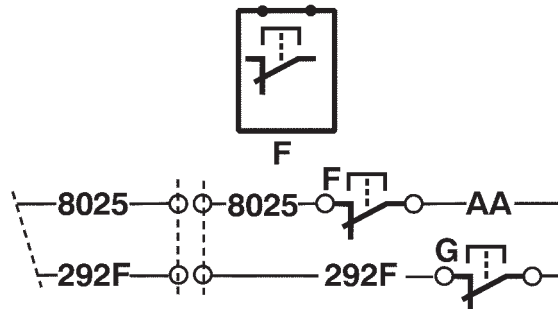


Switch on chassis (ref. N° 5010 480 481)

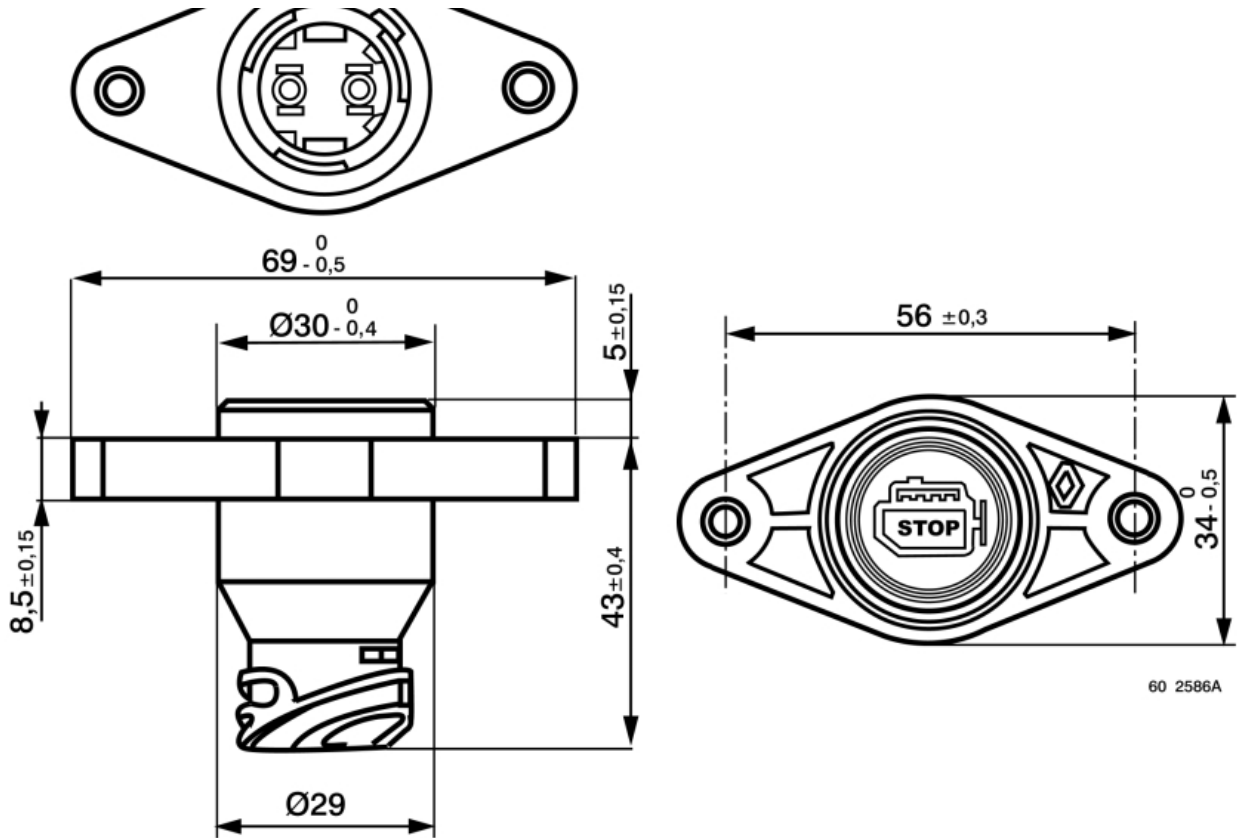

4.9 Parking brake information


Wire 1025 gives the parking brake information – this wire is earthed when the vehicle speed is less than 3 km/h and the parking brake is applied.

4.10 Electrical diagram for available power supplies

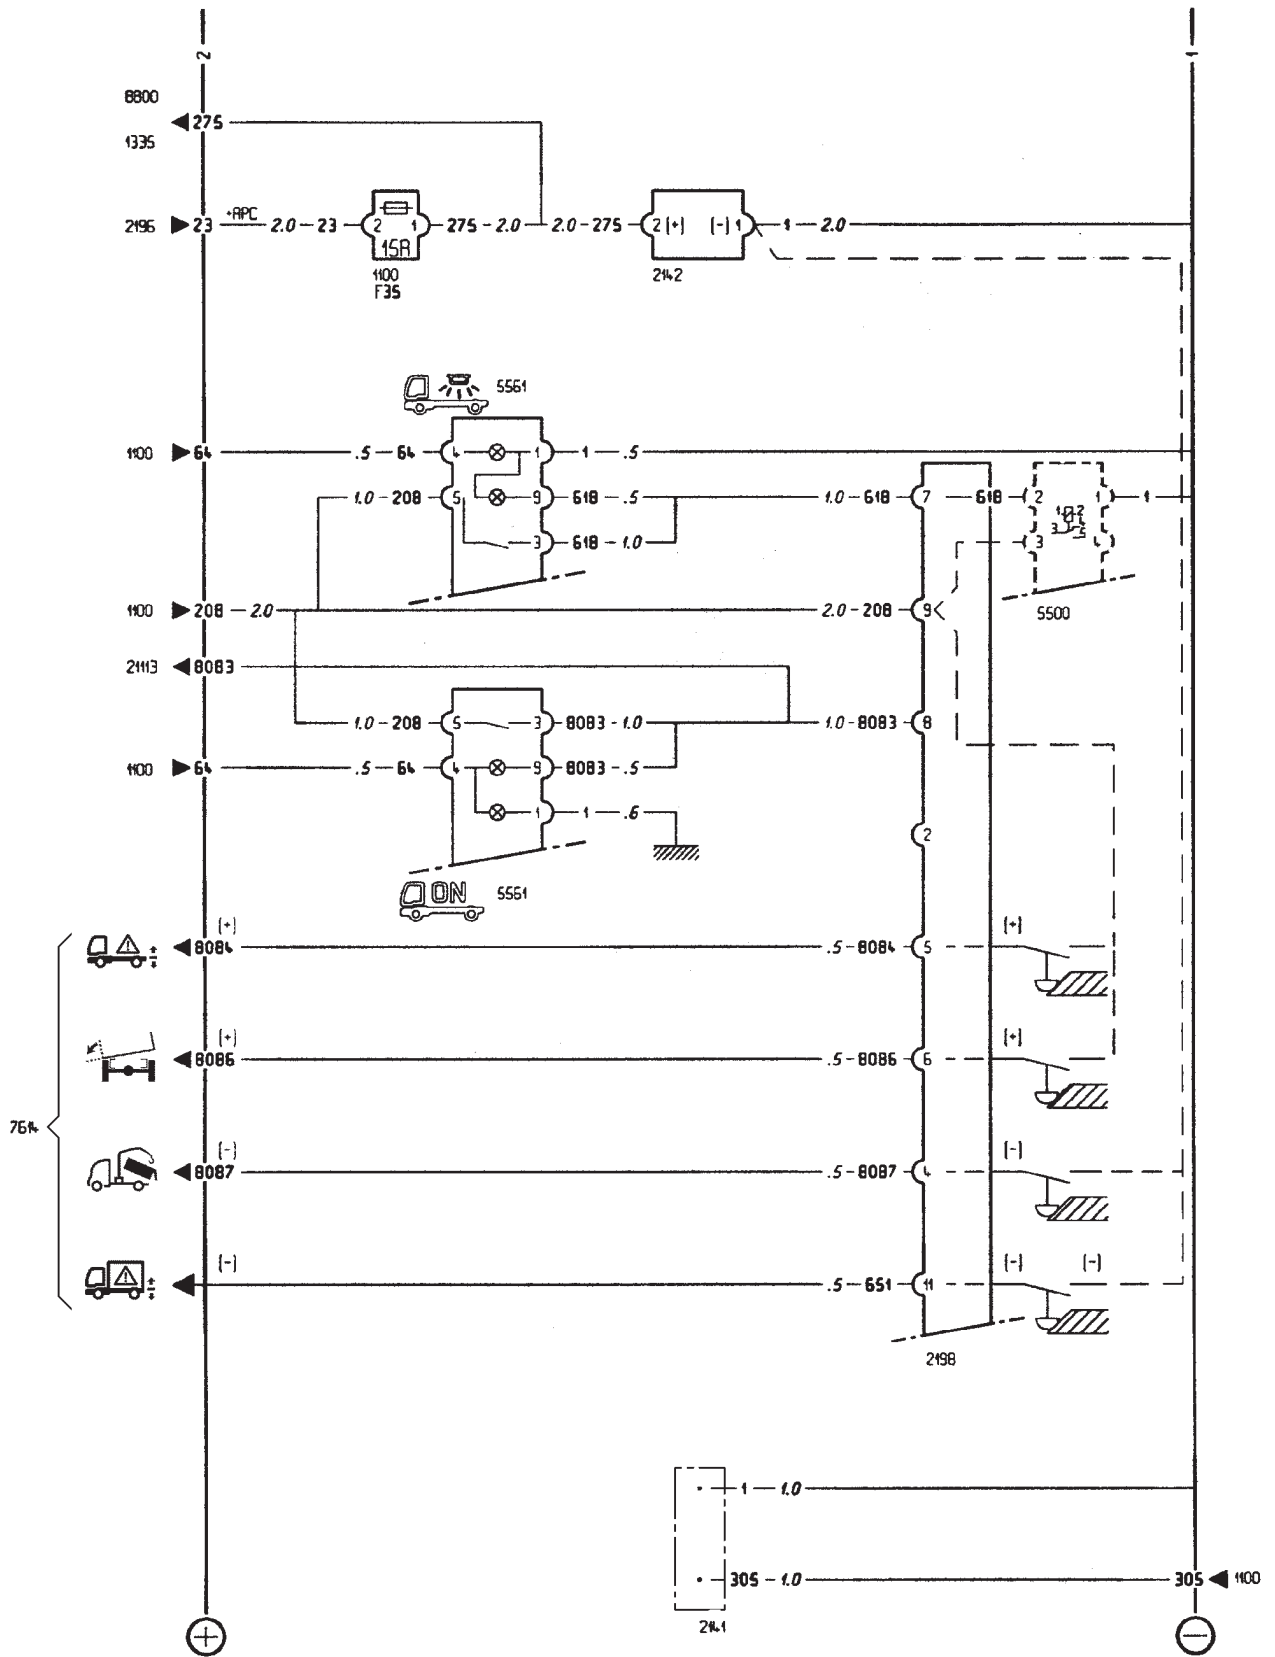


60 2318A

Electrical diagram for available power supplies

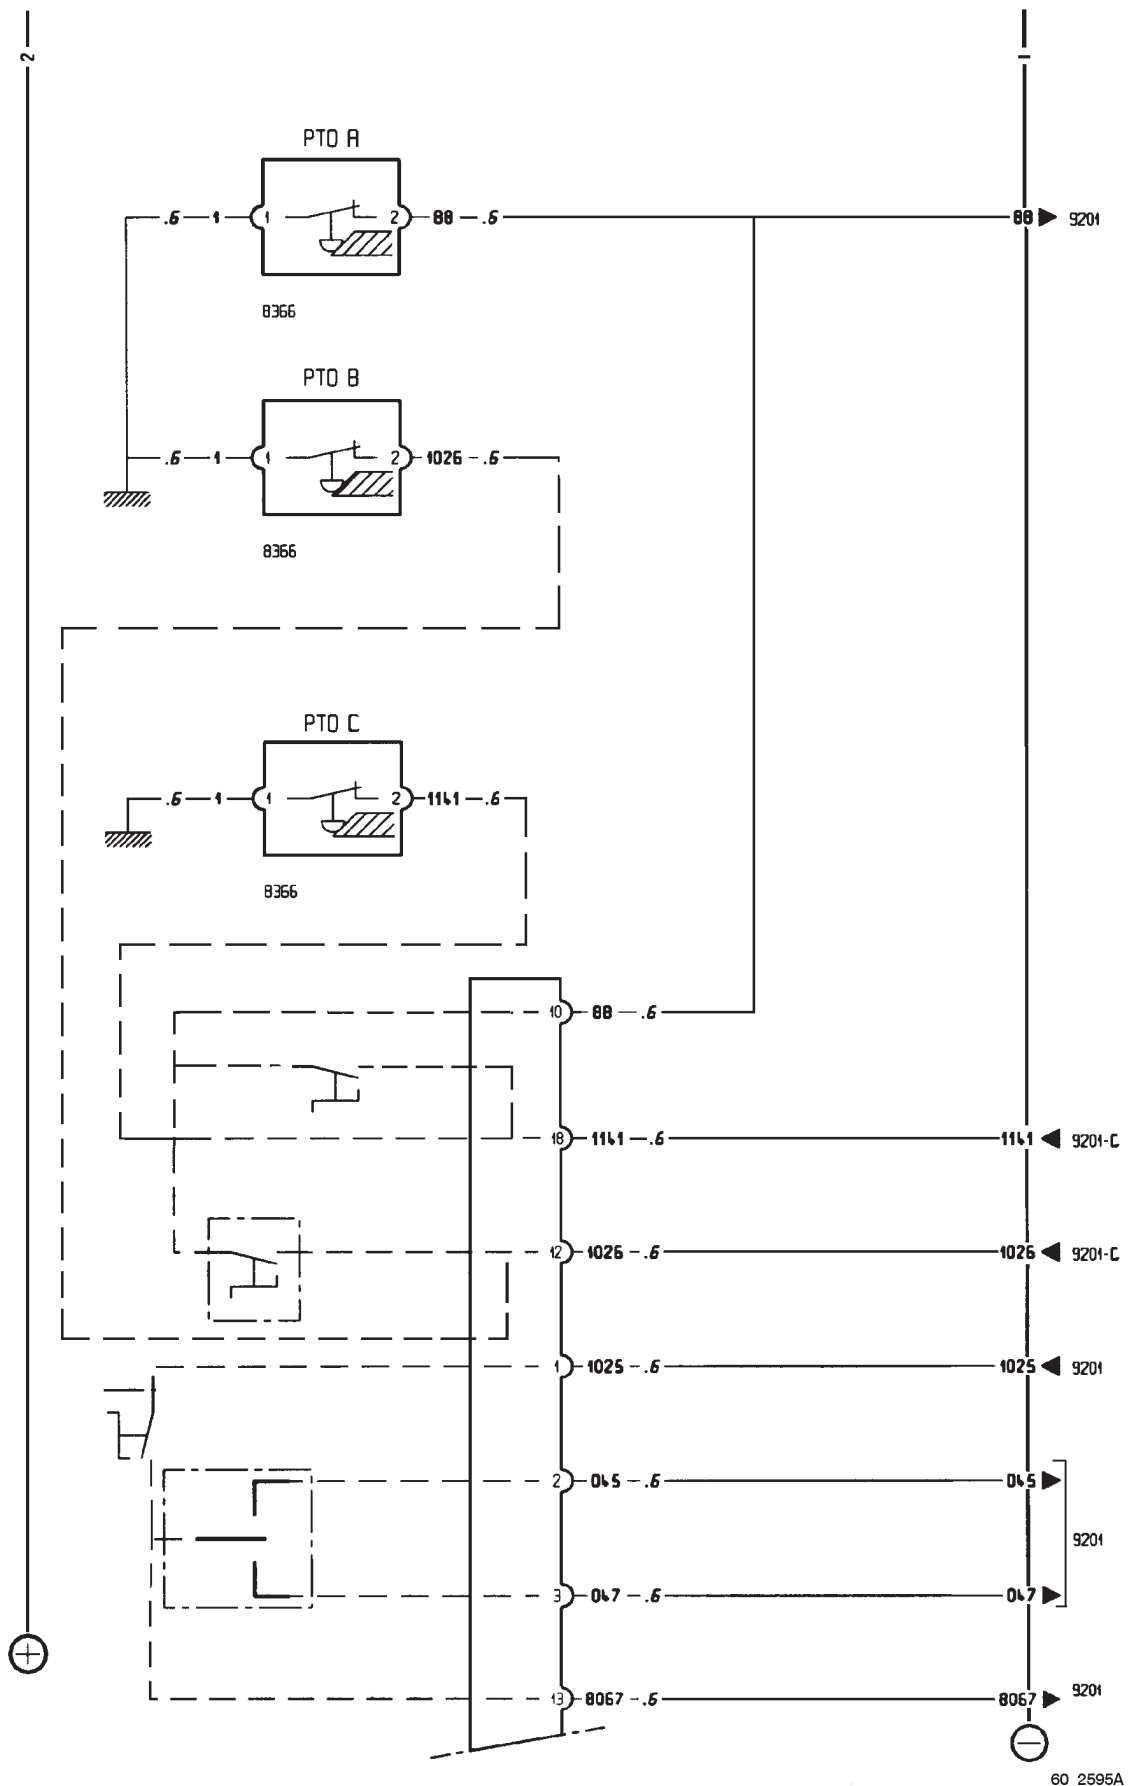

Electrical diagram for available power supplies

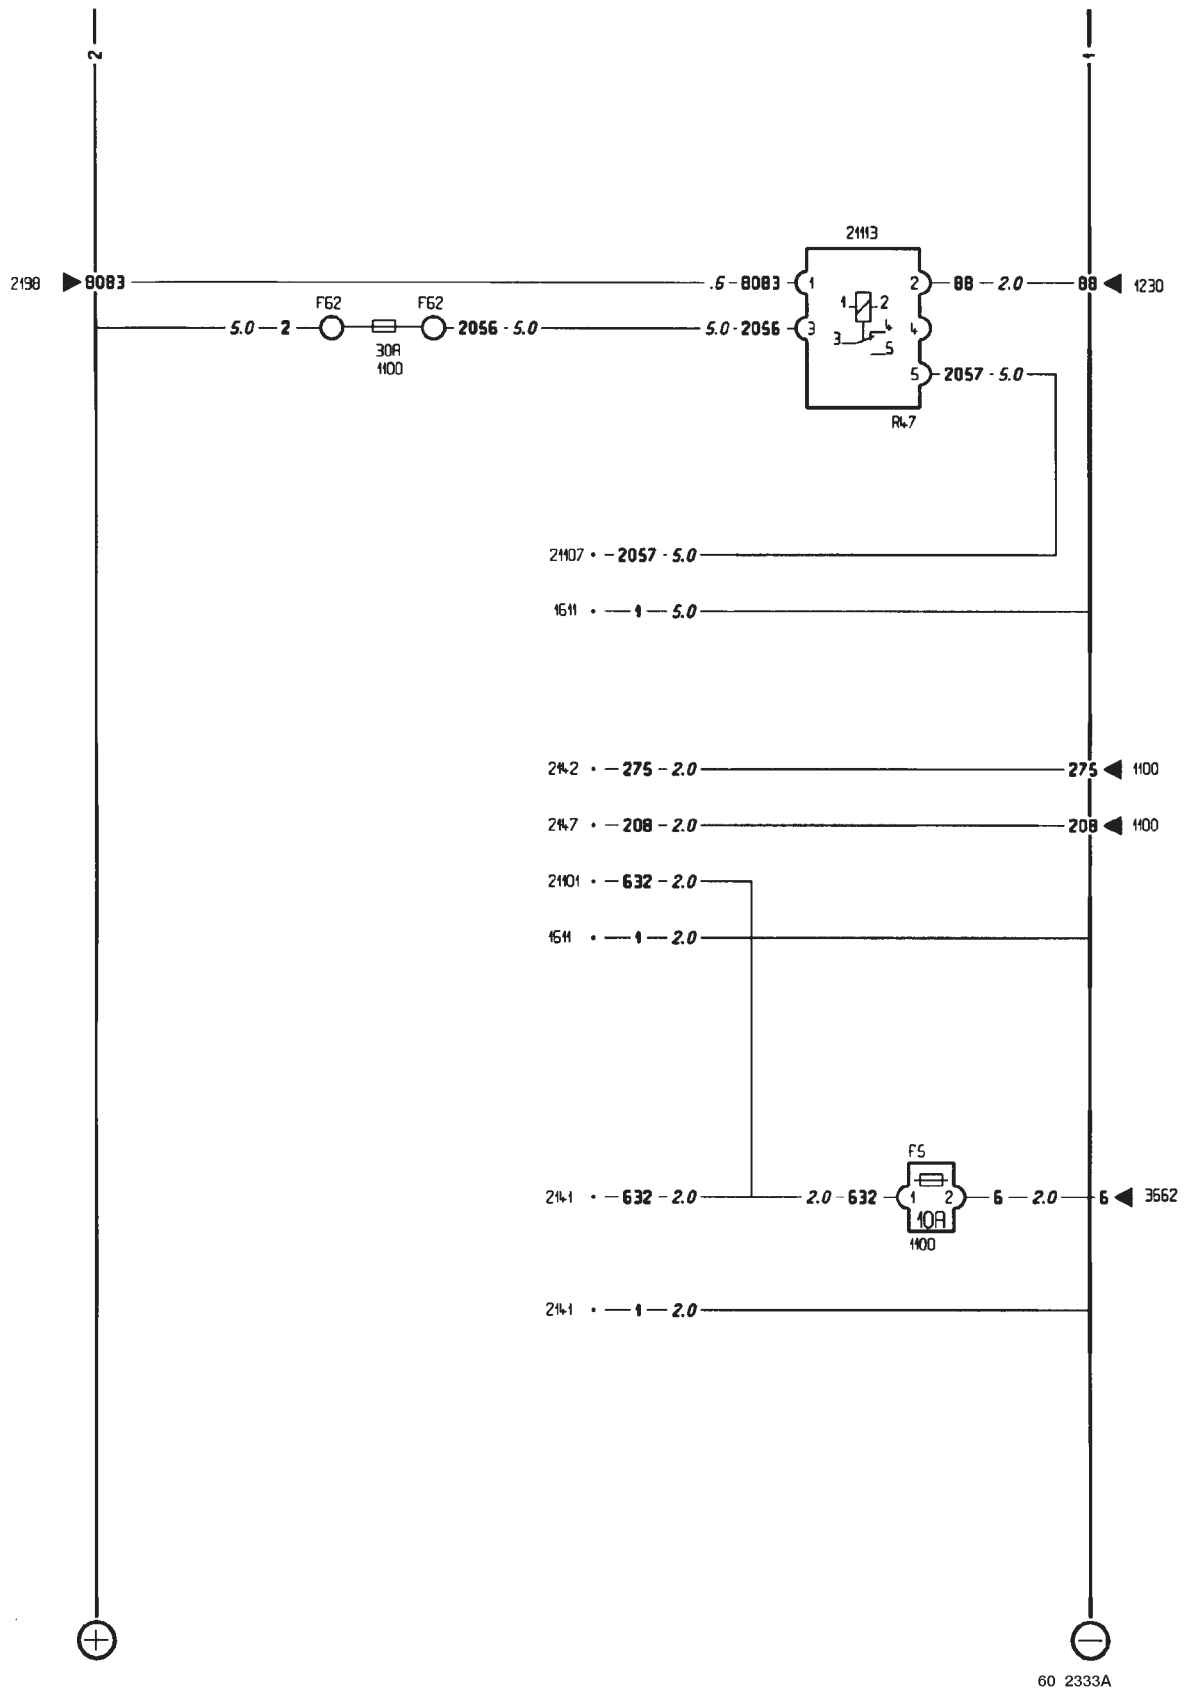

Key

1100 - Fuses
1230 - Chassis-cab connection unit
1335 - Bodybuilder available power supplies connector
1611 - Earth connection
2102 - Battery N° 2
2141 - Available power supply (lighting)
2142 - Available power supply (after key ignition)
2147 - Available power supply (after master switch "+")
2196 - After ignition "+" power supply (R1)
2198 - Bodybuilder available connector
3662 - Lighting relay (R8)
5500 - Gate valves illumination relay
5561 - Gate valves illumination control
7614 - Principal display
8366 - Power take-off switch
8800 - Air dryer
9201 - Vehicle electronic control unit (VECU)
21101 - Bodybuilder equipment control
21107 - Available power supply (bodybuilder equipment control)
21113 - Bodybuilder equipment control power supply relay (R47)

Assignment of fuses concerning electrical pre-arrangements

Fuse	Amperage	Wire N°	Function
F3	10	305	Side/parking lights power supply
F5	10	632	Lateral lights power supply
F6	10	64	Lighting power supply
F21	15	208 618 8083	After master switch "+" power supply
F35	15	275	After ignition "+" power supply
F62	30	2057	Available power supply (bodybuilder equipment control)

Do not exceed the max. currents of the switches; if you do, relay the power supply.

4.11 Lateral lights


Lateral lights (1) are on stand-by in the right-hand sidemember (number varying according to wheelbase).

Two lights (2) are located at the ends of the rear lighting bar.

It is therefore possible to install equipment lateral signalling lamps without having to convert the vehicle installation.

Comply with the regulations in force for positioning the lateral lights.

The wiring harnesses for the lateral lights must be fastened and protected against heat radiation (electric retarder and exhaust in particular).

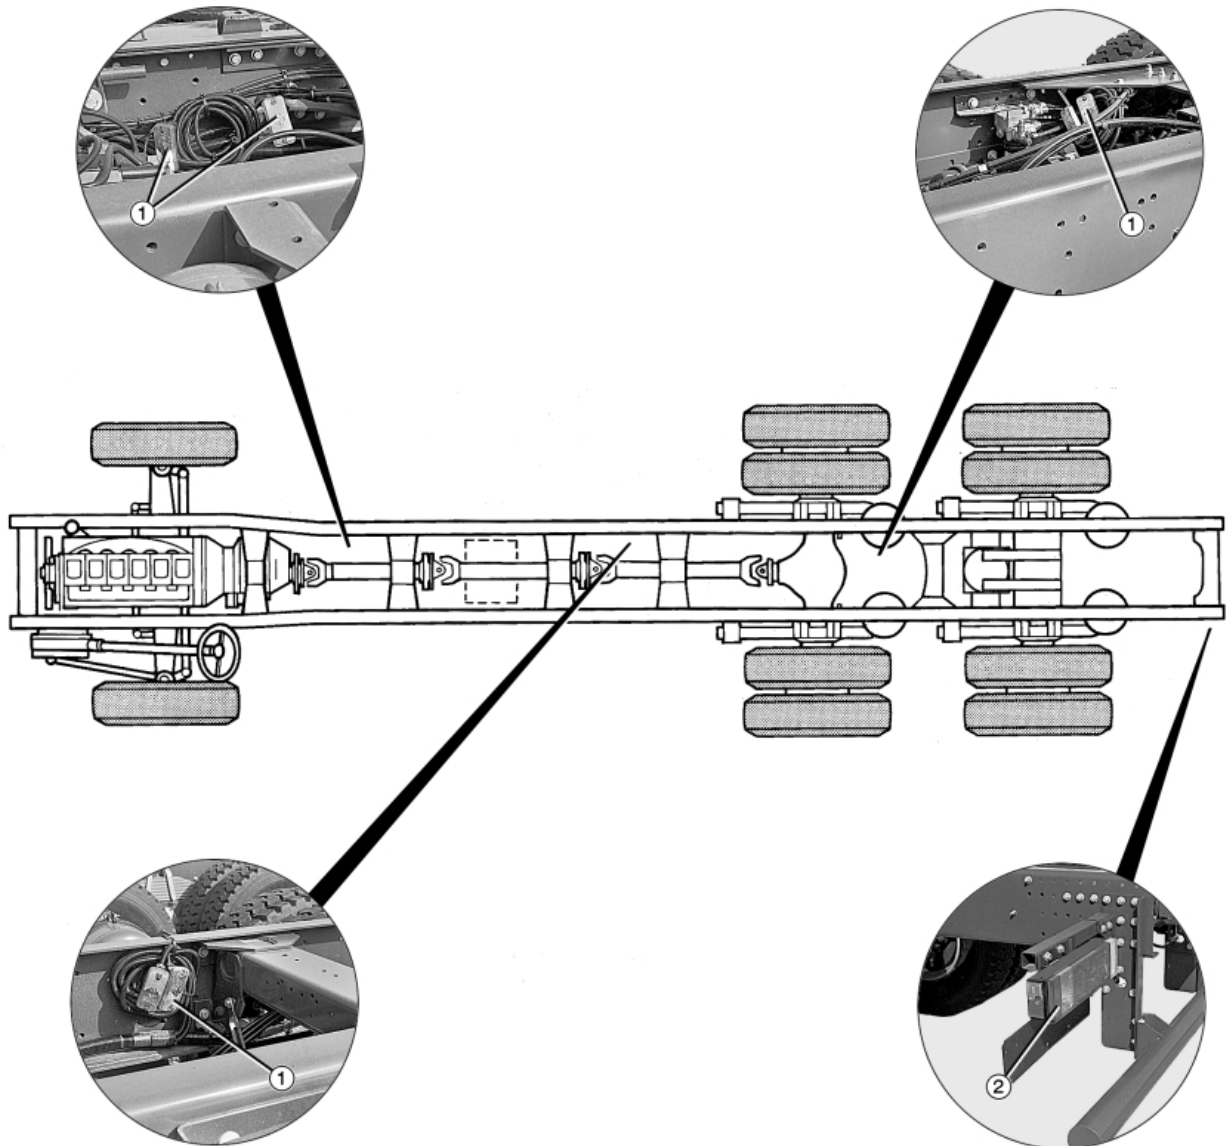

“CRANES”

5. CRANE MOUNTING PRE-ARRANGEMENT


RENAULT TRUCKS makes available to its customers a pre-arrangement option for the mounting of a behind-cab crane.

The principle retained is assembly on plates allowing installation of the crane without having to move the position of important components, which improves our service and preserves the original quality of the chassis and of the vehicle.


The sketches hereafter present the different installation principles on 4x2, 6x4 and 8x4 axle spreads.

LIFTING TORQUE


The maximum authorized lifting torque is limited to **25 tonnes/metre** (2 landing legs).

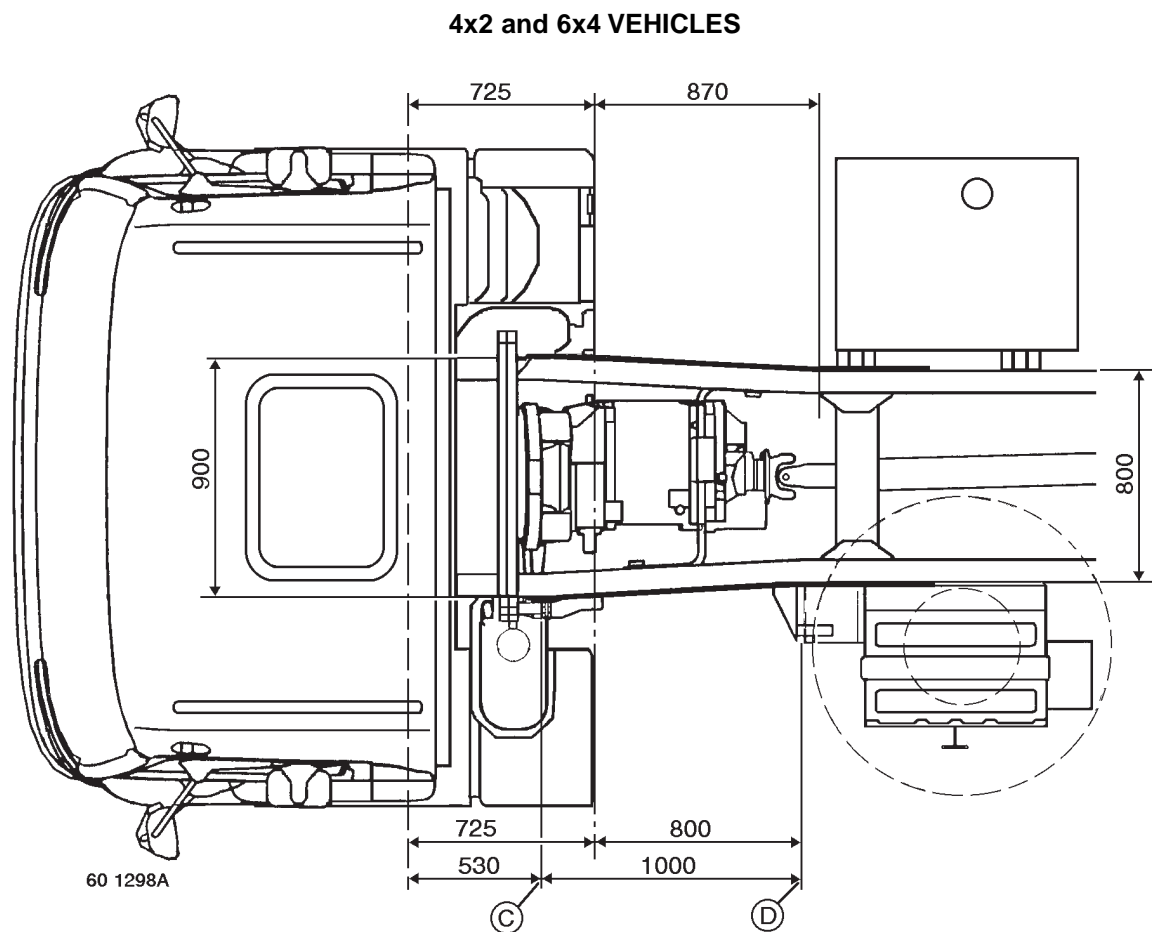

- C: Start of necking (900 mm)
- D: End of necking (800 mm)

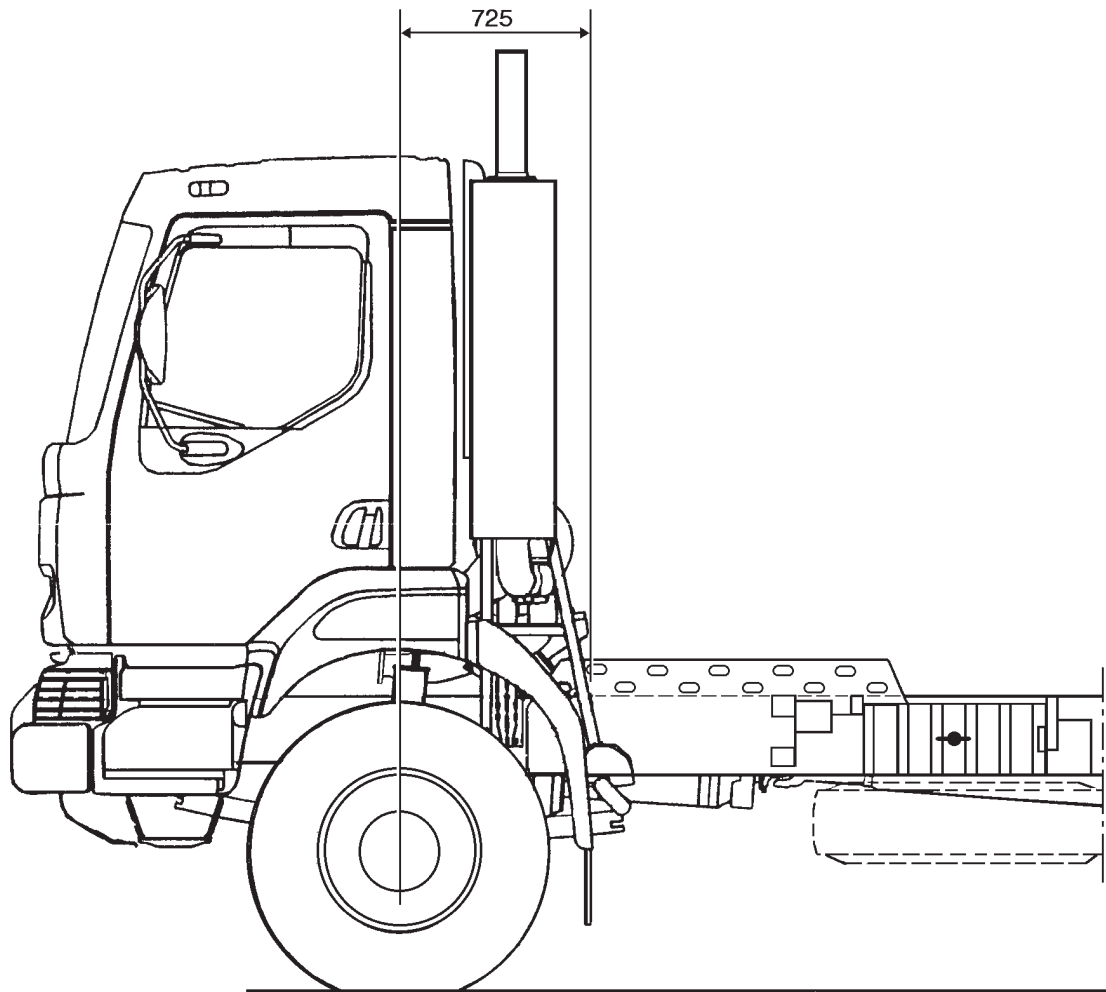

60 1296B

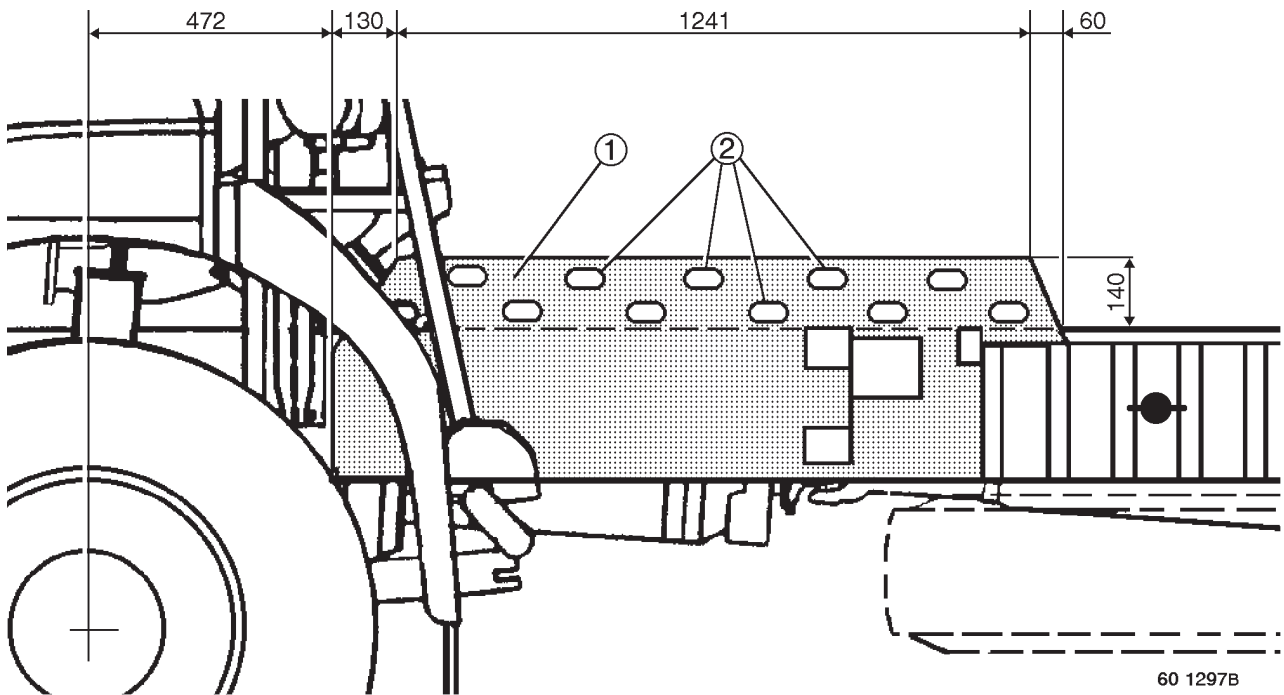


60 1297B

- 1: Plate, thickness 10 mm
- 2: 11 slots 35 x 70 for welding sub-frame

20 Amp relay

Power pre-arrangement relay pilot-controlled by the PTO on 4x2 and 6x4 vehicles.

- 1 - Power relay box
- 2 - Fuse

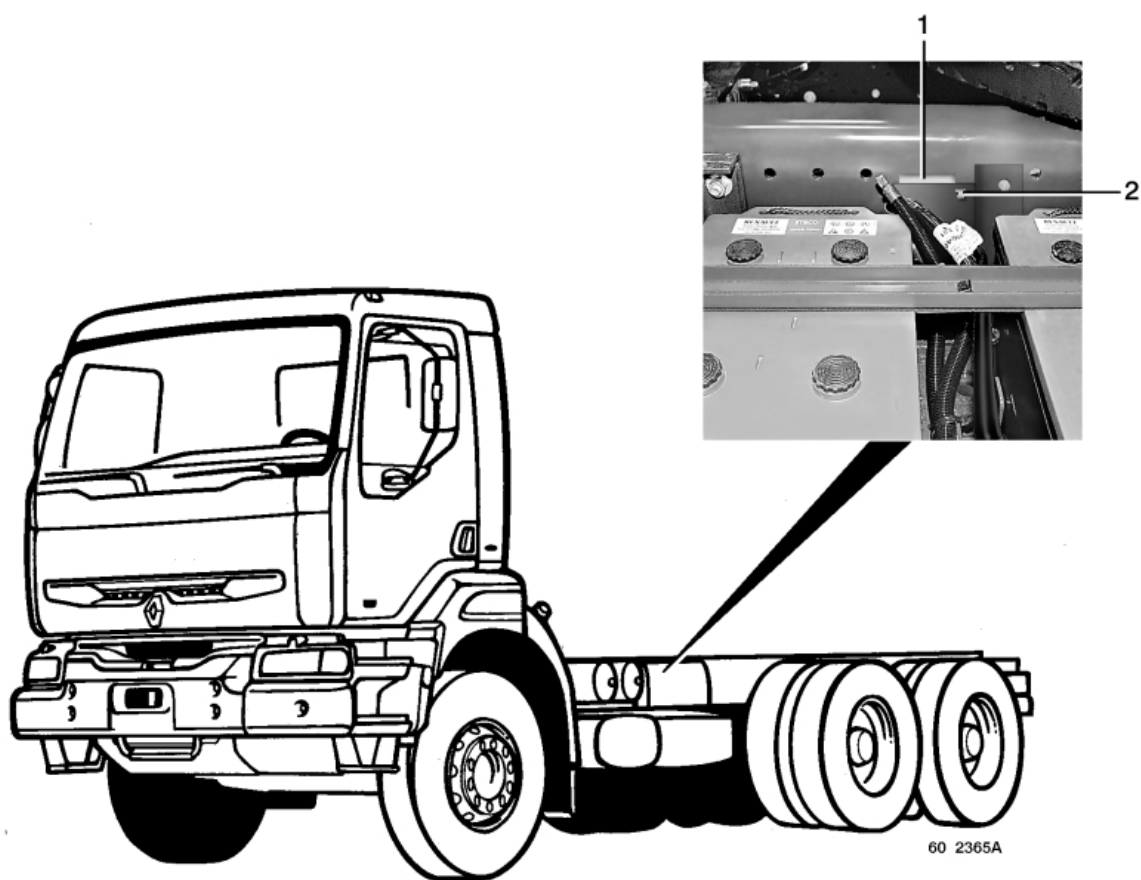

60 2365A

“TIPPERS”

6. TIPPERS

KERAX all types tipper

- It is forbidden to mount tippers on 6x4 and 8x4 concrete mixer, distribution and materials distribution vehicles.

USE OF KERAX 6x4 - 6x6 - 8x4 TIPPERS


- For positioning the rear axis of articulation of the tipper, observe the dimension 1605 mm max. between the axis of the tandem and the axis of articulation of the tipper.
- If this dimension is exceeded at all, a request for waiver accompanied by calculation notes must be made without fail.

ASSEMBLY OF KERAX CONTROL BOX (see routing, chapter C)

On rear end trim

Method

- Locate the holes in the rear end (A: rear end trim centre-line).
- Use crimping nuts M8 - hexagonal barrel.
- Position the control box and fasten it with nuts and bolts as in (1).

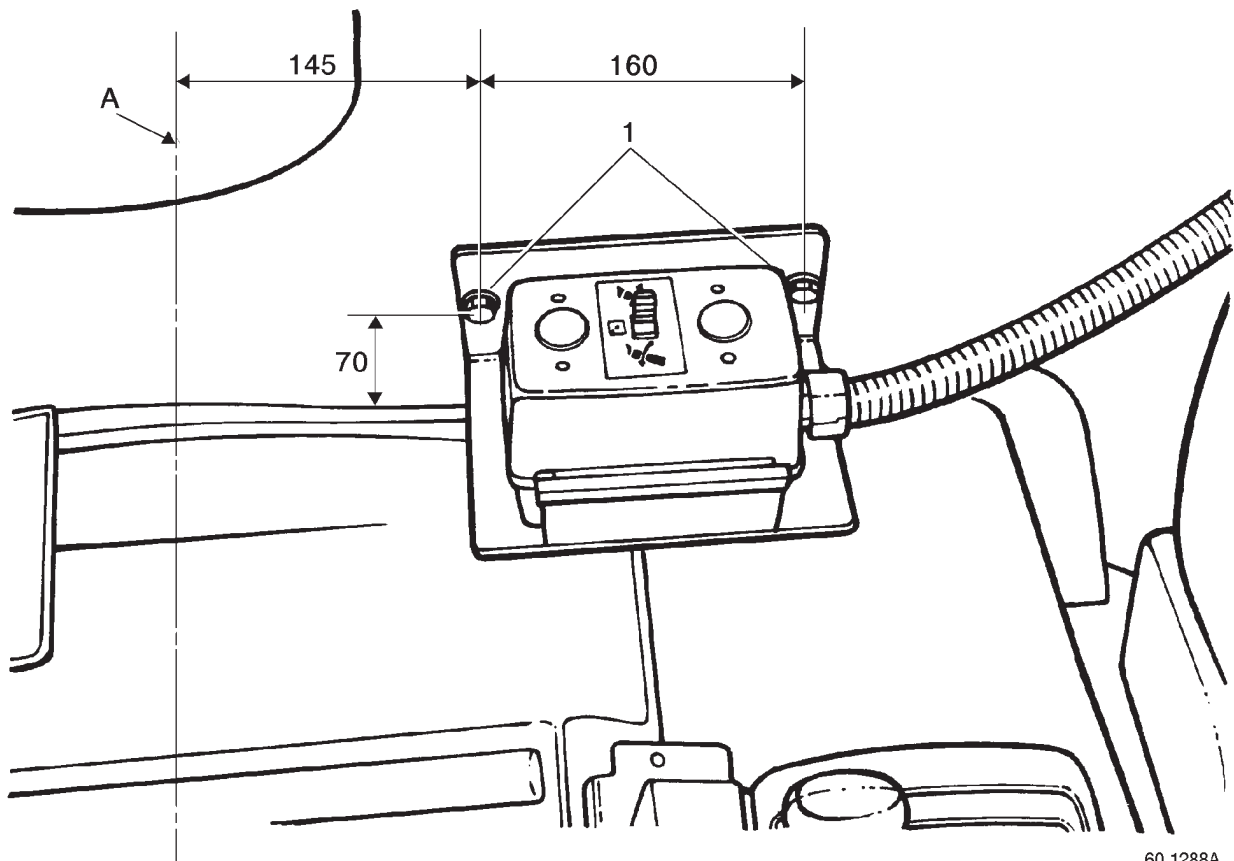


On side pillar

Method

- Locate the holes in the side panel trim near the air vent grille.
- Use crimping nuts M8 - hexagonal barrel to gain access to the crimping nuts:
 - for plastic trim, remove the 2 blanking plugs.
 - for fabric trim, take off the pre-cut-out sections of the trim.
- Position the control box and fasten it.

- 1 - Box fixing points
- 2 - Handle fixing point

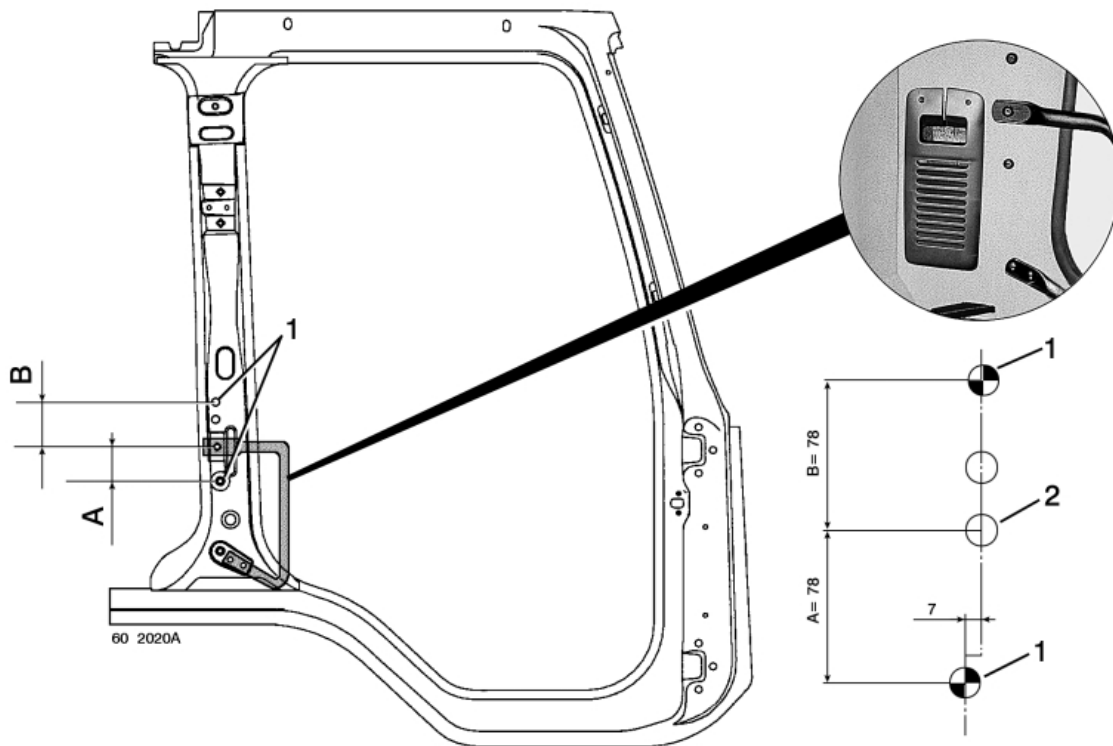


“TANKERS”

7. TANKERS

Exhaust line and silencer protection

KERAX 4x2 - 4x4 - 6x4 rigids, ADR construction vehicles

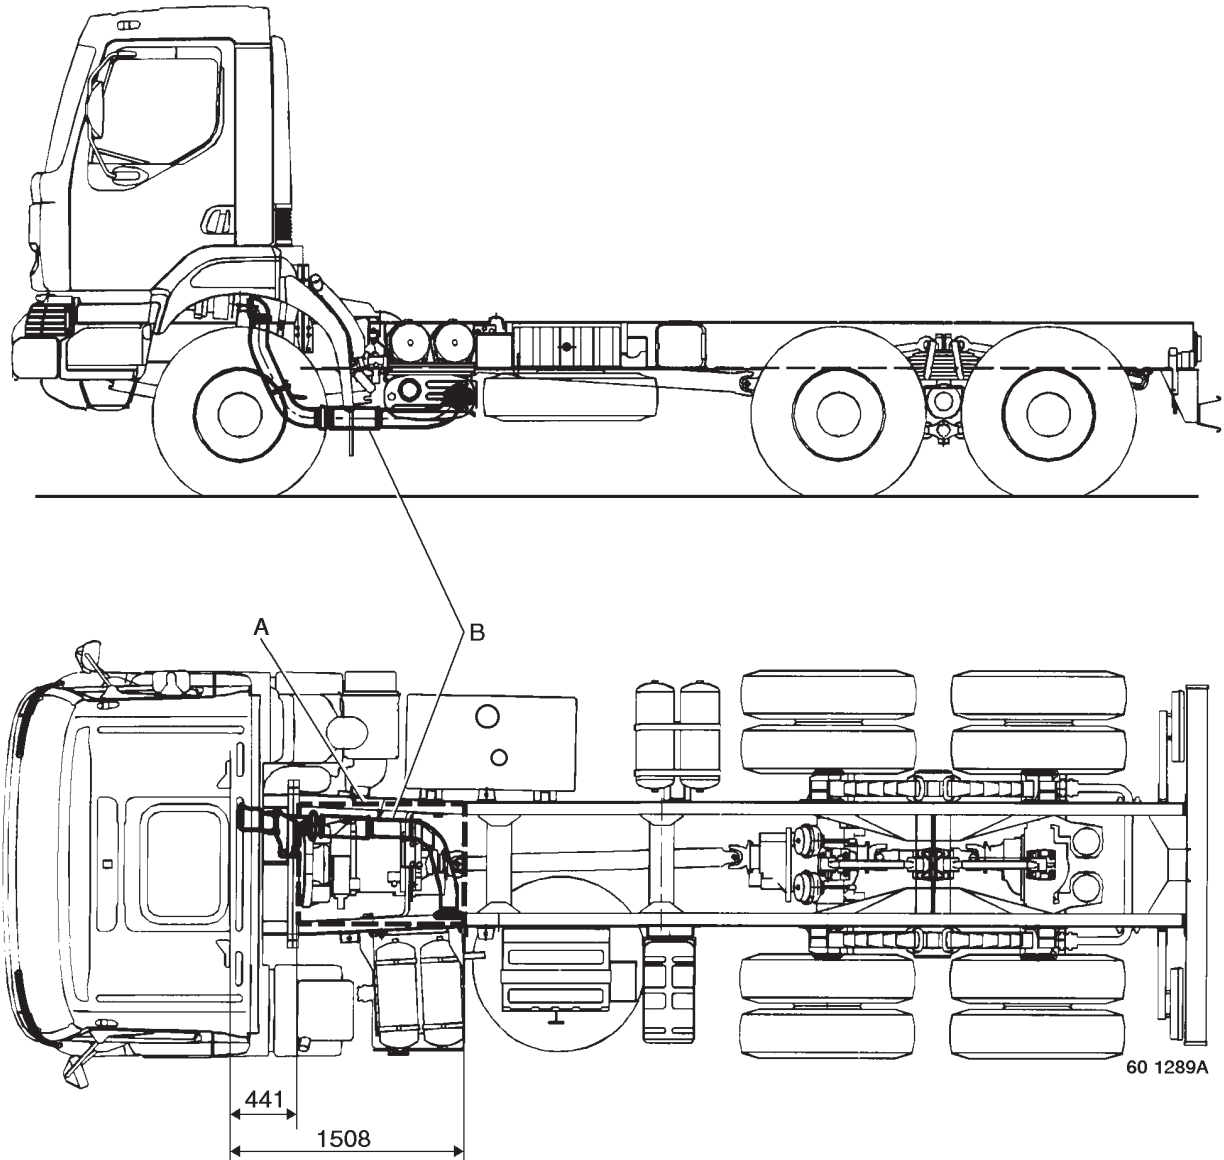


A - Zone to be protected

B - Exhaust and silencer line to be protected against leakage and discharge of the product transported

441 & 1508 - Minimum dimensions to be observed in relation to the front axle centre-line.

KERAX 8x4 rigids, ADR construction vehicles

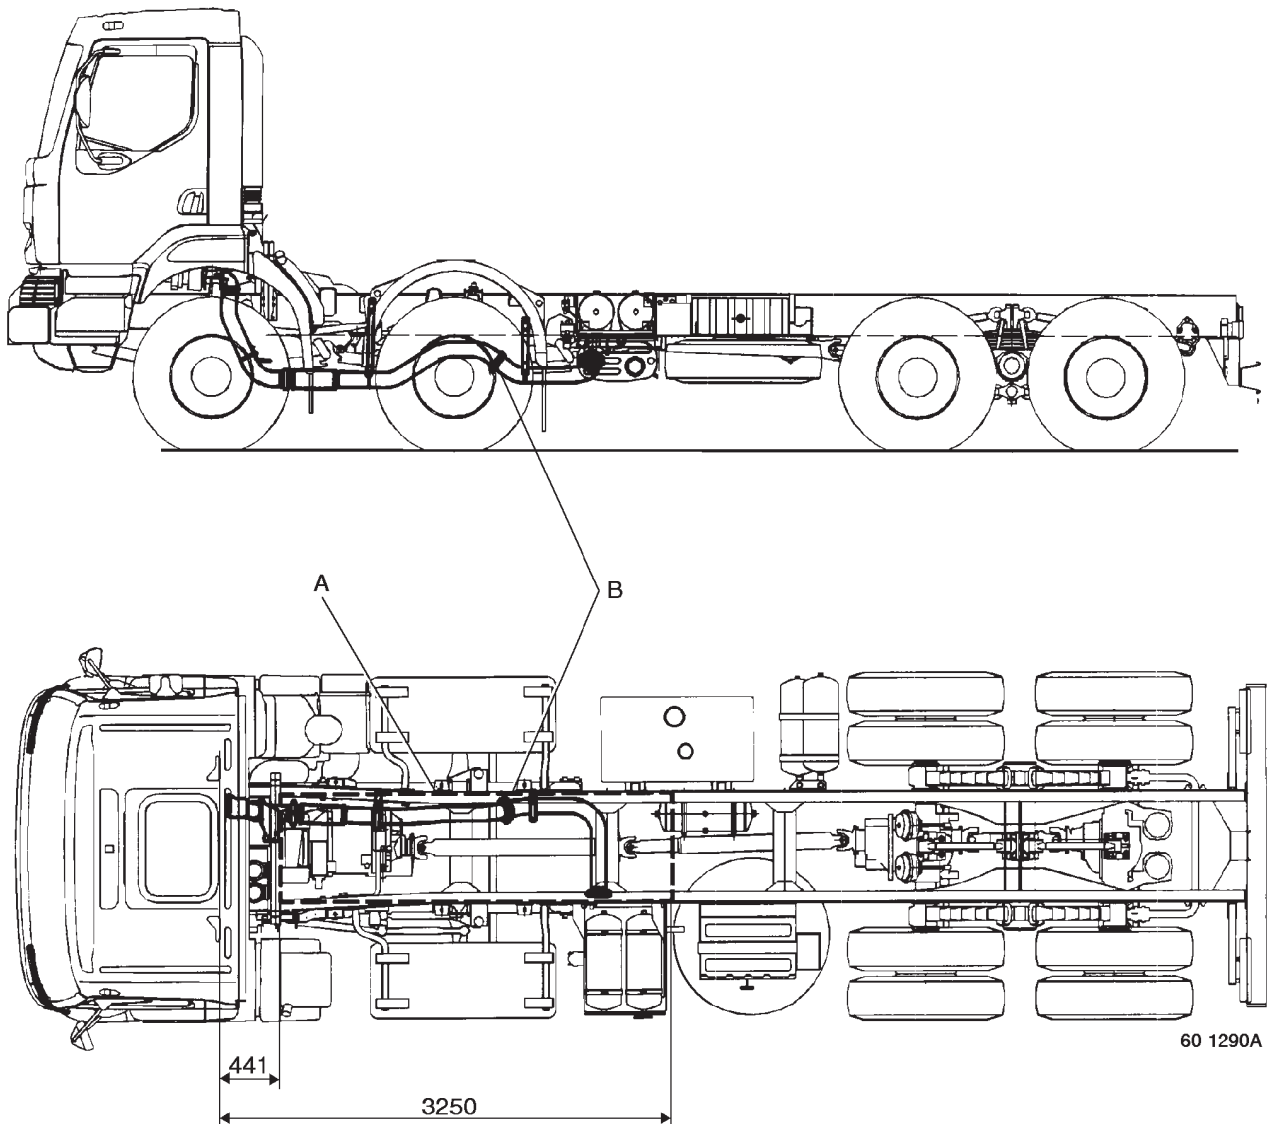

A - Zone to be protected

B - Exhaust and silencer line to be protected against leakage and discharge of the product transported

441 & 3250 - Minimum dimensions to be observed in relation to the front axle centre-line.

**CHAPTER -C-
SUPPLEMENTARY INFORMATION
ON THE “RENAULT KERAX” VEHICLE**

1. MOUNTING OF POWER TAKE-OFFS

1.1 Auxiliary belt drive pulley

To install an receiver auxiliary belt drive pulley, two layouts are possible:

- on gearbox-mounted PTO,
- on engine flywheel-mounted PTO.

1.1.1 Gearbox-mounted PTO

Table of possible gearbox-mounted PTO assemblies

Power take-off		Gearbox					
ZF	HYDROCAR	ZF 8S 151	ZF 9S 109	ZF 16S 151	ZF 16S 221	ZF 16S 251	EATON FS 8309A
NH 1B/C	S81Z1 B/C	X	X	X	X	X	
NH 4B/C	S84Z1 B/C	X	X	X	X	X	
NL 1C*	S81Z2 C*	X		X			
N109-10			X				
N221-10 B/C		X		X			
	2266 B/C					X	

NOTE

The letter "B" or "C" added after the PTO type indicates the type of coupling mounted on the PTO output:
 B - Fflange (in this case, the maximum prop shaft angle is 7.5°)
 C - Splined shaft.

* fitted with PTO ZF N221-B

IMPORTANT

Never remove the power take-off from the gearbox.

PTO characteristics

Type		Maximum extra quantity output torque (Nm)	Direction of rotation	Weight (kg) ZF/HYDROCAR	Weight extra quantity (L) ZF/HYDROCAR
ZF	HYDROCAR				
NH 1B/C	S81Z1 B/C	1000*	opposite that of engine	5-3/5-4	0/0
NH 1B/C	S81Z1 B/C	800* pour 9S 109	opposite that of engine	5-3/5-4	0/0
NH 4B/C	S84Z1 B/C	430**	same as engine	7.5-5.5/9-8	+0.5/+0.5
NL 1 C****	S81Z2****	600*	opposite that of engine	3/4	0/+0.15
N109-10		530*	same as engine	25	+0.5
N221-10 B/C**** *		870*	same as engine	25	+0.5
	2266 B/C	400***	same as engine	12.1/13.6	+0.25

Maximum output torques are given for a rotating speed at the PTO input of 1500 rpm.

* Full-time use (do not exceed half the maximum torque): in case of use at full power, it is essential to equip the PTO with a lubrication kit.

** Part-time use < 30 minutes.


*** Part-time use < 30 minutes, for full-time use, provide a lubrication kit.

Consult the RENAULT TRUCKS Product Applications Department.

**** Torque not to be exceeded in the case of simultaneous use of two outputs:

torque (Z) = torque (X) + 1.23 torque (Y)

torque (Z) ≤ 1000 Nm

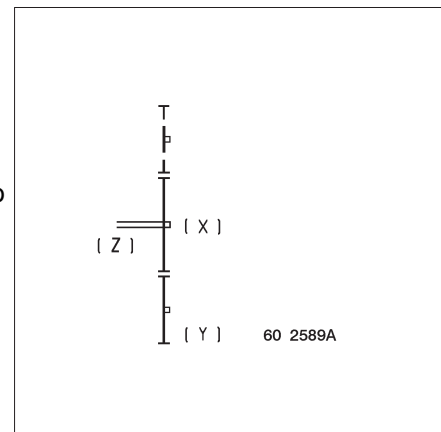

Drive ratio

Low
High

Power take-off		Gearbox					
ZF	HYDROCAR	**ZF 8S 151	ZF 9S 109	ZF 16S 151	ZF 16S 221	ZF 16S 251	EATON FS 8309A
NH 1B/C	S81Z1 B/C	1.09 1.09	0.77 0.77	0.92 1.09	0.91 1.09	0.91 1.09	
NH 4B/C	S84Z1 B/C	0.98 0.98	0.99 0.99	0.82 0.98	0.82 0.98	0.82 0.98	
NL 1C*	S81Z2 C*	1.09 1.09		0.91 1.09			
N109-10			1.16 1.16				
N221-10 B/C		1.35 1.35		1.13 1.35			
	2266 B/C						

Engine flywheel-mounted PTO (positioned at 12 o'clock)

	DCI 11	DCI 11
Type	PAM 1131	PAM 1132
Characteristics	- hollow shaft - positioning 12 o'clock - direct drive	- flange shaft 120 DIN - positioning 12 o'clock - direct drive
Output torque (daNm)	600	1000
Drive ratio	1.098	
Direction of rotation	same as engine	

Tightening torque (See chapter A).

Make: ZF

Type: NMV 221

- maximum output torque: 2000 Nm
- drive ratio: 0.98
- flange output dia. 150 mm only (8 holes over dia. 130)
- engagement by multi-plate clutch
- direction of rotation same as engine

Maximum torque transmissible by the PTO

$$P = \frac{C \times n \times \eta}{9550}$$

- P: power (kW)
 C: drive torque (Nm)
 n: engine rotating speed (rpm)
 η: PTO drive ratio

Maximum permissible torque for use of a flanged hydraulic pump

$$C = \frac{15.92 \times Q \times p}{n \times \eta}$$

- C: torque (Nm)
 Q: output (l/min)
 P: pressure (bar)
 n: engine rotating speed (rpm)
 η: efficiency

Frequency of use of PTOs

- Full-time use:
Do not exceed half the maximum torque. In case of use at full power, it is essential to fit the PTO with a lubrication kit.
- Part-time use:
The maximum operating time is 30 minutes, followed by a minimum stopping time of 30 minutes (for cooling down).

PTO control: consult the vehicle driving and servicing handbook.
 The maximum rotating speed of the PTO output shaft is 3000 rpm.

For any PTO modification (output shaft, lubrication kit), contact the manufacturer's commercial network.

1.2 Instructions for the assembly of auxiliary hydraulic pumps to ZF type “C” PTOs (ZF or Hydrocar)

Connection of the hydraulic pump must correspond to standard ISO 7653, type D.

1.2.1 Supplementary instructions

Fluidtight seal between pump and PTO

The seal between the pump and the PTO must be made by two gaskets (J1 & J2) with an air drain (E) between the gaskets (J1 & J2).

IMPORTANT

The air drain (E) allows the chamber to communicate with the outside and must guarantee that gearbox oil is not aspirated and that hydraulic oil does not penetrate inside the gearbox.

The gaskets must be capable of withstanding temperatures reaching as high as 120°C.

The gasket (J1), fitted on the PTO side, must guarantee fluid-tightness of the gearbox filled with oil specified by the manufacturer.

The gasket (J2), fitted on the pump side, must guarantee fluid-tightness of the pump containing hydraulic oil.

Correct operation of the air drain must be guaranteed at all times (do not paint it, blank it off or let it become fouled).

IMPORTANT

In the event of oil leakage through (E), the entire system must be immediately checked out.

1.2.2 Calculation of the weight torque

In the event of direct assembly of a hydraulic pump or another receiver auxiliary belt drive pulley (2) on the PTO (1), the weight torque should not exceed the value given in the PTOs characteristics table 50 Nm.

Overstepping this value may lead to fast damage to the PTO or the gearbox.

Limited to 30 Nm on:

ZF N221-10 & ZF N109-10
ZF NL 1C & S81Z2
HYDROCAR 2266



Calculation method

$$C_p = P \times d$$

C_p: weight torque (Nm)

P: pump weight (N)

d: distance separating PTO contact face from the vertical passing through the centre of gravity (g) of the pump.

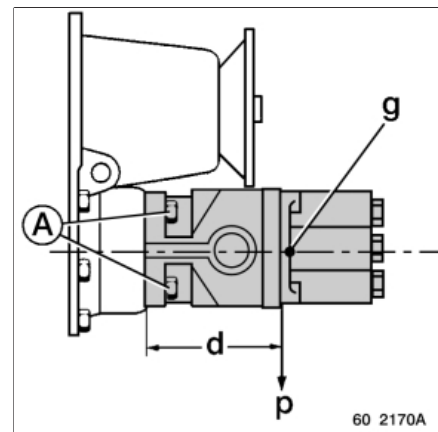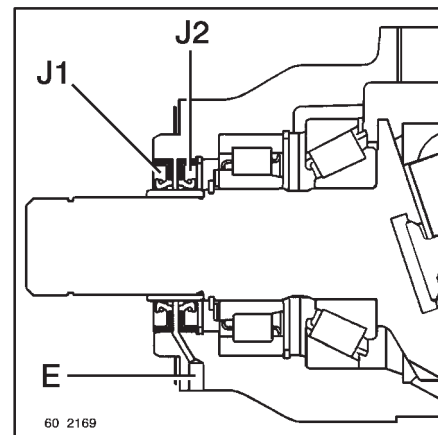

1.2.3 Fastening the hydraulic pump (A)

Apply a tightening torque of 70 Nm ± 15% (Hydrocar), 65 Nm ± 15% (ZF).

- Use the nuts delivered with the PTO (class 10.9).

- This torque is to be checked periodically according to a frequency to be defined by the bodybuilder.

- In exceptional situations compelling removal of the PTO, refer to the PTO manufacturer's assembly instructions.

Stud tightening torque: 20 Nm ± 15% with Loctite 242 or 542.

IMPORTANT


The assembly of equipment to the PTO remains under the responsibility of the installer.

Fastening the PTO to the timing case

A – Use setscrews M 8 x 125, tightening torque 20 Nm.

B – Use setscrews M 10 x 150, tightening torque 60 Nm.

Class III is the class covering precision tightening ($\pm 20\%$ of nominal torque) in accordance with Standard 01504002 (coefficient of friction 0.15 ± 003).

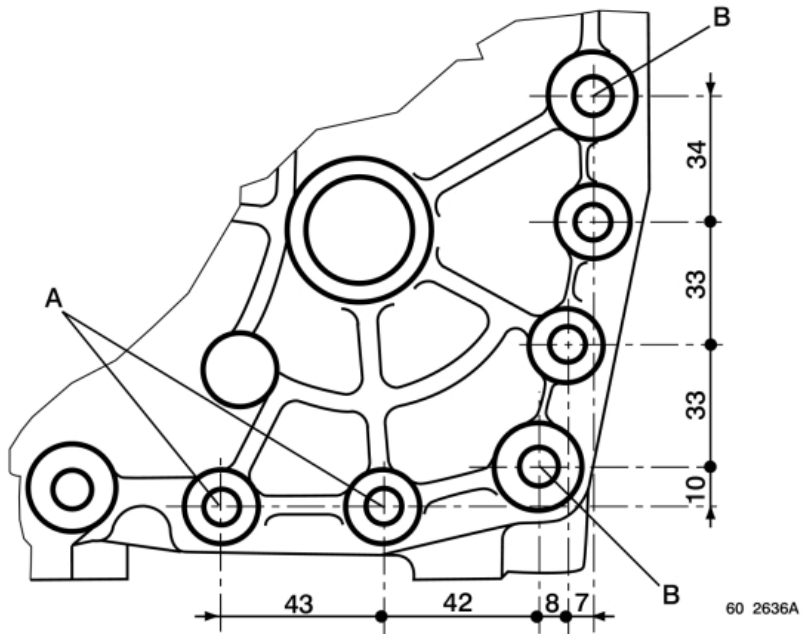

2. AIR-OPERATED EQUIPMENT

2.1 Connection of extra auxiliary equipment

The addition of extra auxiliary equipment not planned by the manufacturer must without fail be connected to the specific auxiliary equipment circuit.


The compressed air consumption of this auxiliary equipment should in no way compromise the braking circuit filling times laid down by the legislation in force.

The extra piping must be routed on the LH inner side of the chassis. Ensure fastening using nylon clamps. If the vehicle is equipped with an electric retarder, route the piping in a heat shield.

For any further information, consult the RENAULT TRUCKS Product Applications Department.

2.1.1 Coupling for extra auxiliary equipment to chassis

There is a coupling for the connection of extra auxiliary equipment to the chassis provided on the vehicles. A "multiple T" snap-on coupling, dia. 6 - 8 mm, closed by a blanking plug (1), is arranged on the LH side under the plastic cover.

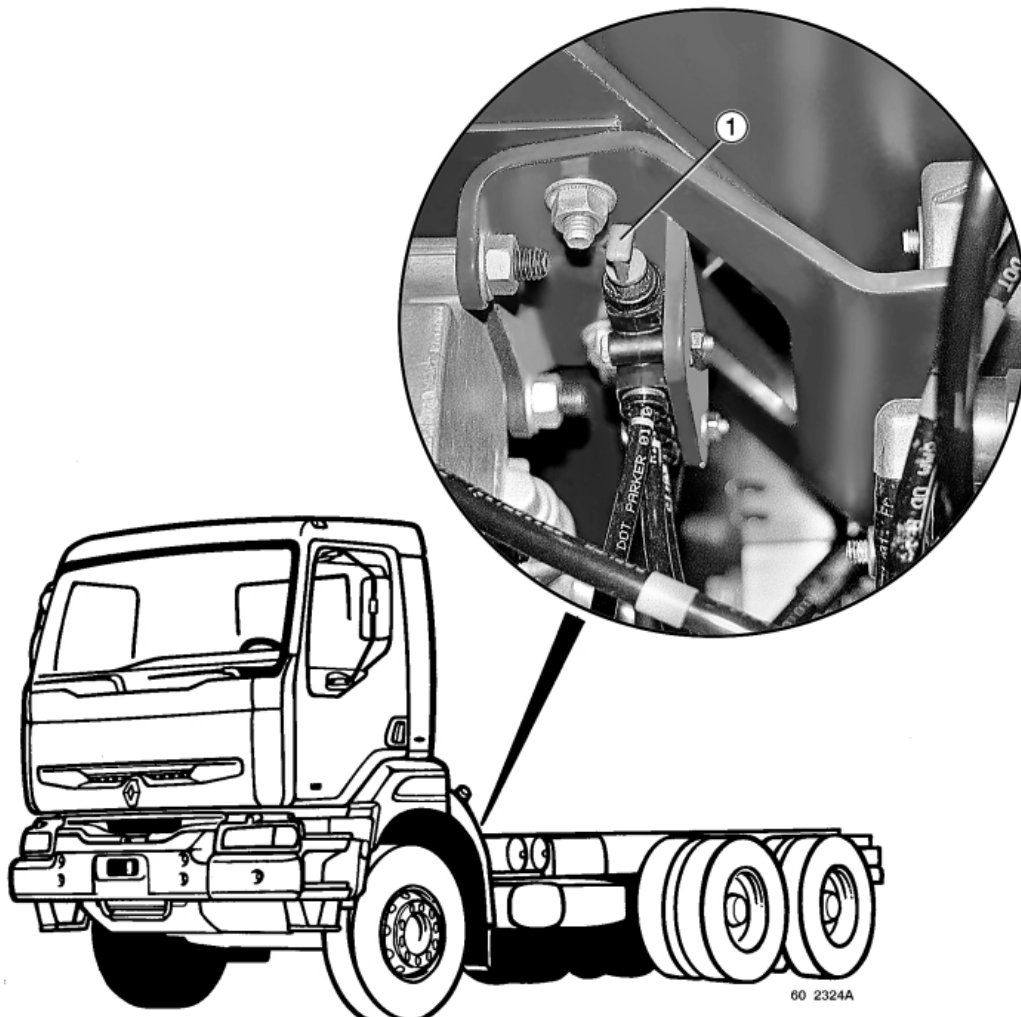

For pneumatic connection on vehicles not provided with coupling, hook up to the auxiliary equipment circuit (brown coloured mark) close to the air dryer.

Use snap-on couplings for connection:

- "Y" coupling dia. 6 mm ref. N° 50.05.330.278
- "T" coupling dia. 6 mm ref. N° 50.05.330.159.

The additional circuit should not cause any mechanical stress to the bracket

Air-operated equipment + table of compressors

The addition of extra auxiliary equipment not planned by the manufacturer must without fail be connected to the specific auxiliary equipment circuit.

The compressed air consumption of this auxiliary equipment should in no way compromise **the braking circuit filling times laid down by the legislation in force.**

The RENAULT TRUCKS Product Applications Department is at your disposal for any further information.


The assembly of extra equipment piping must be routed in the trough located on the left-hand side inside the chassis.

If the trough does not allow passage of extra equipment piping, route the pipe on the outside of the trough. Hold the pipe with "COLSON" clamps.


If the vehicle is equipped with an electric retarder, route the auxiliary equipment piping between the heat shield and the trough.

Connection diagram

Solo rigid

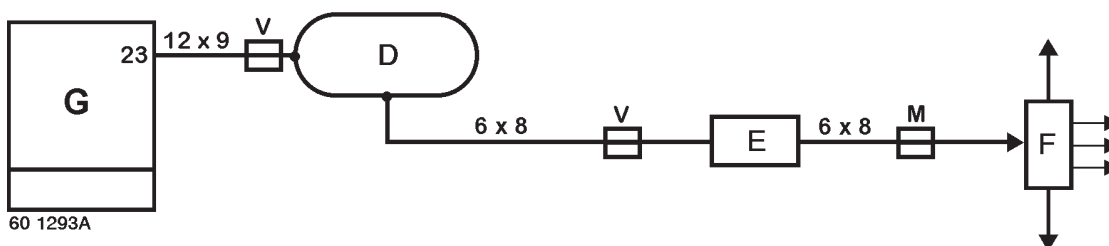

Drawbar rigid and tractor

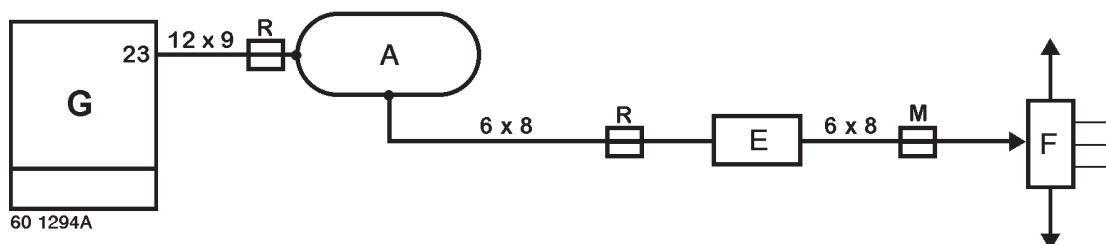

- A - Trailer and parking brake air tank
- C - Pressure reducing valve
- D - Parking brake air tank
- E - Overflow valve
- F - Bodybuilder's socket
- G - Pressure gauge block
- R - Red coloured ring
- M - Brown coloured ring
- V - Green coloured ring

Table of compressors (vehicle stationary)

<p>COMPRESSOR LP 4845</p>	<p>COMPRESSOR DISPLACEMENT Twin-cylinder 500 cc</p>	<p>DRIVE RATIO 1.31</p>	<p>without limitation to usage</p>	<p>8 bar at 1000 rpm engine</p>	<p>200 L/min</p>
				<p>8 bar at 1500 rpm engine</p>	<p>290 L/min</p>
				<p>9 bar at 1000 rpm engine</p>	<p>190 L/min</p>
				<p>9 bar at 1500 rpm engine</p>	<p>280 L/min</p>
			<p>usage limited to 5 minutes per hour</p>	<p>8 bar at 1000 rpm engine</p>	<p>400 L/min</p>
				<p>8 bar at 1500 rpm engine</p>	<p>580 L/min</p>
				<p>9 bar at 1000 rpm engine</p>	<p>380 L/min</p>
				<p>9 bar at 1500 rpm engine</p>	<p>560 L/min</p>

3. ELECTRICS


3.1 Earths

3.1.1 Cab earths

Cab fastenings are by means of M6 stainless steel studs welded to the cab.

Front end earths


- 1 - Stainless steel stud M6 welded to front end panel
Connection unit - Cab
- 2 - Stainless steel stud M6 welded to front end panel
Cab - Chassis
- 3 - Stainless steel stud M6 welded to front end panel
- 4 - Stainless steel stud M6 welded to front end panel
Heated windscreen

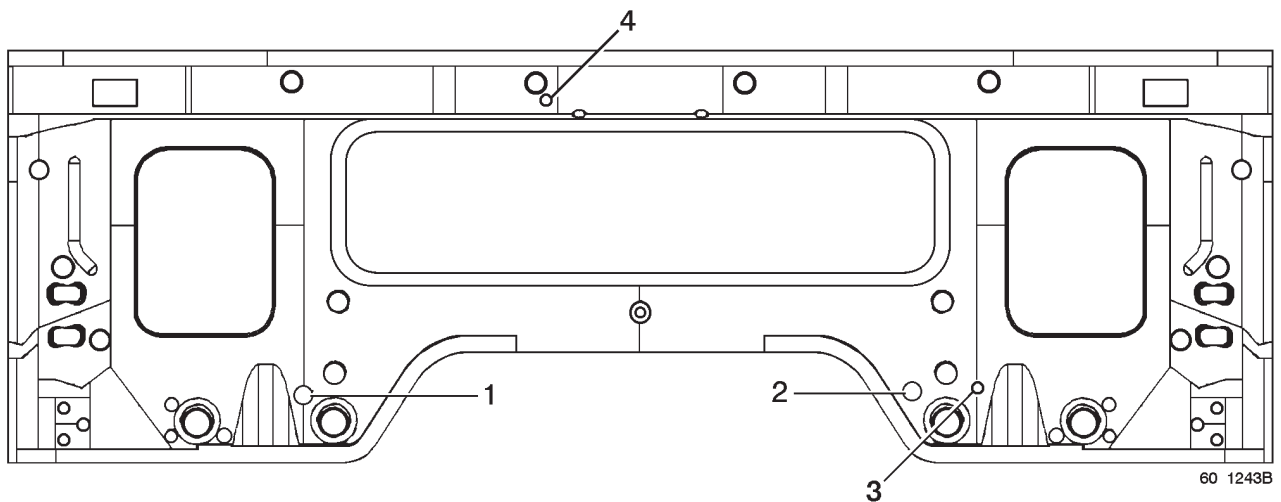

Fastening of earth lug or braid to cab

- 1 - Front end panel
- 2 - Stainless steel washer dia. 6 mm
- 3 - Stainless steel stud M6 welded to front end
- 4 - Stainless steel nut M6
- 5 - Earth lug or braid



Nut (4) tightening torque: 9 ± 1 Nm

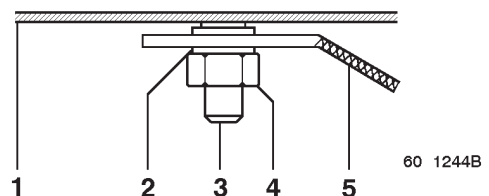

3.1.2 Chassis earths

All chassis earths are on the LH sidemember through dia.11 or 13 mm holes.


- 1 - Front signalling earth
- 2 - Engine earth
- 3 - Battery earth
- 4 - Electric retarder earth
- 5 - Rear wiring harness earth
- A - Painted sidemember
- B - Specific tinned surface dia. 45 mm
- C - Fixing hole dia. 11 or 13 for electrical earths

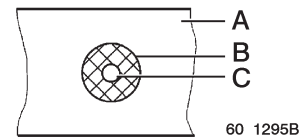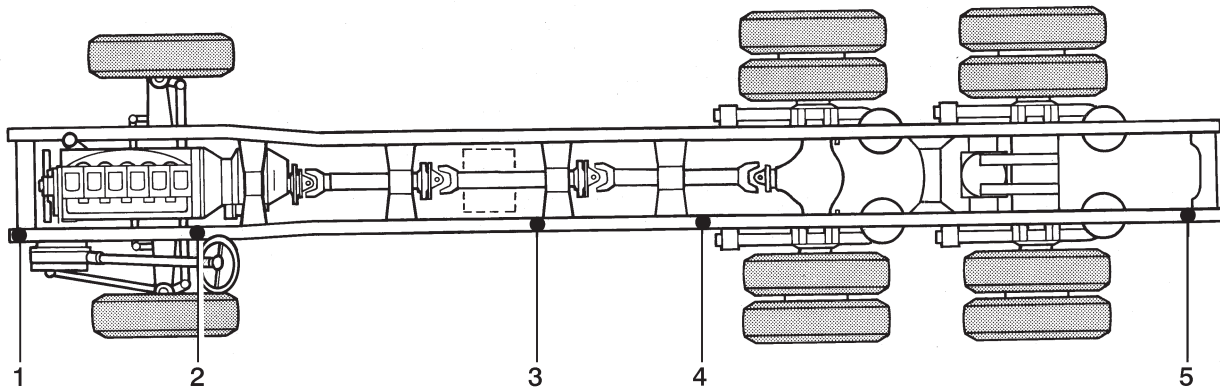

Assembly to electrical earth points dia. 11 mm

- A - Tinned surface dia. 45 mm
- B - Plain stainless steel washer dia. 10 mm
- C - Stainless steel nut H10 x 150
- D - Earth lug or braid
- E - Sidemember
- F - Stainless steel bolt M10 x 150.


Tightening torque: 45 ± 9 Nm

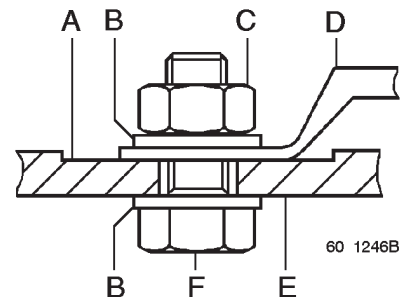

Assembly to electrical earth points dia. 13 mm

- A - Tinned surface dia. 45 mm
- B - Plain stainless steel washer dia. 10 mm
- C - Stainless steel nut H10 x 150
- D - Earth lug or braid
- E - Sidemember
- F - Stainless steel bolt M10 x 150.

Tightening torque: 45 ± 9 Nm

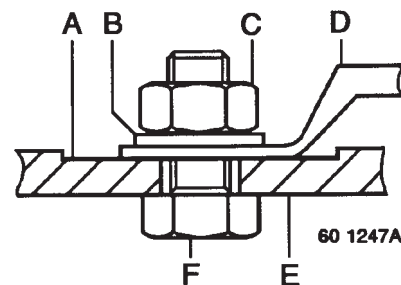


Making an electrical earth

When the rear overhang is modified, it is necessary to find a new location for the electrical earth. Some equipment needs to be connected to earth at a point other than on the originally planned earths. In these cases, the operating procedure is as follows:

- Mill dia. 45 mm, using a shouldered spotfacing cutter (surface finish R 40).
- Tin the surface, using a product containing 40% silver, temperature 230°C, min. thickness 4 μ /mm².

3.2 Passage of wiring harnesses and compressed air pipes

Two routings have been provided on the cab for the passage of wiring harnesses to ensure a link between the inside of the cab and the chassis (RH & LH sides).

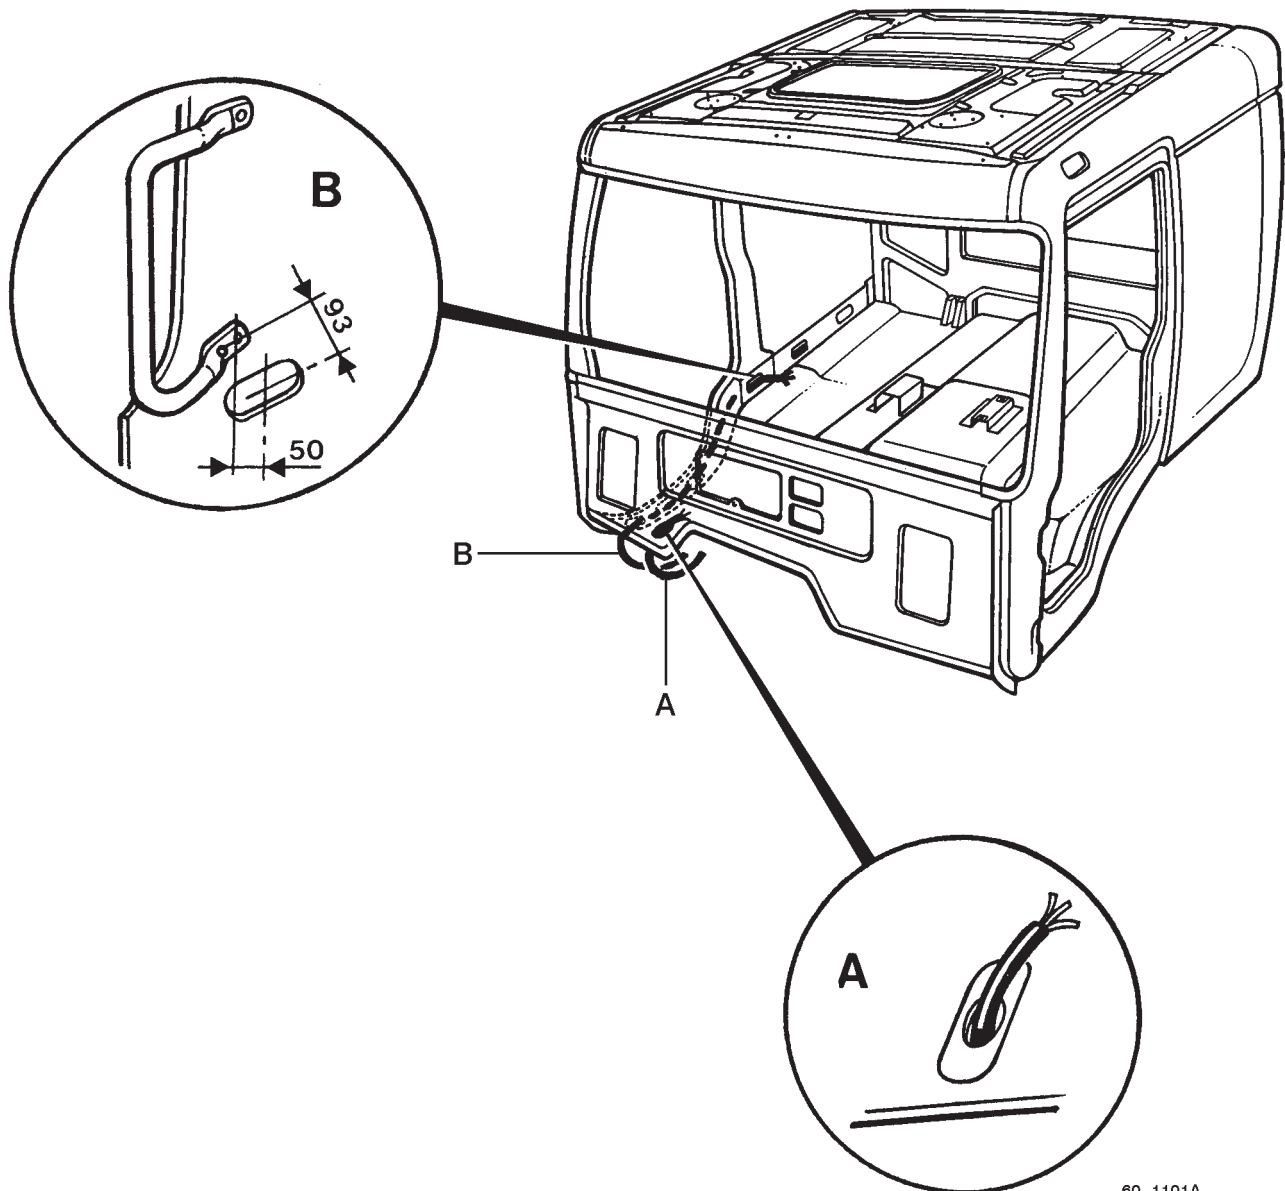

60 1101A

Two solutions

A - In the dia. 45 mm impression on the sheet metal floor:
Drill a hole to allow the passage of a wiring harness.
Fit a grommet to provide a tight seal.

B - Cut out the lining and pass the wiring harness through the rail to gain access to the chassis.

4. CHASSIS

4.1 Steel classes for sidemembers

Sidemembers cascade down into one class of steel (chapter A-2.1.4):

- class E for the entire 4x2, 4x4, 6x4, 6x6 tractor series
- class D for the entire 4x2, 4x4, 6x4, 6x6, 8x4 rigid series

4.2 Sidemember sections

The section of sidemembers for the entire series is 302 (outside) x 82 x 8 mm.

4.3 Reinforcement, extension, shortening of sidemembers in the rear overhang

If the bodywork or fitted equipment do not modify the chassis weight and dimensions entered in the descriptive notice, the vehicle can be presented to the Type Approval department without intervention from RENAULT TRUCKS (within the permitted limits in force).

In the event of chassis extension, take care to use a section with size and steel grade identical to those of the sidemembers (consult the chapter "Section and class of sidemember steels"). Contact the RENAULT TRUCKS Product Applications Department for any further information or to get a list of sales outlets marketing such sections.

4.3.1 Modification to the rear overhang

In the event of extension of the rear overhang, take into consideration the regulations in force and in particular the overhang / wheelbase ratio.

4.4 Intermediate cross-member

The fitting of an intermediate cross-member or relay cross-member is vital if the number of cross-members in the extended vehicle is less than those for the corresponding standard vehicle.

Consult the RENAULT TRUCKS Product Applications Department.

Note

The cross-member that may have to be added will be different depending on the place where the sidemember is sectioned for the purpose of extension. It is therefore strongly advised, before proceeding with cutting, to determine:

- if there is any need to add a cross-member,
- the point where the fitting of the cross-member will be the easiest (e.g. fitting of a simple cross-member rather than a relay cross-member). Consult the RENAULT TRUCKS Product Applications Department.


Without second cross-member:

- 1850 mm maximum authorized if the vehicle is a drawbar rigid
- 2100 mm maximum authorized if the vehicle is not a drawbar rigid

4.5 Reinforcement, extension, shortening of double sidemembers in the wheelbase

Implementation

- Choose the place of cutting in the centre-line of a cross-member.
- Unclamp the cross-members close to the cutting zone; move them, if necessary.
- Cut the sidemember (1) and its stiffener (2) along the Y-axis (blow torch or disk).
- Separate the sidemember (1) from its stiffener (2) so as to slide a guard plate between the two to avoid damaging the stiffener during cutting.
- Cut the sidemember (1) to dimension A = 300 mm in front of the preceding cut (using a sanding disk), then perform the same operation on the other piece of the sidemember (1).
- Slide a new cross-member inside the chassis, if necessary.
- Prepare a sidemember stiffener (4) with the same cross-section and the same grade of steel as the original supply and length corresponding to the extension B.
- Make chamfers on the chassis inner side (see chapter A28).
- Weld the stiffener extension (see chapter A28 and A29).
- Prepare a sidemember (3) with the same cross-section and the same grade of steel as the original supply identical to the stiffener extension (4) increased by two times the dimension A.
- Make chamfers on the chassis inner side (see chapter A28).
- Weld the stiffener extension (see chapter A28 and A29).
- Reposition the cross-members, adding the number of cross-members corresponding to the nearest standard wheelbase.
- New cross-member to be positioned on the end of the extension, if possible.

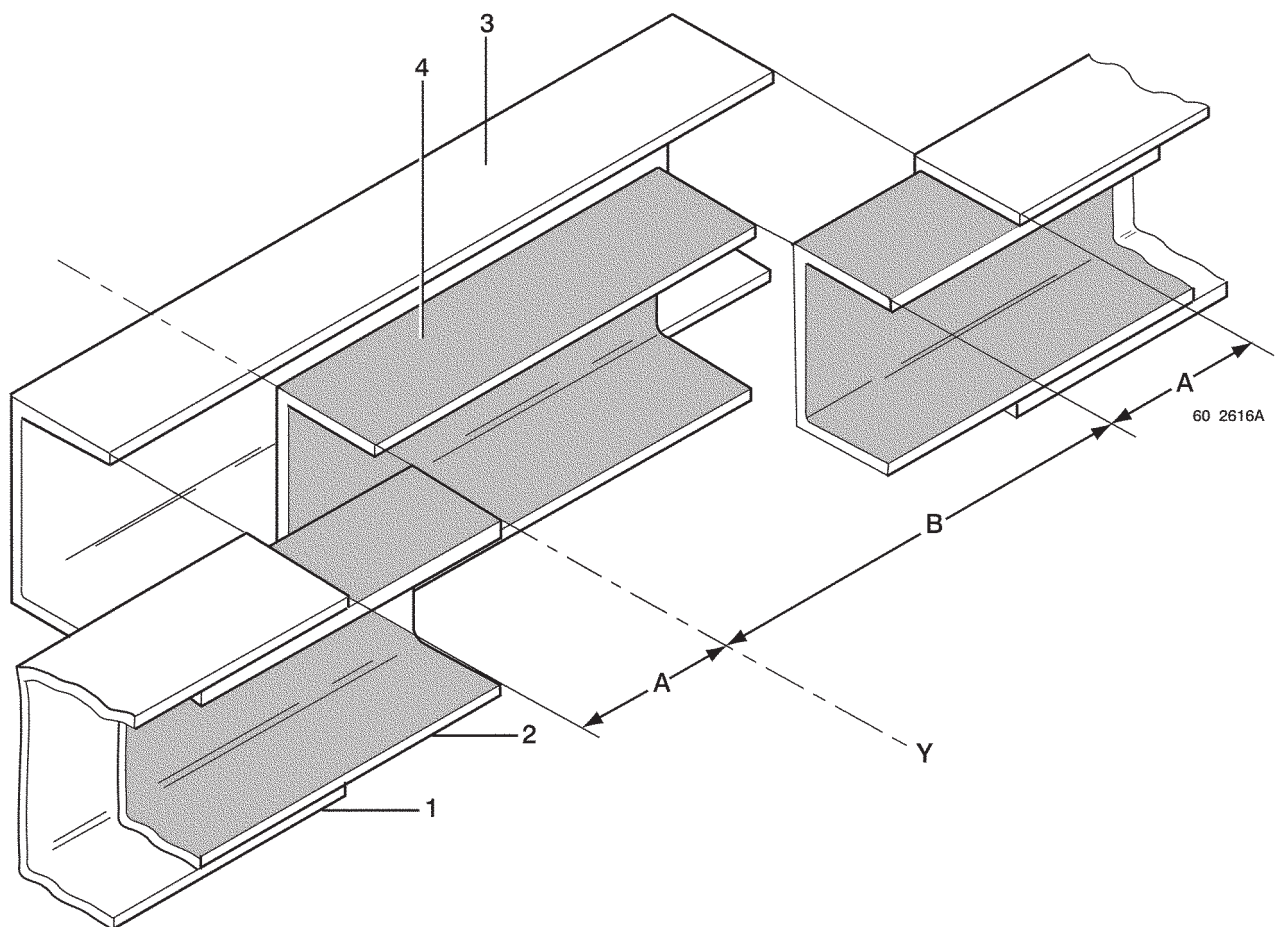

5. CHANGING THE POSITION OF EQUIPMENT ON CHASSIS

5.1 Rear run-under guard

Whatever the position of the rear run-under guard in relation to the chassis, distances (A) and (B) are to be observed without fail.


- 1 - Body rear overall (including fittings, hinges...)
- 2 - Run-under guard
- 3 - Ground

The thickness of fittings and hinges should not exceed 120 mm (distance between centre-line (1) and the rear end of the body).

Vehicle	A* (mm)	B (mm)
Rigid 18 - 19 - 26 - 32 tonnes	0 to 316 max.	550 max. unladen

* after deformation

A - maximum distance separating the run-under guard to the body rear overall
 B - maximum height of run-under guard in relation to ground, vehicle unladen

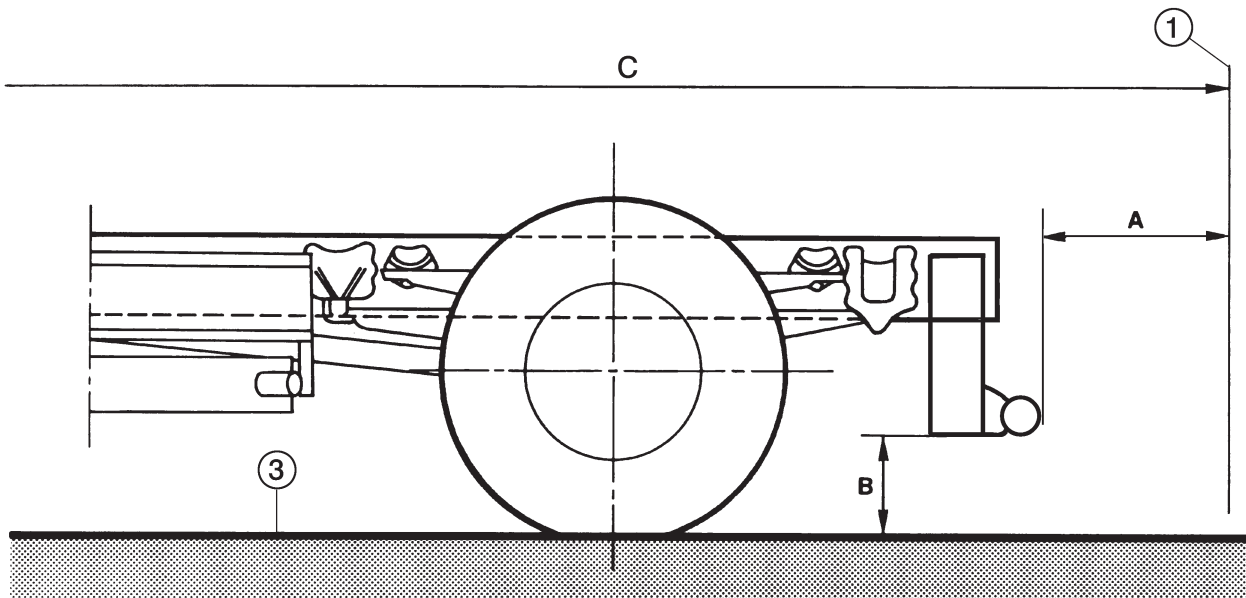

60 2285A

6. CAB FOOTPRINT




When fitting equipment behind and above the cab, consideration must be taken of cab overall dimensions due to:

- cab vertical and horizontal dynamic range of movement,
- cab tilting.

The clearance zone for cab tilting takes into consideration:

- range of movement of cab suspension,
- safety clearance to be kept between cab and equipment.

No built-on element is to be located in this zone.

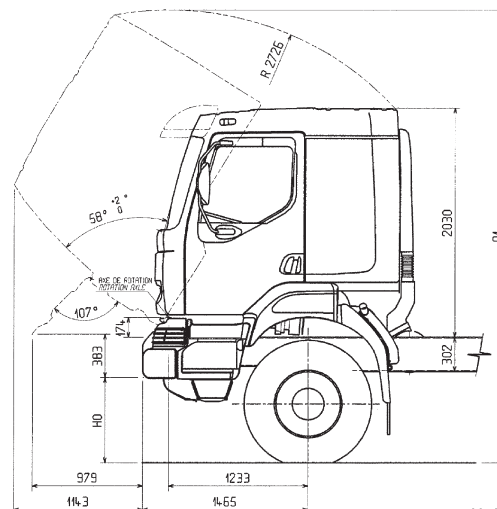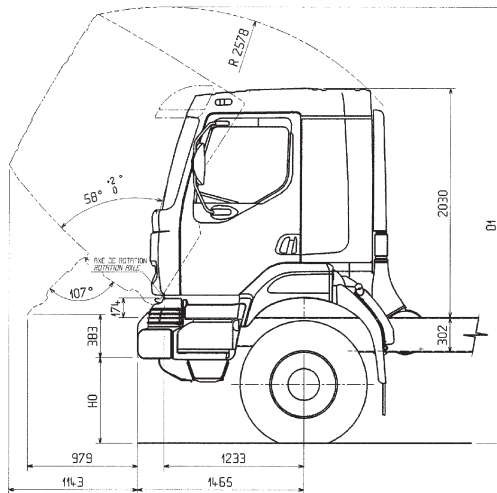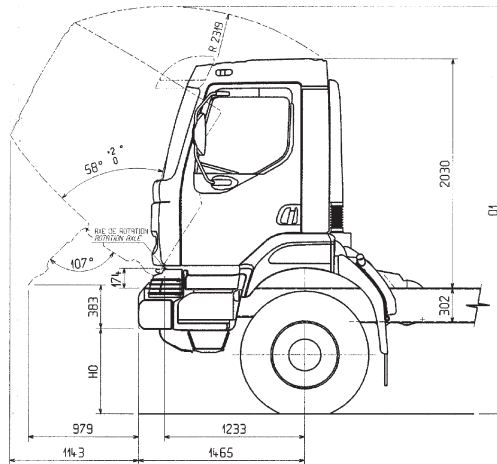


60 2350A

7. ASSEMBLY OF EQUIPMENT TO CAB

7.1 Roof catwalk

The cab roofs are designed to accommodate the attachment of a catwalk.

7.1.1 Attachment of catwalk to regular cab

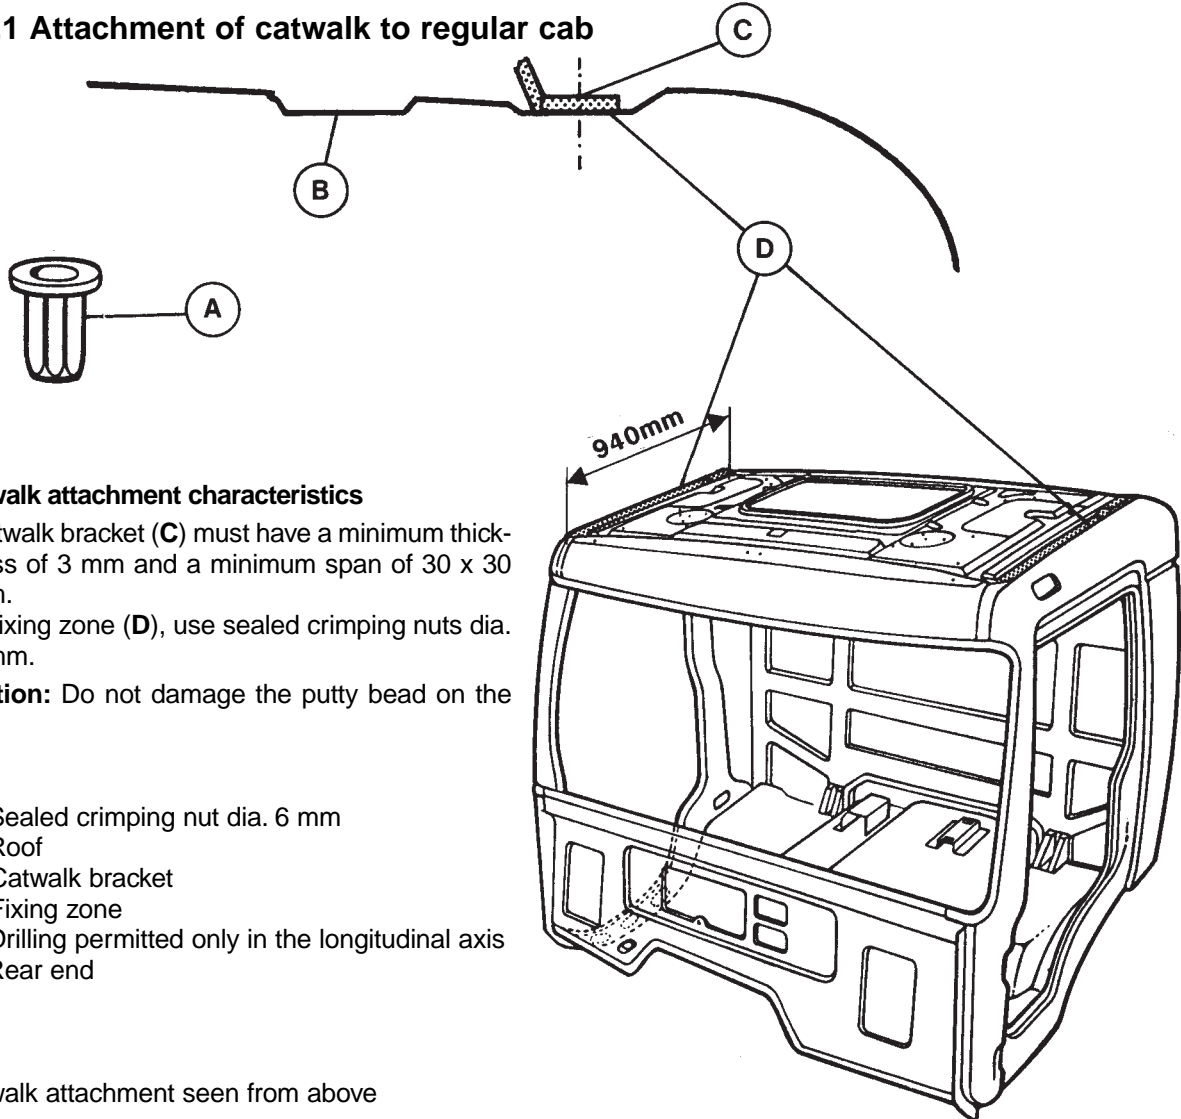


Catwalk attachment characteristics

- Catwalk bracket (C) must have a minimum thickness of 3 mm and a minimum span of 30 x 30 mm.
- In fixing zone (D), use sealed crimping nuts dia. 6 mm.

Caution: Do not damage the putty bead on the roof.

- A - Sealed crimping nut dia. 6 mm
- B - Roof
- C - Catwalk bracket
- D - Fixing zone
- E - Drilling permitted only in the longitudinal axis
- F - Rear end

Catwalk attachment seen from above

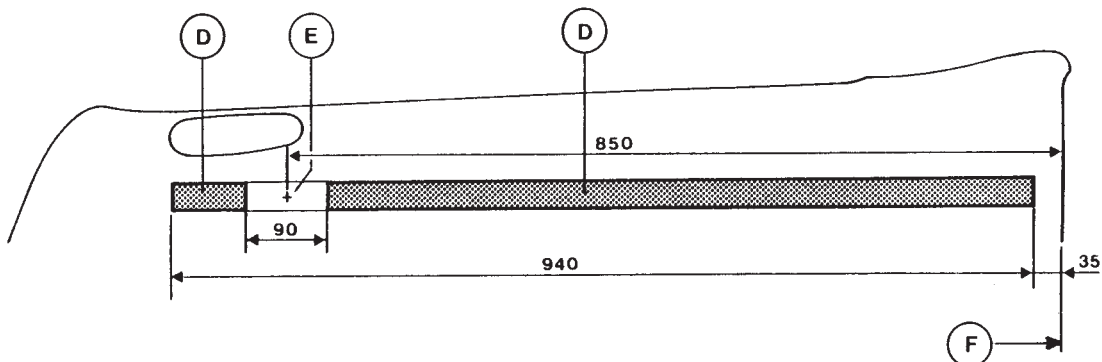

601117


7.1.2 Attachment of catwalk to long cab

Catwalk attachment characteristics


- Catwalk bracket (C) must have a minimum thickness of 3 mm and a minimum span of 30 x 30 mm.
- In fixing zone (D), use sealed crimping nuts dia. 6 mm.

Caution: Do not damage the putty bead on the roof.

- A - Sealed crimping nut dia. 6 mm
- B - Roof
- C - Catwalk bracket
- D - Fixing zone
- E - Drilling permitted only in the longitudinal axis
- F - Rear end

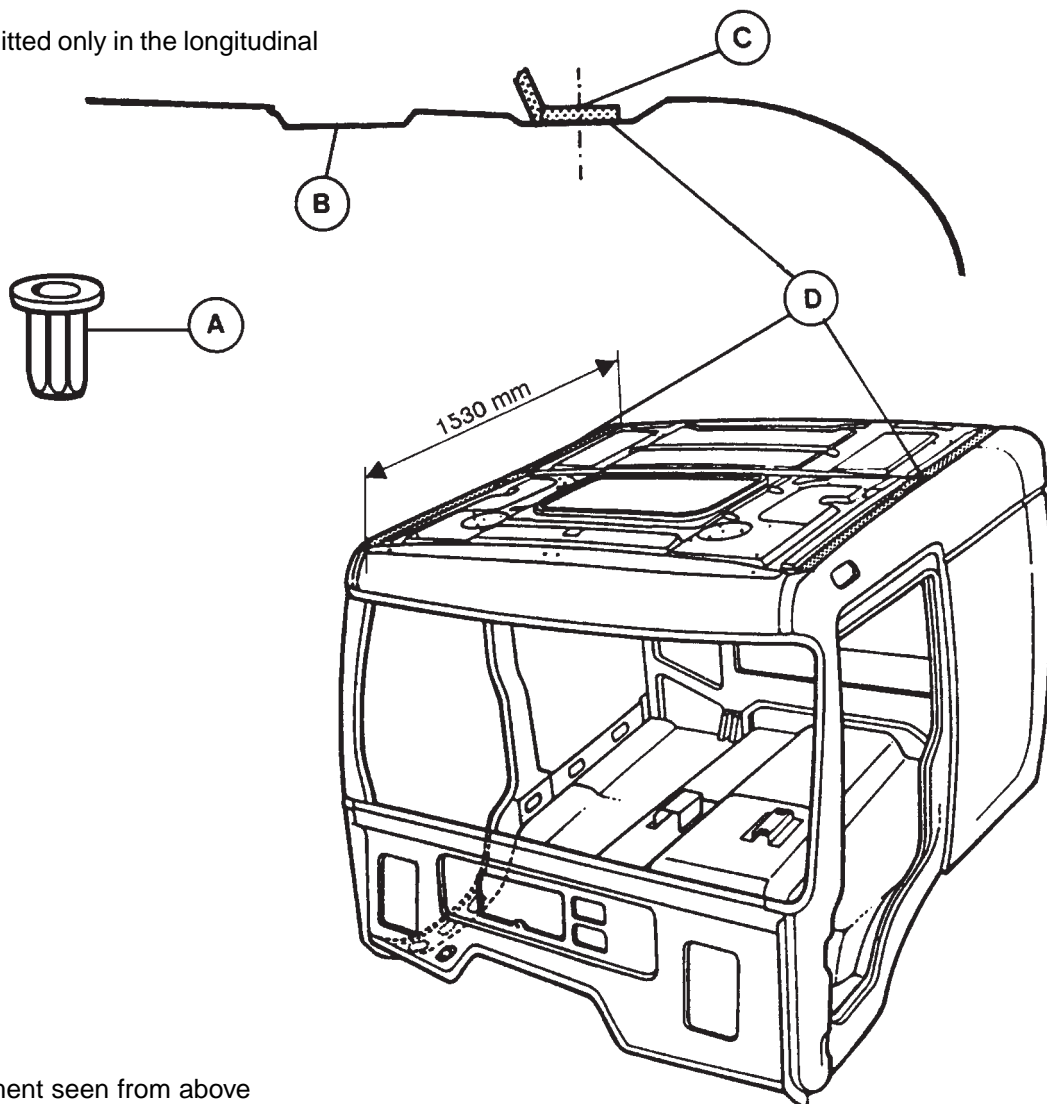


Catwalk attachment seen from above

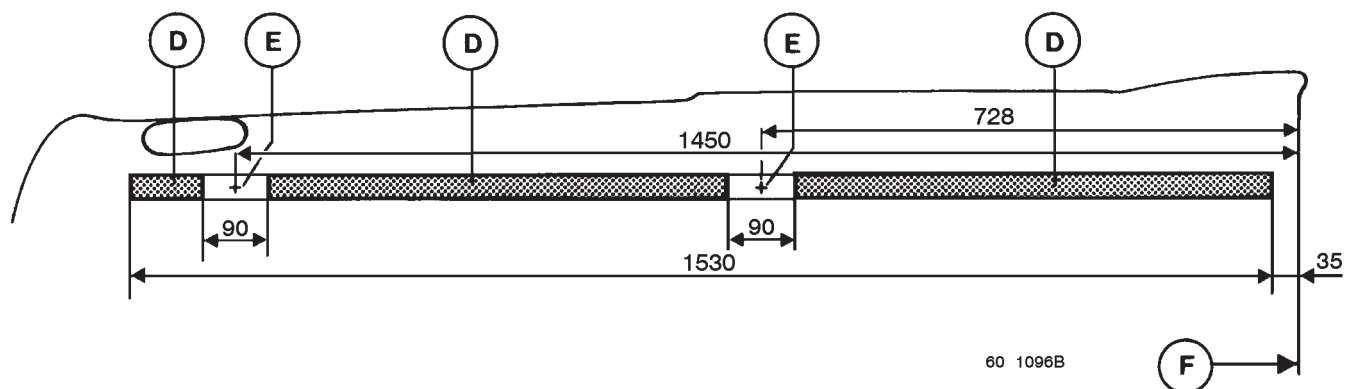

7.2 Ladder

The design of the roof and the lower parts of the cab sides allow a ladder to be attached on the LH side or on the RH side, except for the RH side of regular cabs.

7.2.1 Attachment of ladder to regular cab

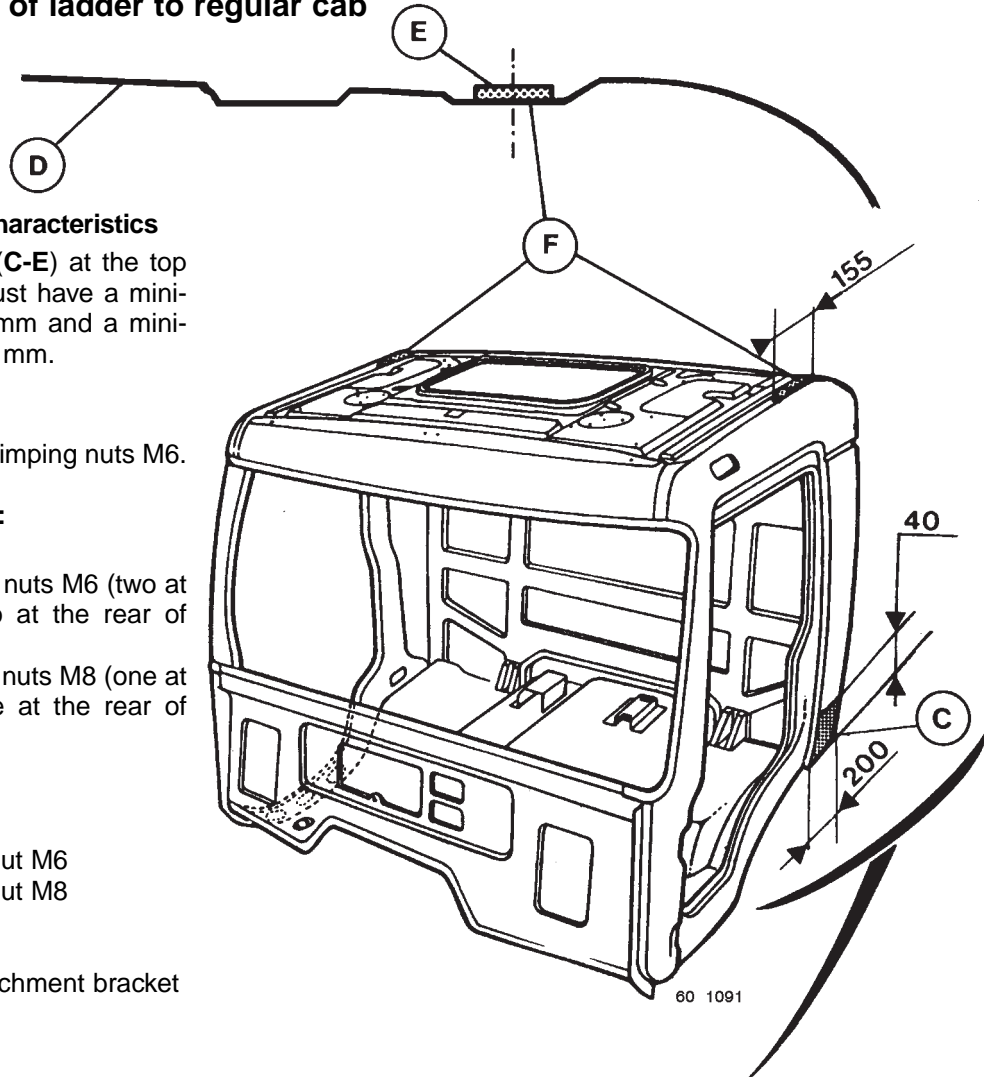

Ladder attachment characteristics

The ladder brackets (C-E) at the top and at the bottom must have a minimum thickness of 3 mm and a minimum span of 30 x 30 mm.

Top part (zone F):

- one or two sealed crimping nuts M6.


Bottom part (zone C):

Two possibilities:

A - 4 sealed crimping nuts M6 (two at the front and two at the rear of zone (C)).

B - 2 sealed crimping nuts M8 (one at the front and one at the rear of zone (C)).

- A - Sealed crimping nut M6
- B - Sealed crimping nut M8
- C - Lower fixing zone
- D - Roof
- E - Ladder upper attachment bracket
- F - Upper fixing zone

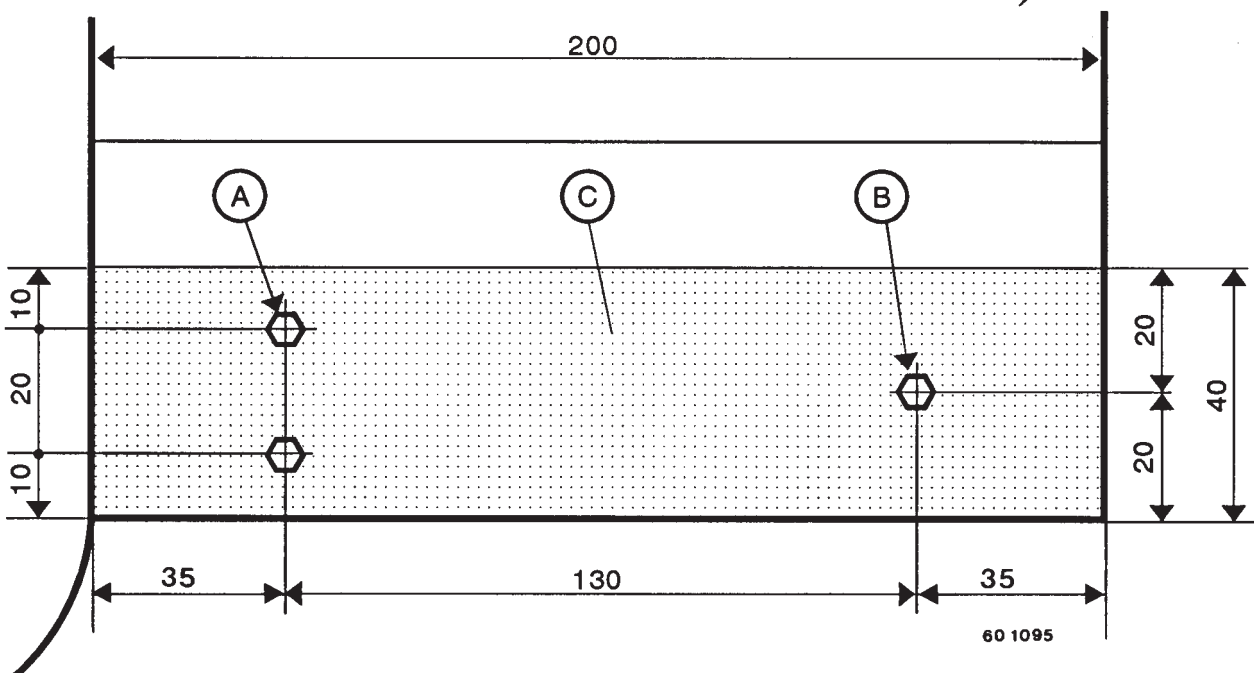

7.2.2 Attachment of ladder to long cab

Ladder attachment characteristics

The ladder brackets (C-E) at the top and at the bottom must have a minimum thickness of 3 mm and a minimum span of 30 x 30 mm.

Top part (zone F):

- one or two sealed crimping nuts M6.

Bottom part (zone C):

Two possibilities:

A - 4 sealed crimping nuts M6 (two at the front and two at the rear of zone (C)).

B - 2 sealed crimping nuts M8 (one at the front and one at the rear of zone (C)).

A - Sealed crimping nut M6


B - Sealed crimping nut M8

C - Lower fixing zone

D - Roof

E - Ladder upper attachment bracket


F - Upper fixing zone

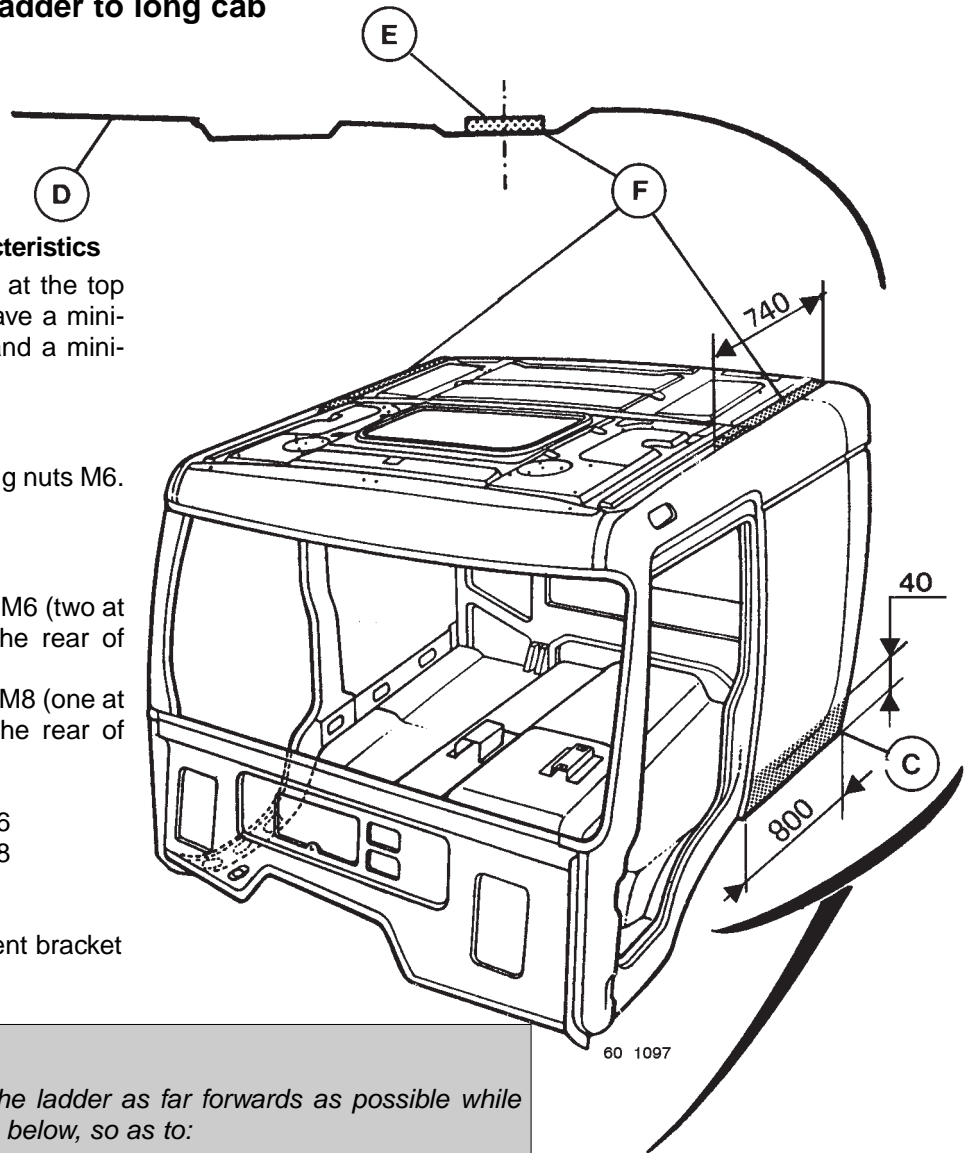

IMPORTANT

It is advised to position the ladder as far forwards as possible while observing the dimensions below, so as to:

- facilitate access to the ladder,
- avoid any interference between the ladder and external lugs on chassis or cab.

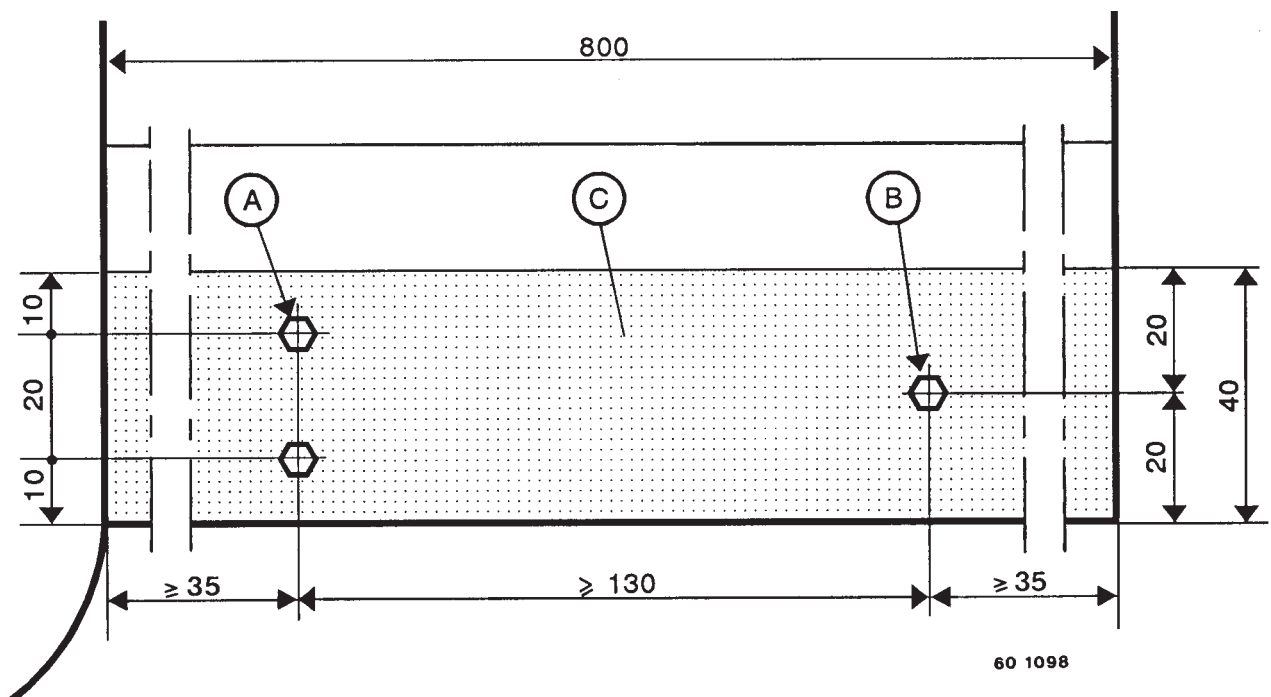

7.3 Assembly of accessories on roof

IMPORTANT

The roof is different according to the cab original fitment equipment:

- Welded fixing nuts (1) for the deflector are used only with roof stiffeners on cabs equipped with deflector as standard.
- Sunshade, frontview mirror and gantry are components requiring the presence of a stiffener (2) welded as standard to the cab for their installation. This stiffener, located in an inaccessible zone, cannot be assembled as aftermarket fitment. On account of this, installation of sunshade, gantry and frontview mirror can only be carried out if certain conditions are met. Installation possibilities are detailed in chapter C-7.3.6, 7.3.7, 7.3.8.

Equipment capable of being assembled, whatever the roof:

- Revolving beacons
- CB radio antenna
- Telephone antenna
- Air horns.

On the roof, impressions locate the position of accessory fastenings

7.3.1 Installation of antennae

CB radio antenna:

- Wiring harness passage: at point (3), drill a hole dia. 4.3 mm.
- Antenna fastening: at point (4), drill a hole dia. 8.7 mm.


Telephone antenna

- At point (1), drill a hole dia. 14.5 mm.

Fire antenna

- Locate drilling point (2).
- Drill a hole dia. 24.5 mm.


The wiring harness passages must be hermetically sealed. Use a wire grommet and sealing compound, if necessary.

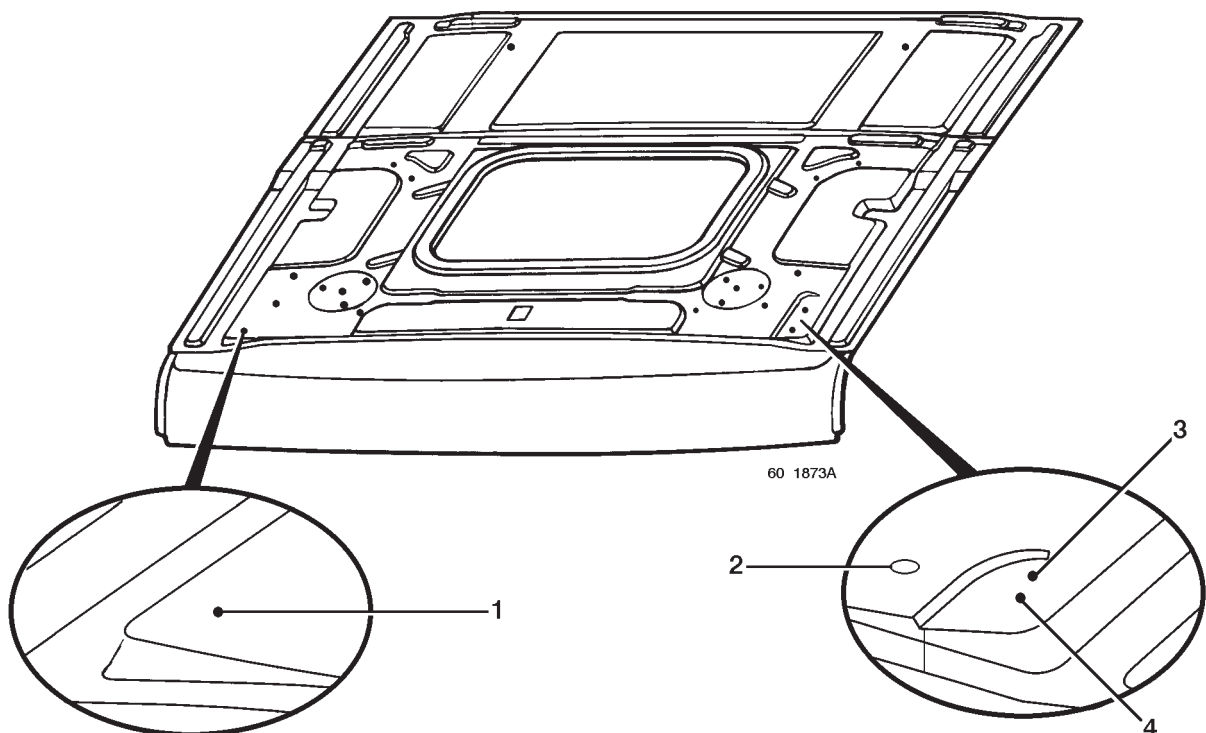

7.3.2 Installation of revolving beacons

- Wiring harness passage: at point (5), drill a hole dia. 35 mm.
- Revolving beacon fastening: at points (6), drill a hole dia. 7.2 mm.


The wiring harness passages must be hermetically sealed. Use a wire grommet and sealing compound, if necessary.

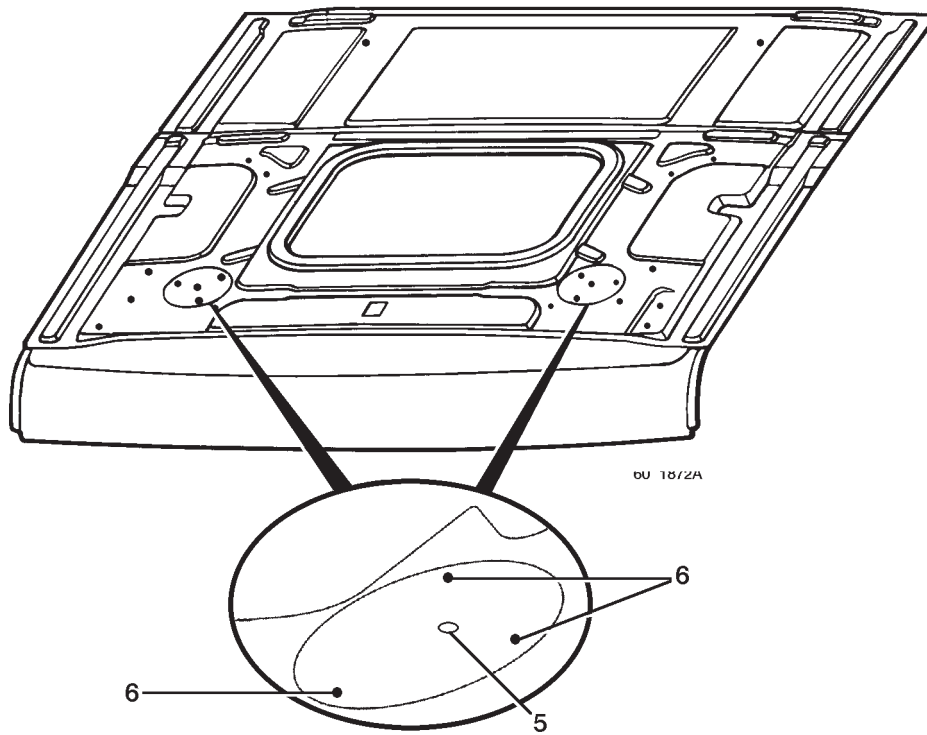

7.3.3 Installation of air horns

- Horns fastening: at points (7), drill a hole dia. 7.2 mm.
- Compressed air pipes passage: at point (8), drill a hole dia. 16.5 mm.

The compressed air pipes passage must be hermetically sealed. Use a wire grommet and sealing compound, if necessary.

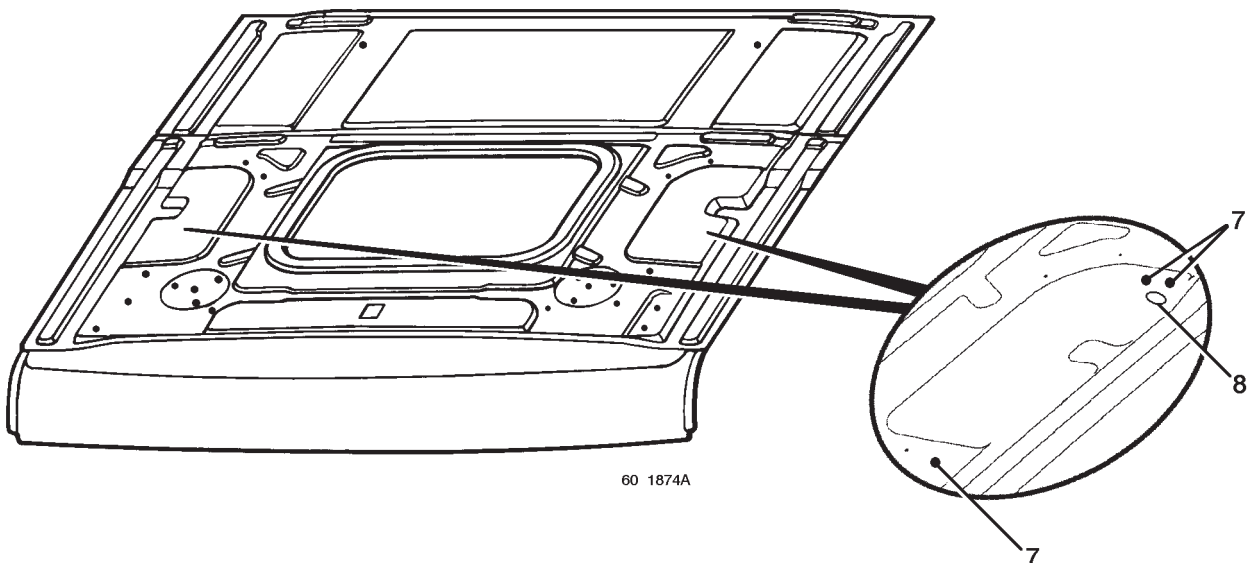


7.3.4 Installation of roof deflector


Impressions (9-10-11-12) locate the deflector fastenings. Nuts are welded to the roof stiffener if the vehicle is provided with a gantry as standard. If it is not, it is essential to use the clamping segments available from the RENAULT TRUCKS. Spare Parts department. Drill holes dia. 12.2 mm at points (9-10) or (11-12).

Note


Assembly of the roof deflector is incompatible with the presence of a gantry.

 Upon reception of vehicles fitted with a deflector as standard, do not forget to remove the wooden board to be found inside the deflector. This is used for transport purposes only.


Regular cab

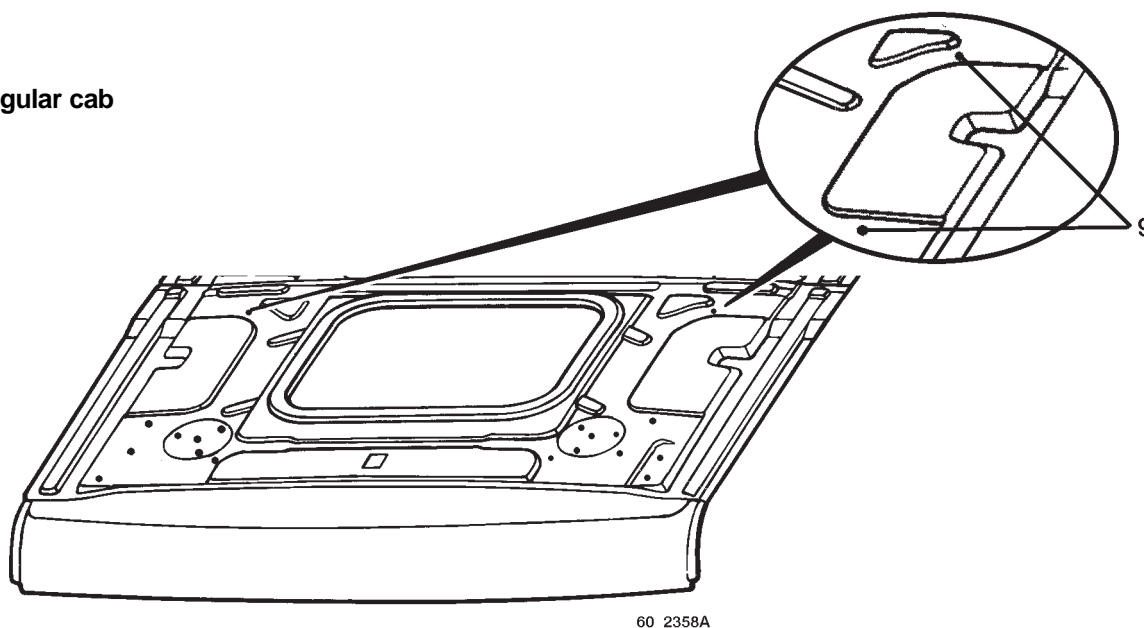

Medium cab

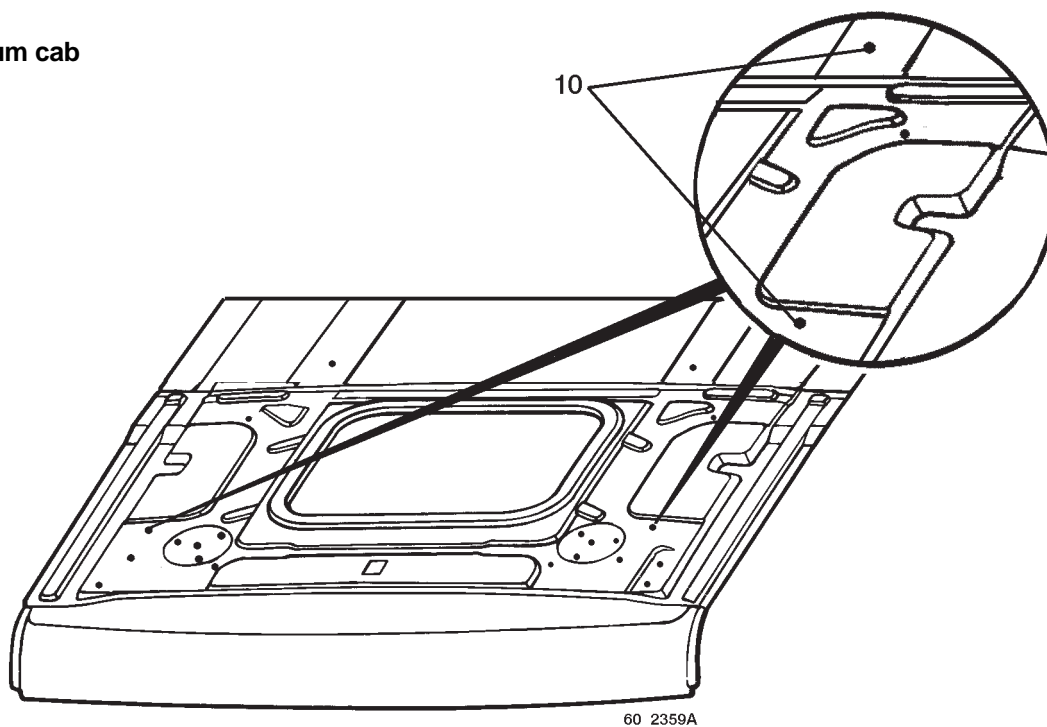

Long cab

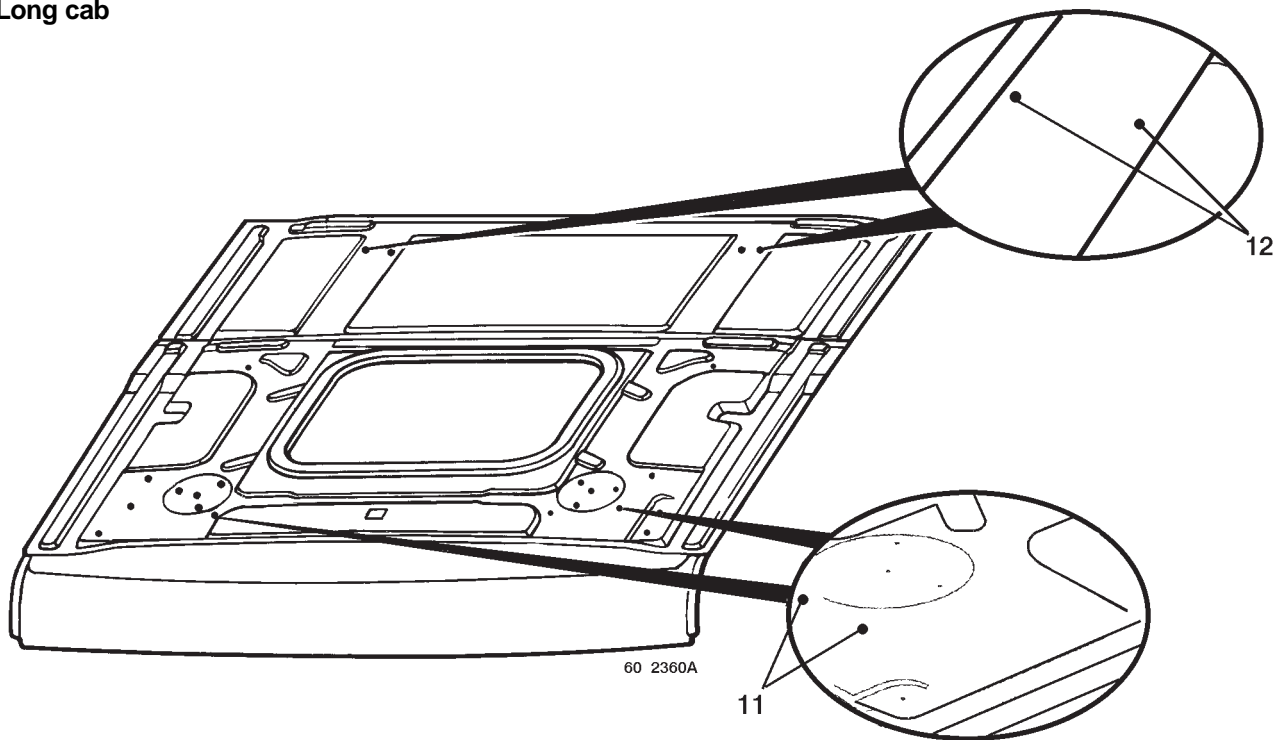


7.3.5 Installation of side deflector

Two studs on the roof:


- (25) on regular cab
- (26) on medium cab
- (27) on long cab

Ten studs on rear end

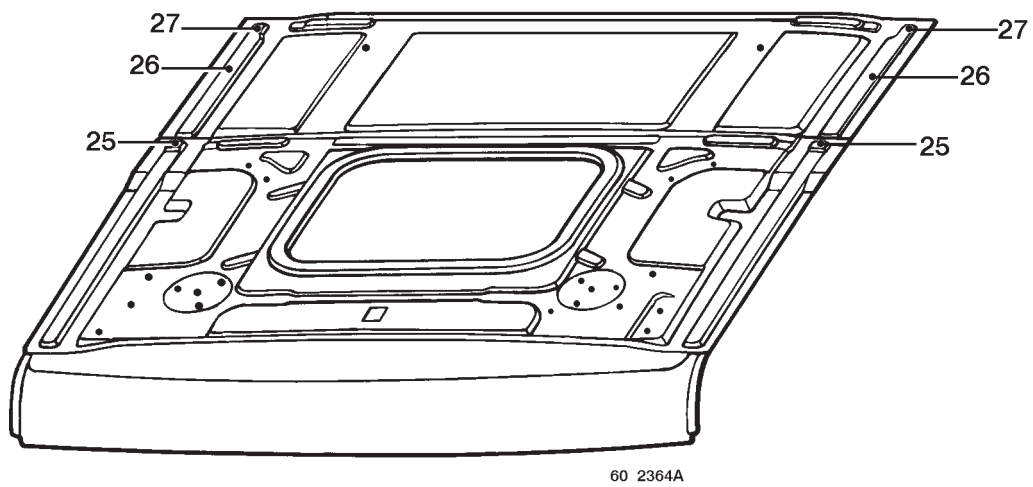


7.3.6 Installation of frontview mirror

Assembly of a frontview mirror is possible if the standard vehicle is equipped with gantry and/or sunshade. If the vehicle is equipped with gantry and/or sunshade, there already exist fastening drillings on the canopy. The frontview mirror base-plate takes the place of the gantry fixing spacer. If the vehicle is not equipped with gantry, drillings (18) must be made in the canopy. Drilling dia.: 12.2 mm.

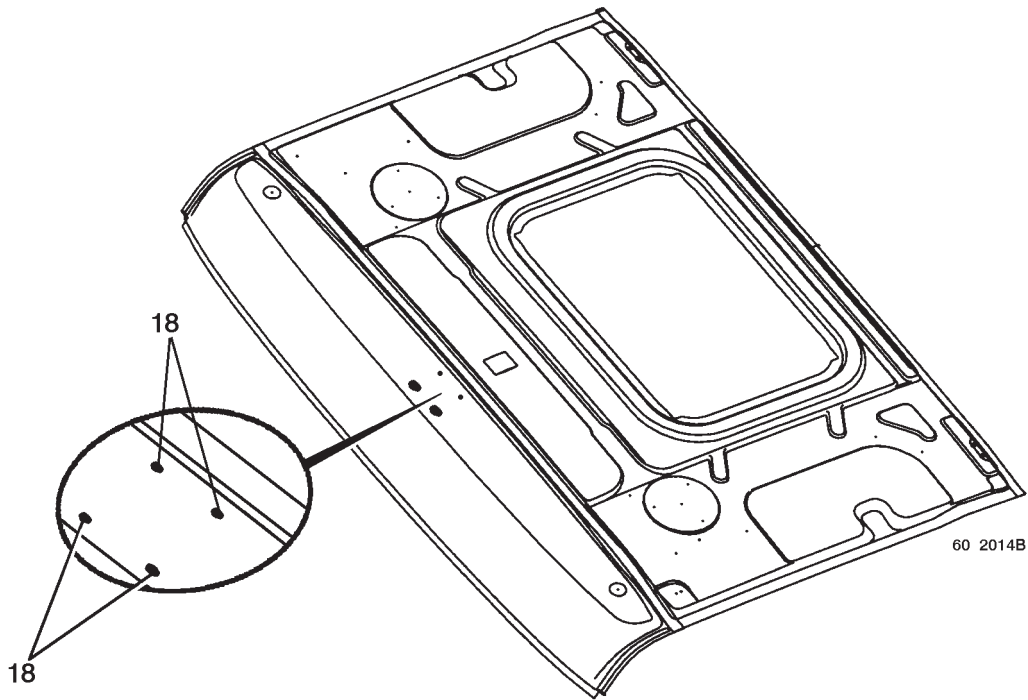

Assembly of a frontview mirror on vehicle equipped with a gantry:

The spacer (A) located on the central front fixing point (C) of the gantry is to be removed before installing the frontview mirror on the roof (D). The frontview mirror base-plate (B) plays the part of spacer.

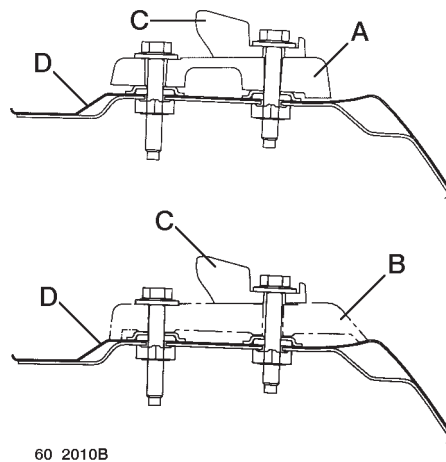


7.3.7 Installation of sunshade

Assembly of the sunshade is possible if the standard vehicle is equipped with gantry and/or frontview mirror.

Drillings to be made on the canopy:

(19) - 4 drillings dia. 12.2 mm.

(20) - 6 drillings for fitting sealed crimping nuts M8.

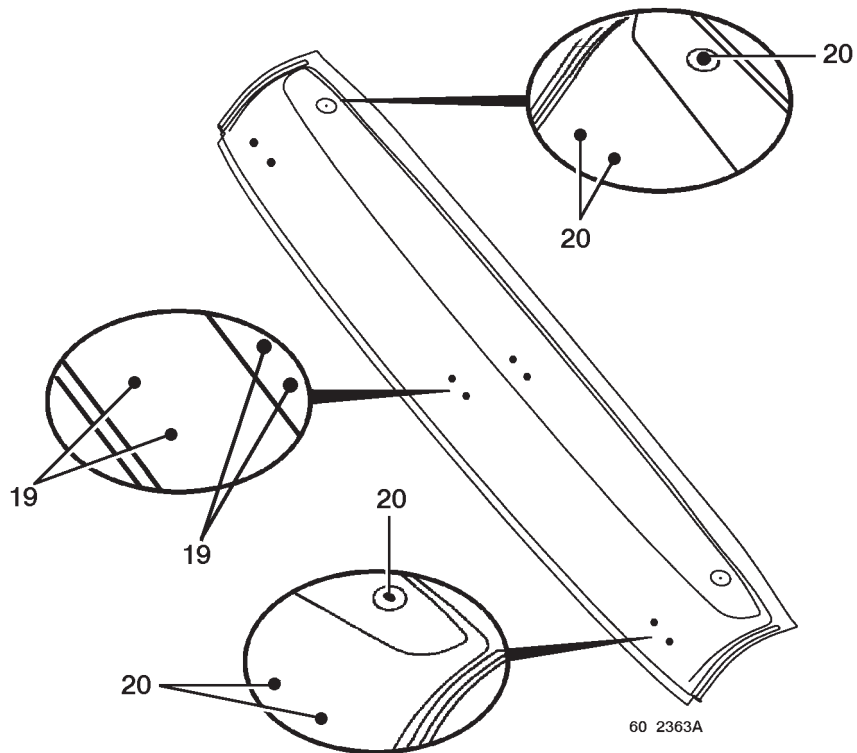

7.3.8 Installation of gantry

The gantry can only be assembled as replacement for the deflector on the following assemblies:

- deflector and sunshade,
- deflector and frontview mirror,
- deflector, sunshade and frontview mirror.

The gantry allows a maximum loading weight of 30 kg to be supported.

Fastening the gantry:

- At points (21-22), make drillings dia. 12.2 mm.

Wiring harness passage aperture:

- At point (23), make a drilling dia. 26.8 mm to allow passage of the wiring harness.

Passage (23) of the wiring harness must be hermetically sealed. Use a wire grommet and sealing compound, if necessary.

Note

Holes (24) already exist.


Holes (22) already exist on long cabs in the case of replacement of a deflector by a gantry.

IMPORTANT

All the unused deflector fixing holes must be blanked off with M8 screws and sealing washers.


Assembly of a gantry on vehicle equipped with a frontview mirror:

Do not assemble spacer (A) as the frontview mirror base-plate (B) does the same job.

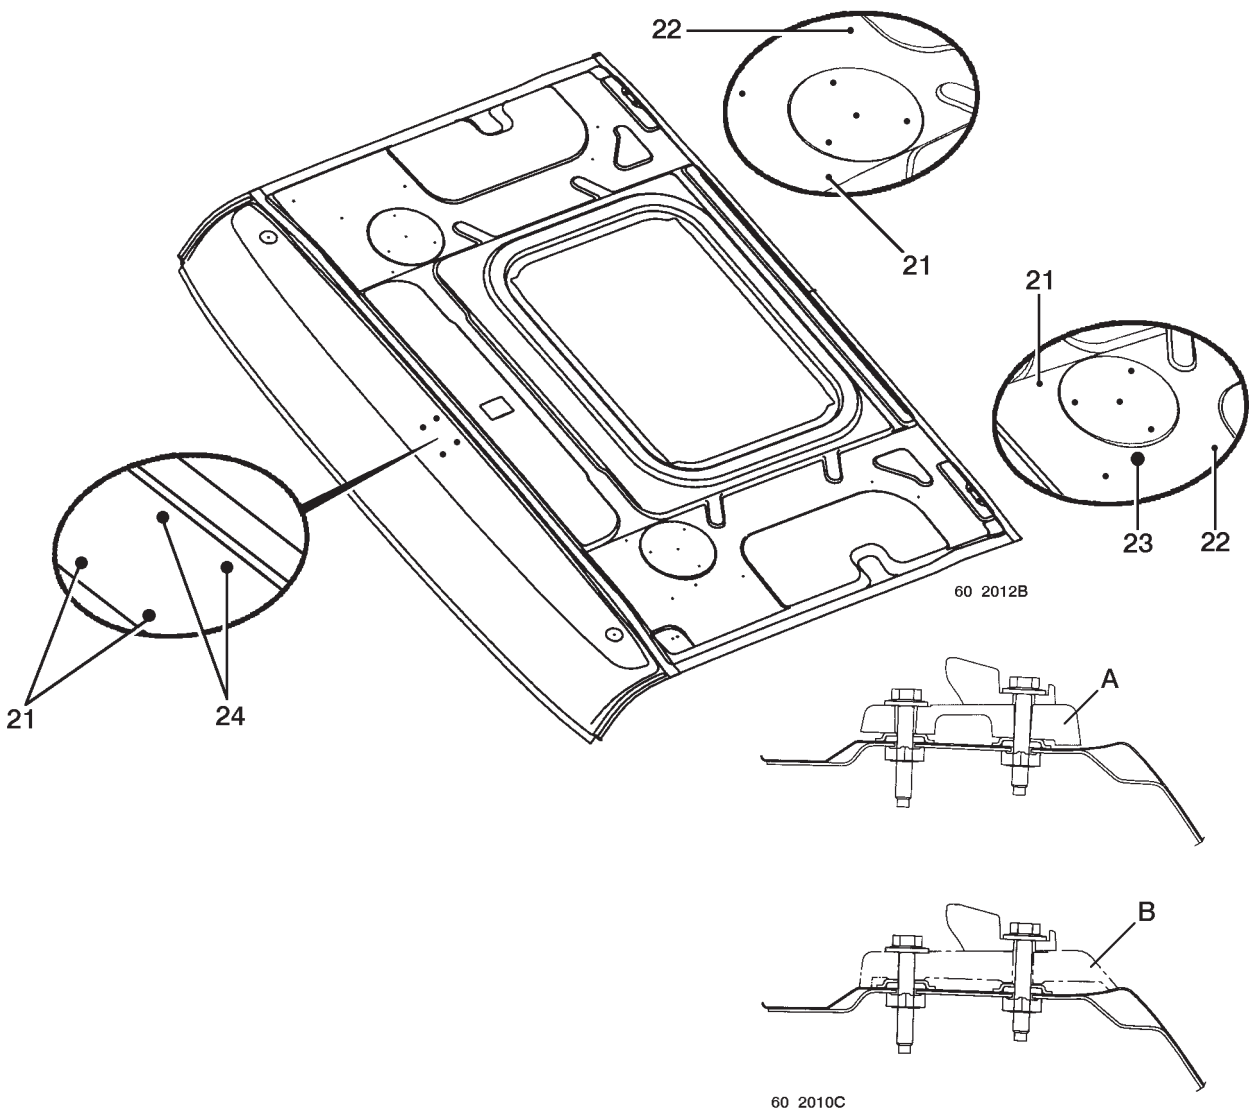

7.4 Fastening of accessories

Distribution cabs are provided with fittings on the engine tunnel for adapting various accessories.

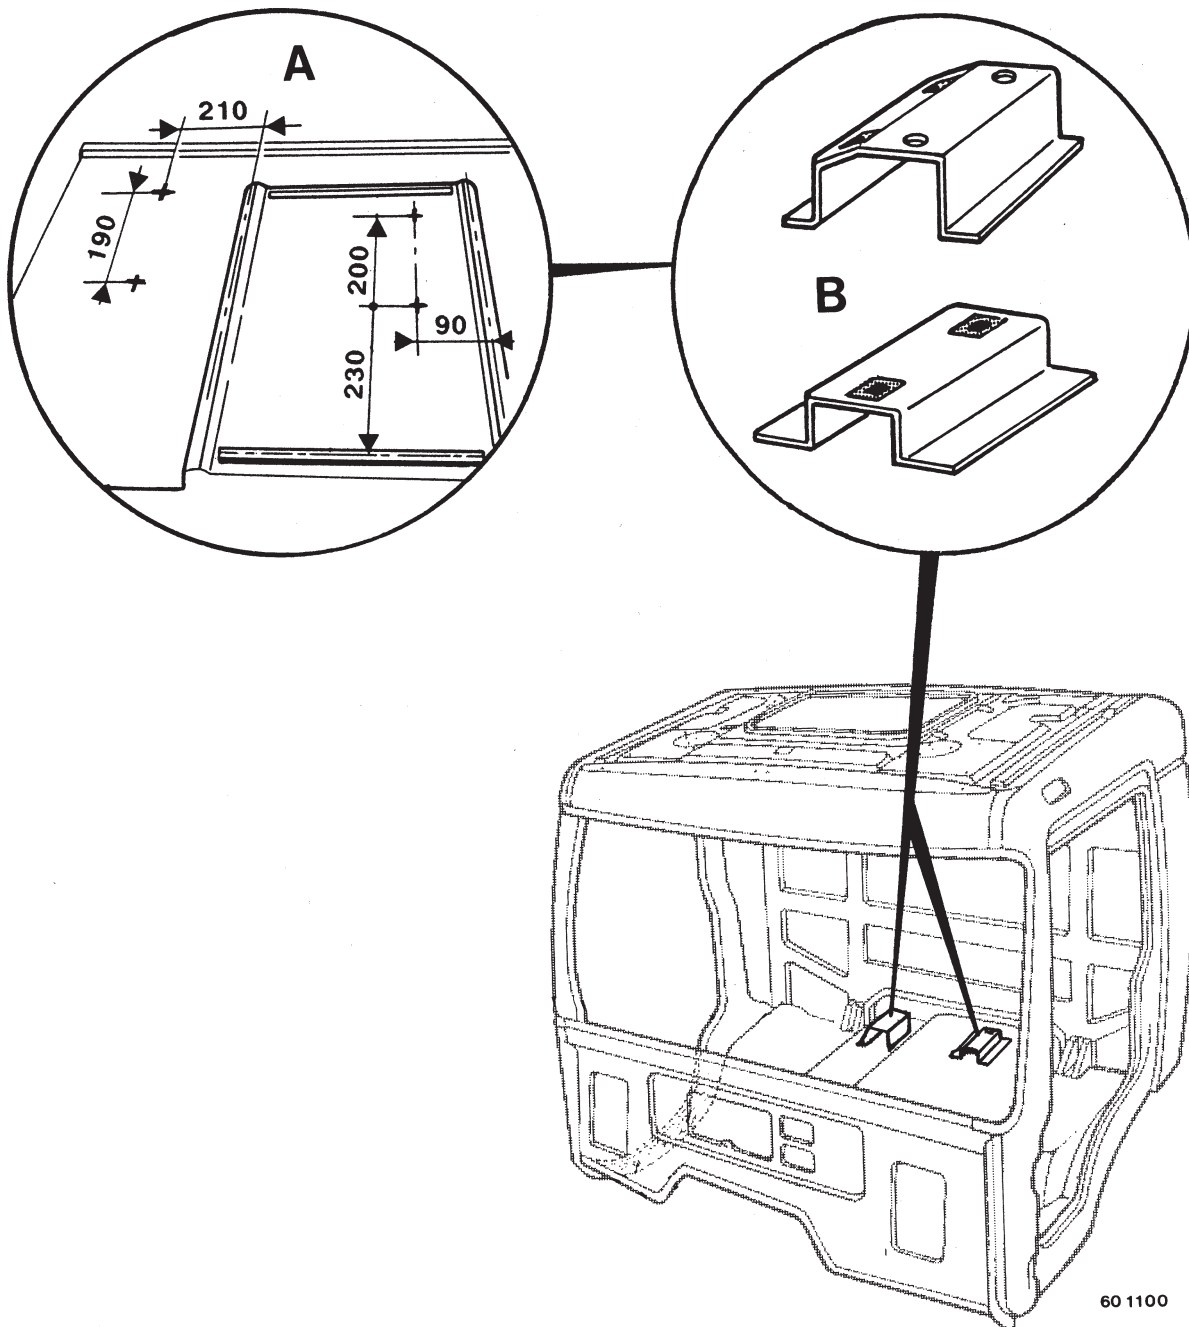

Location of fastenings

A - On the engine tunnel trim, mark and cut out the trim.

B - Fittings detail

8. VERTICAL EXHAUST

Moving the position of the tie-rod for mounting the sub-frame


On vehicles fitted with a global cab (2 m) or a long cab (2.2 m), the tie-rod is to be moved for bodybuilding purposes according to the information given in the drawings.

Cab (2 m) on 6x4 vehicle

- 1 - Tie-rod
- 2 - Fixing lug
- 3 - Bracket
- 4 - Sidemember
- 5 - Cab strut
- 6 - Sub-frame
- 7 - Hole to be used for bodybuilding
- 8 - Ex works position of existing hole
- A - Position of ex works fixing lug
- B - Position modified during bodybuilding

IMPORTANT

The stiffness of the sub-frame should allow a stiffness of the exhaust assembly to be achieved identical to the state on delivery, namely $f = 28 \text{ Hz min.}$

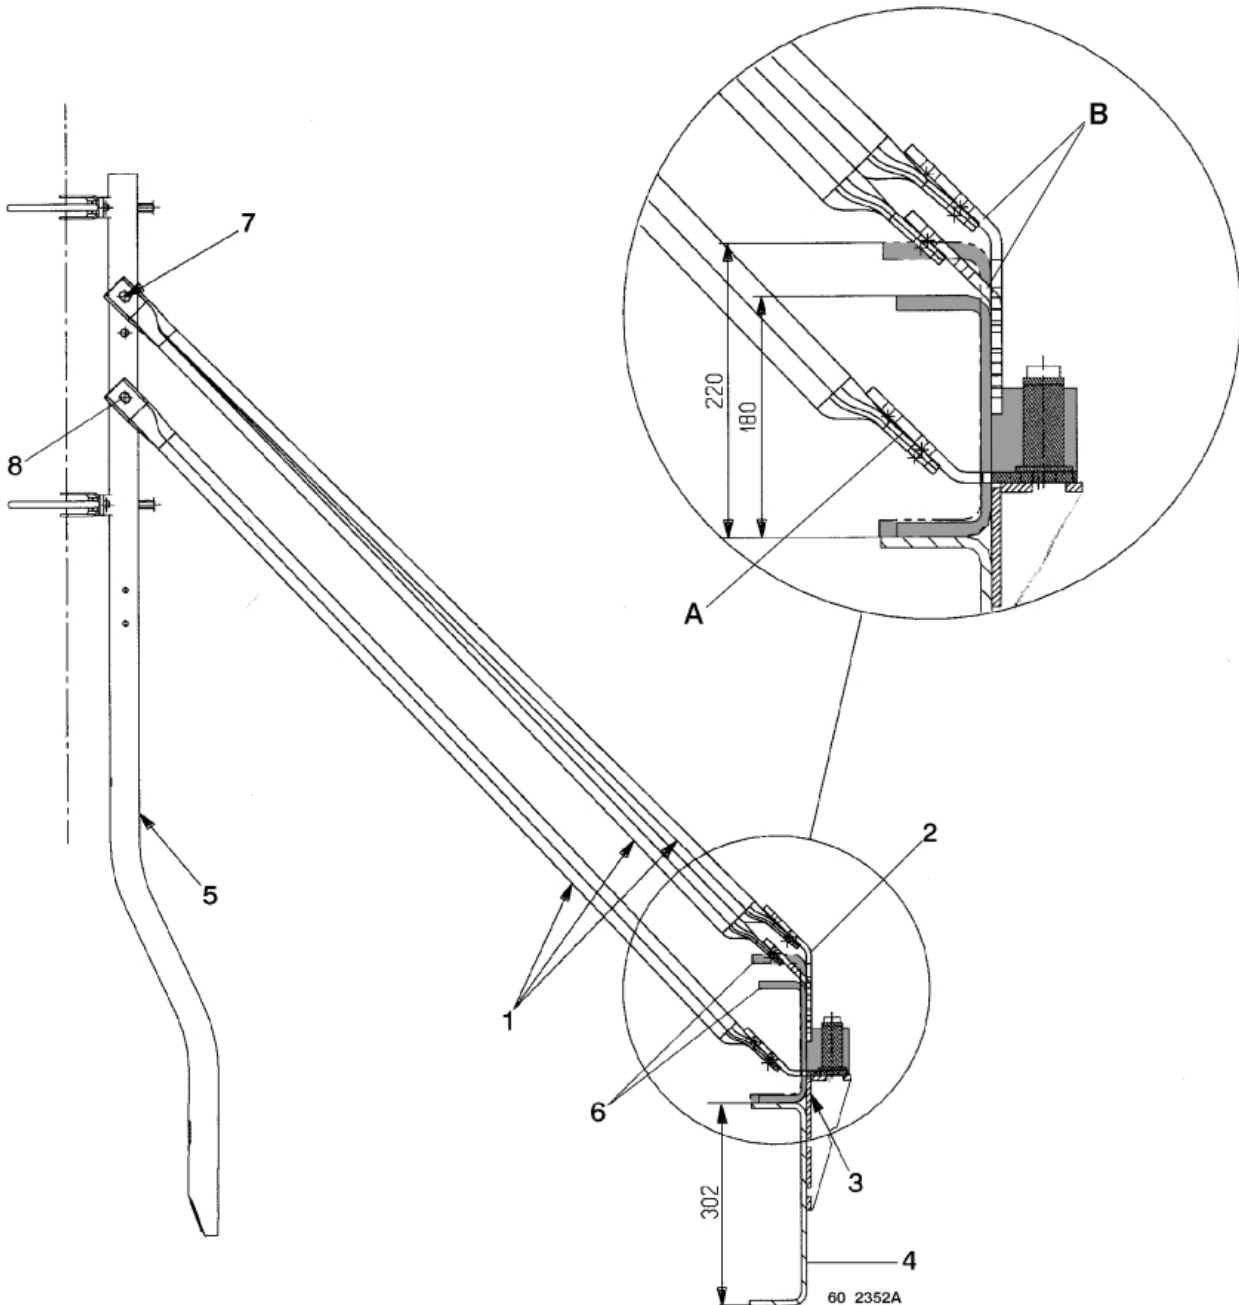


Cab (2.2 m) on 6x4 vehicle

- 1 - Tie-rod
- 2 - Fixing lug
- 3 - Bracket
- 4 - Sidemember
- 5 - Cab strut
- 6 - Sub-frame
- 7 - Hole to be used for bodybuilding
- 8 - Ex works position of existing hole
- A - Position of ex works fixing lug
- B - Position modified during bodybuilding

IMPORTANT

The stiffness of the sub-frame should allow a stiffness of the exhaust assembly to be achieved identical to the state on delivery, namely $f = 28 \text{ Hz min.}$

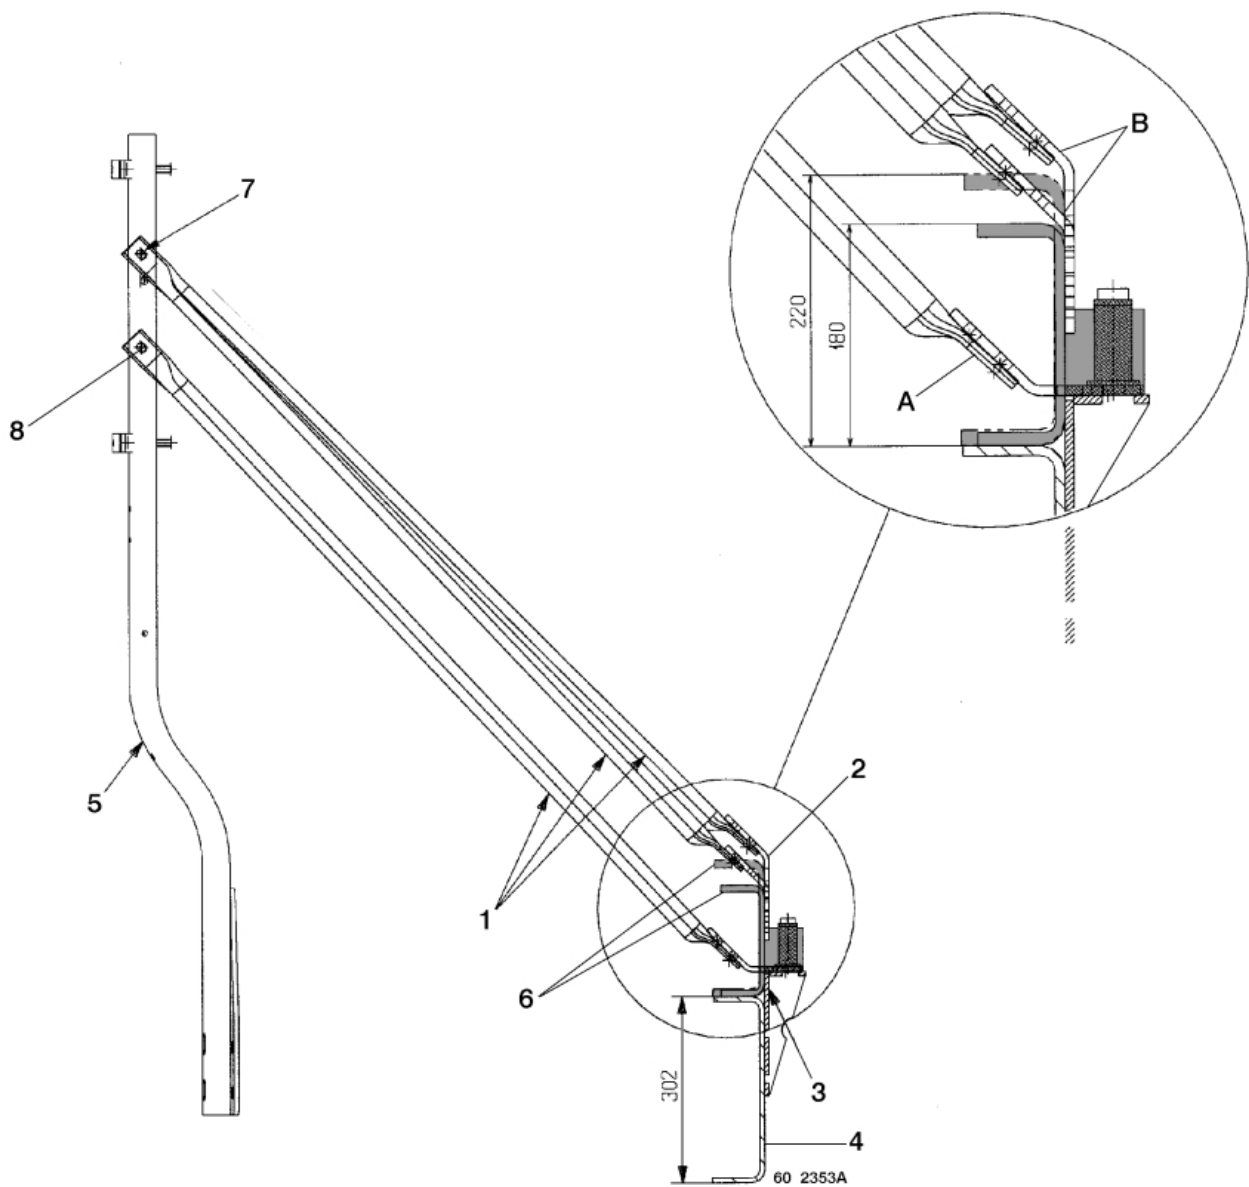


Cab (2 m) on 8x4 vehicle

- 1 - Tie-rod
- 2 - Fixing lug
- 3 - Bracket
- 4 - Sidemember
- 5 - Cab strut
- 6 - Sub-frame
- 7 - Hole to be used for bodybuilding
- A - Position of ex works fixing lug
- B - Position modified during bodybuilding

IMPORTANT

The stiffness of the sub-frame should allow a stiffness of the exhaust assembly to be achieved identical to the state on delivery, namely $f = 28 \text{ Hz min.}$

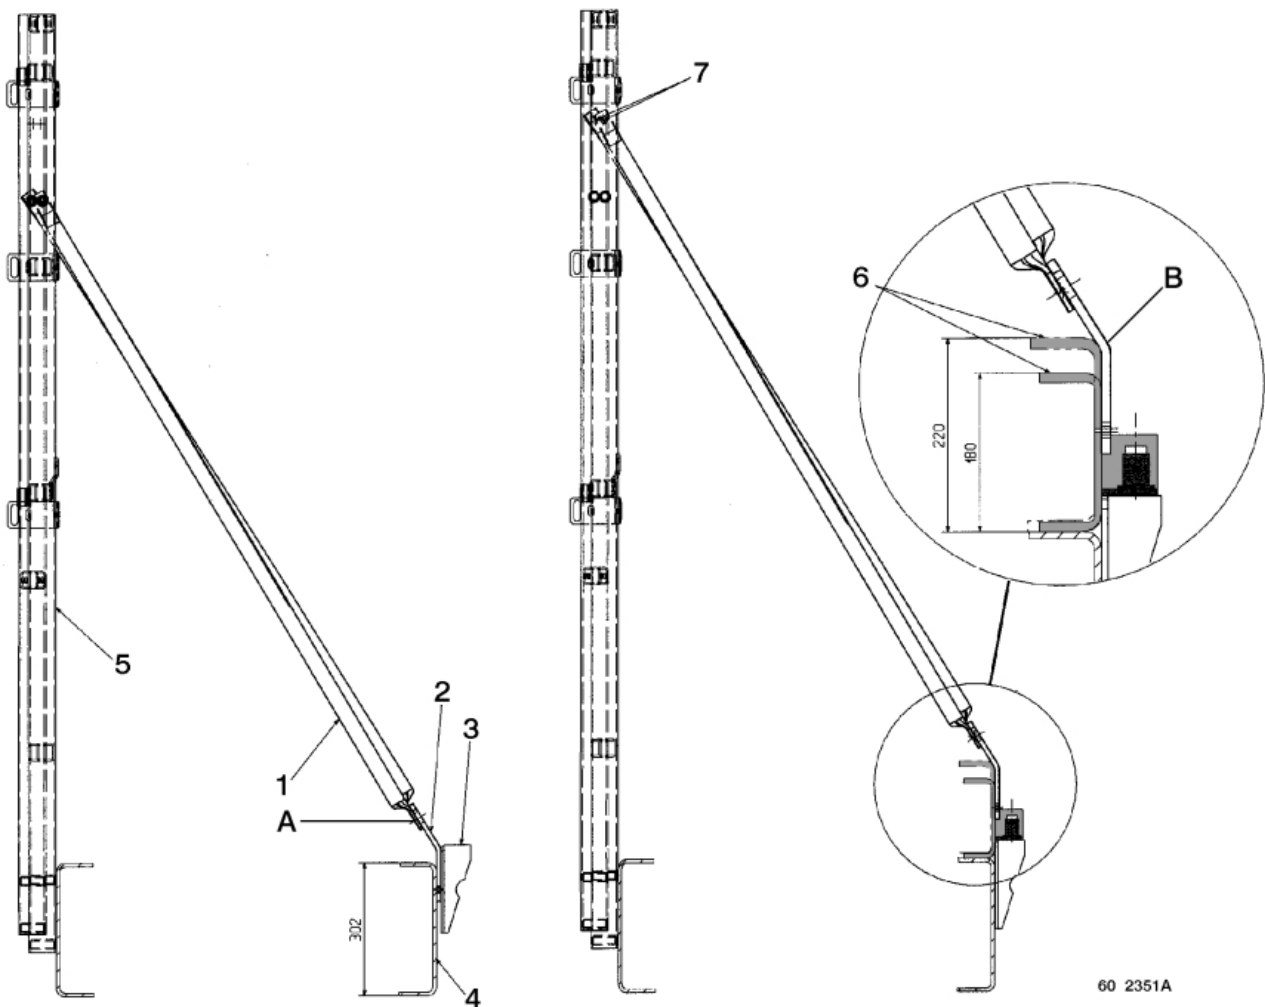

9. REAR CROSS-MEMBER

It is possible to move the position of the rear cross-member by following the 55 mm pitch of the existing drillings (A).


The impact of drilling fixing points on the towing hook allows a hook of "MG" make to be fitted on 40, 44 and 60 tonne cross-members.

- 1 - "40 or 44 tonnes" impact
- 2 - "MG" impact

6x4 - 6x6 - 8x4

3 cross-members

40 tonnes - 44/60 tonnes - 80/100 tonnes

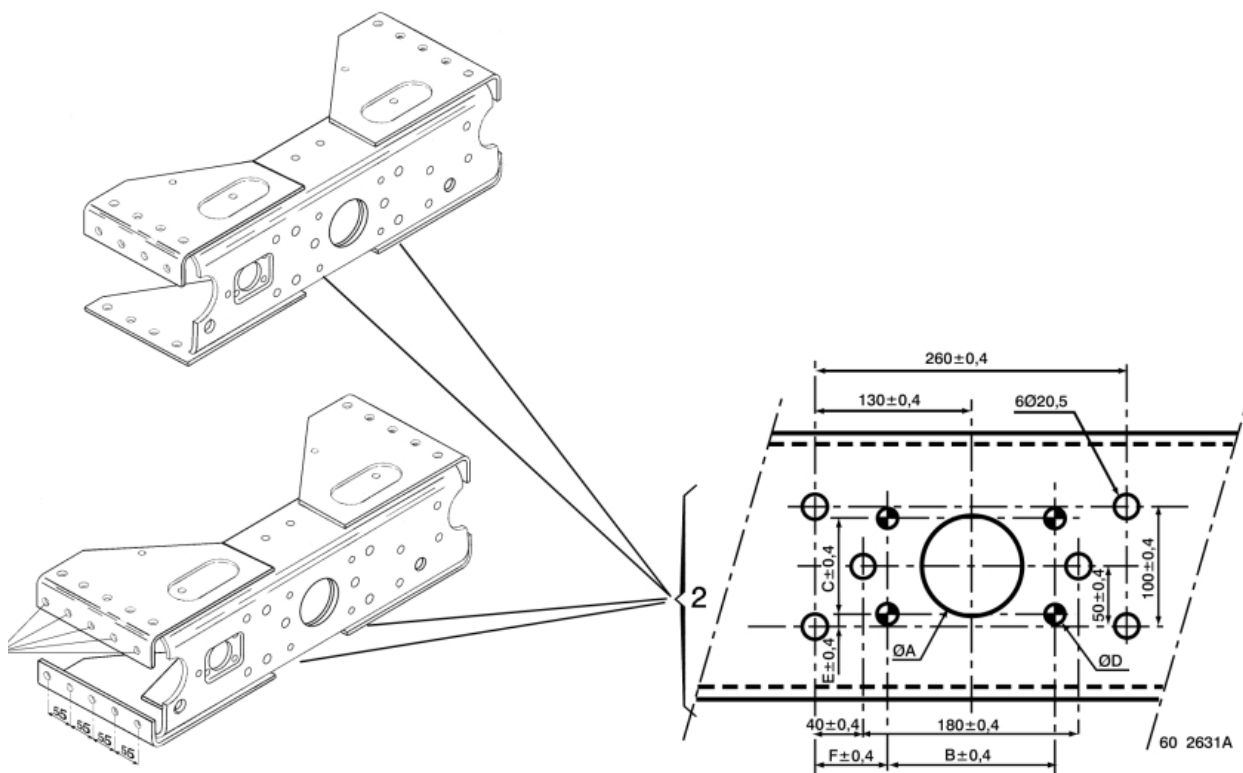

4x2 - 4x4

2 cross-members

40 tonnes - 44/60 tonnes

	A	B	C	D	E	F
Rear cross-member 40 tonnes	85	140	80	16,5	10	60
Rear cross-member 44 tonnes	95	160	100	20,5	0	50

10 - INSTALLATION PRECAUTIONS


Tandem brake cylinder

During maximum movements, the middle drive axle brake cylinders, upon rising, may project past the top level of the sidemembers.


This projection may amount to:

- 28 mm maximum on 6x4 and 8x4 vehicles
- 75 mm maximum on 6x4 HEAVY DUTY export vehicles with 120 tonnes GTW option.


A sheet metal plate (B) fastened at (A) indicates the projection of the cylinders.

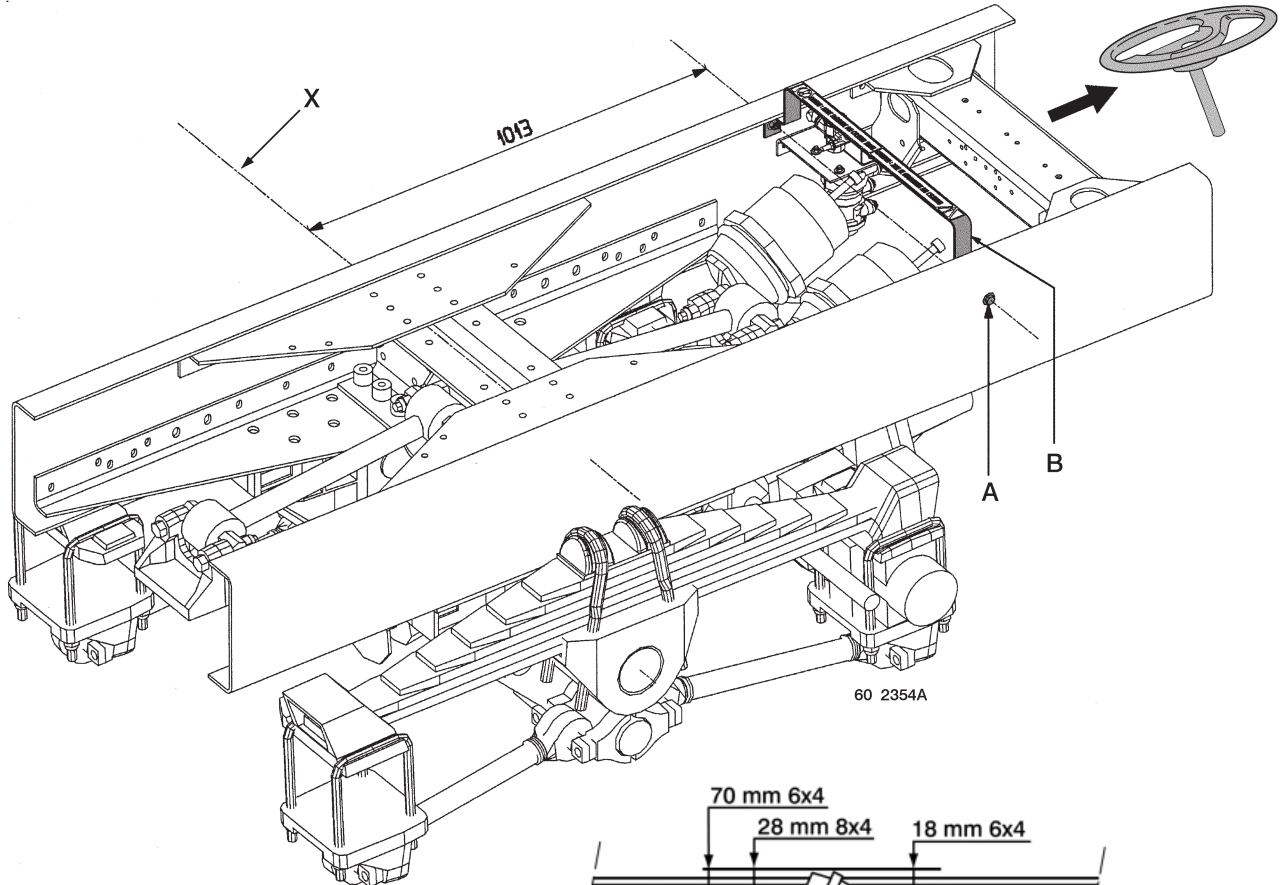

Maximum projection
Tandem 2541/3345
MEDIUM HEAVY DUTY

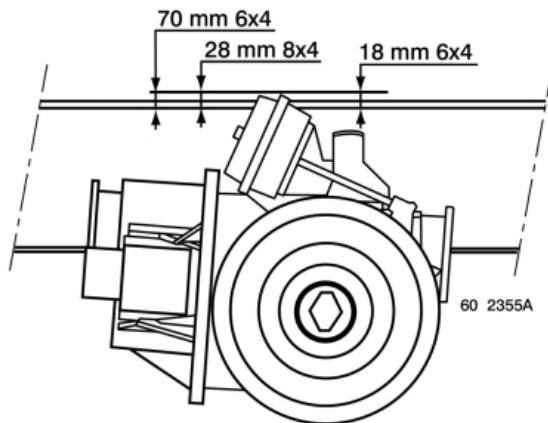

Maximum projection
Tandem 2040/2141
LIGHT DUTY

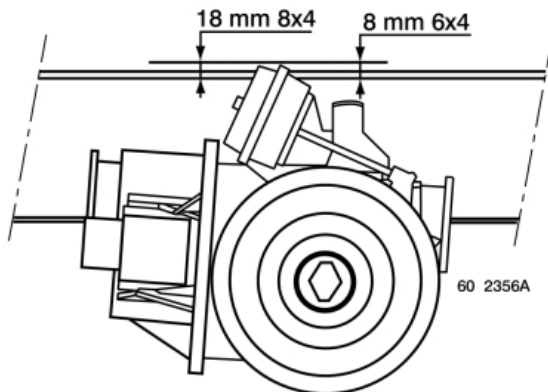


Engine cooling on TRM (all-wheel drive) vehicle

To improve engine cooling, 5 holes (1) have been drilled in the central part of the bumper in place of the registration plate.

IMPORTANT



When fitting the registration plate to the vehicle, you should in no way hide the 5 holes.

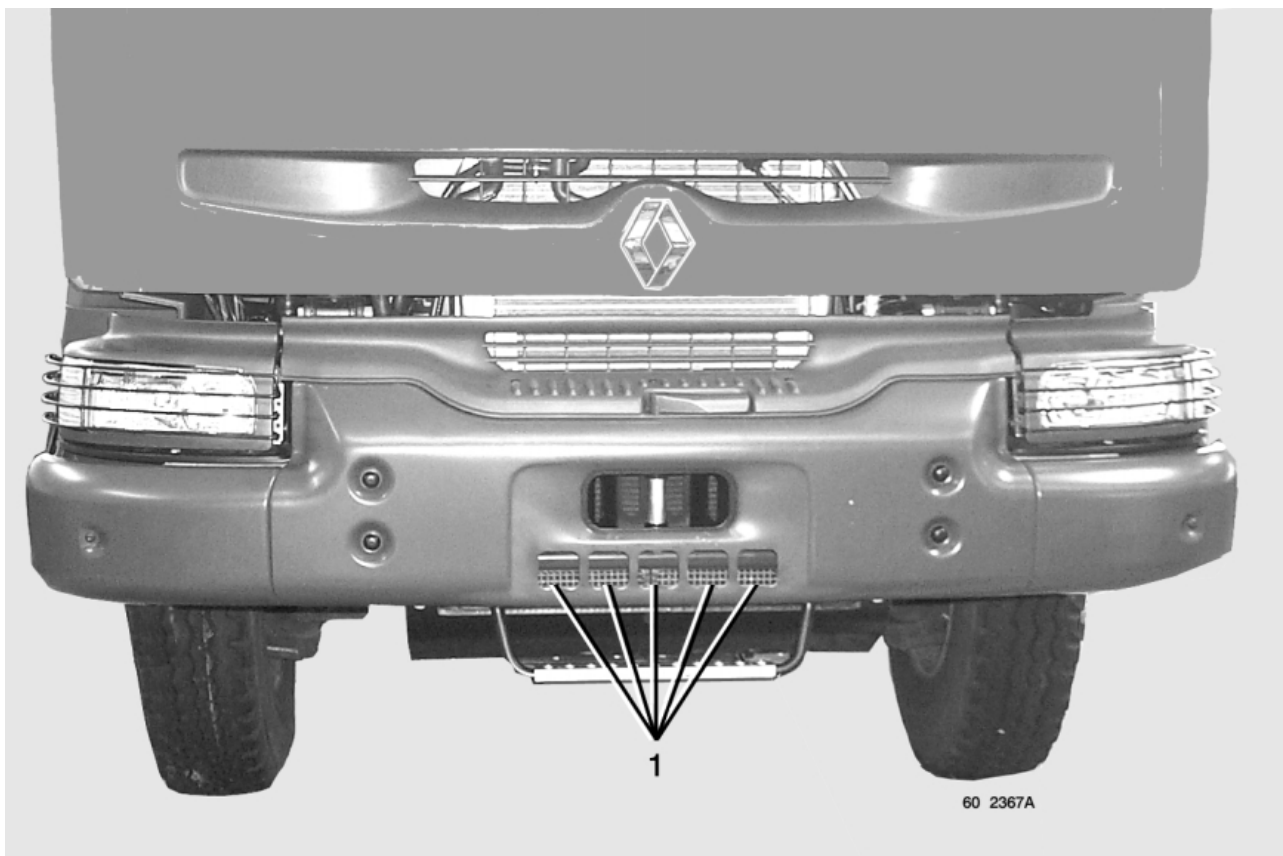

11. POSITION OF REAR SOCKETS AND PNEUMATIC LINKS



A - Axle centre-line
B - Chassis

Day cab

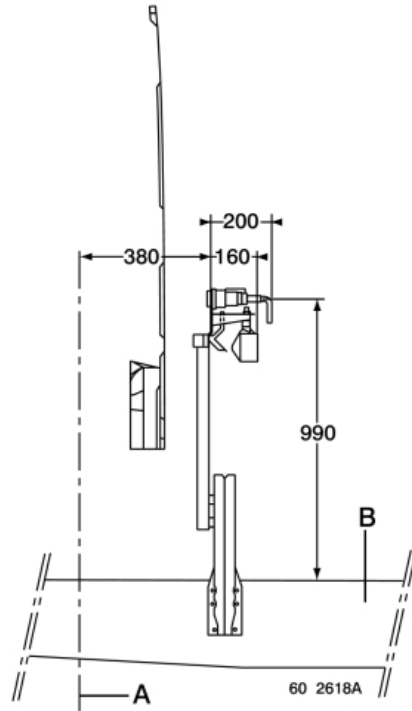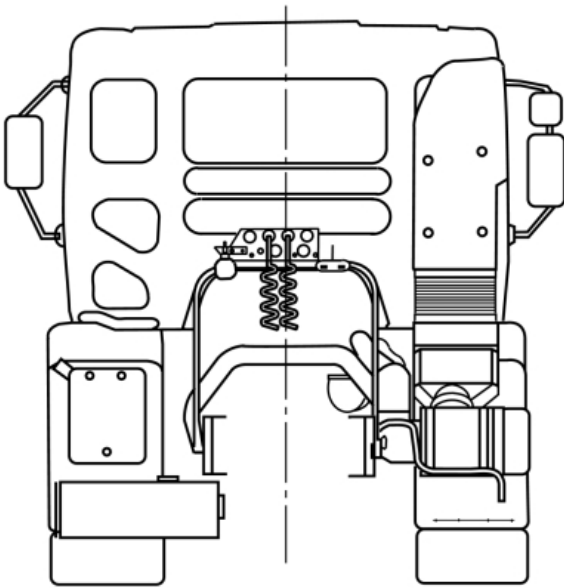


A - Axle centre-line
B - Chassis

Medium cab

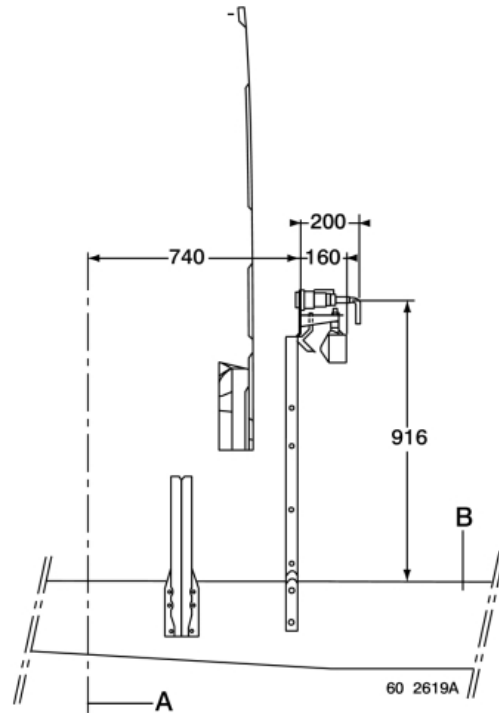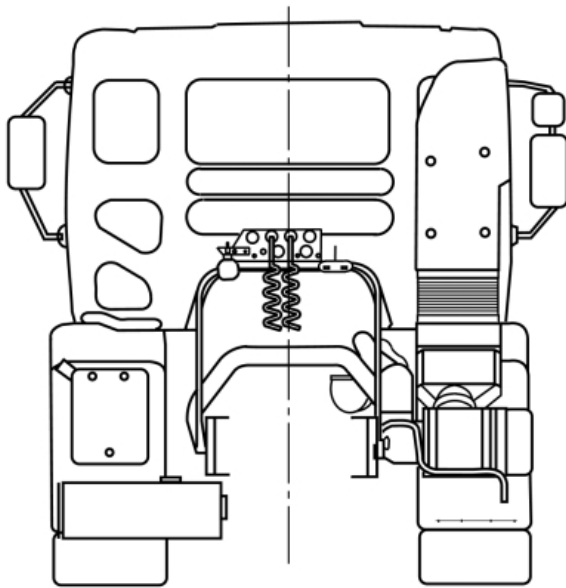

A - Axle centre-line
B - Chassis

Sleeper cab

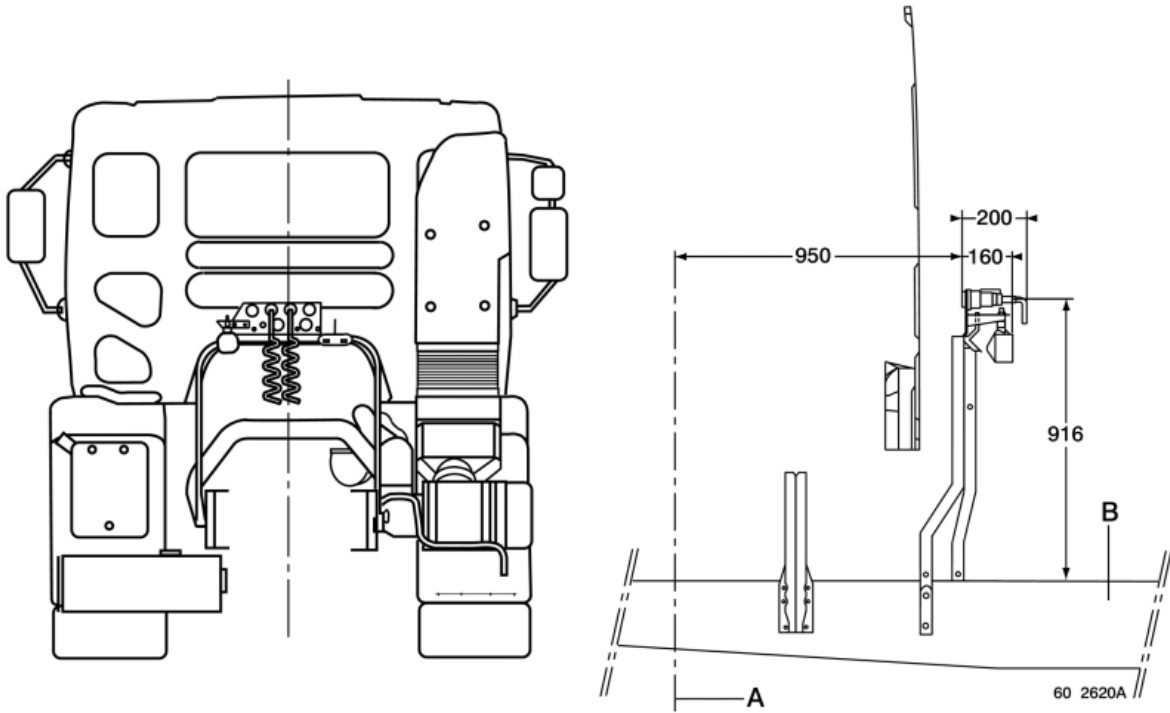

12 - AIRBAG

Depending on your vehicle's equipment

IMPORTANT

The fitting of a bull-bar, cattle guard or any other equipment on the front end of the vehicle that would rigidify the chassis is strictly forbidden if an airbag is fitted.

IMPORTANT

Any work on the airbag system must be carried out by qualified personnel who have undergone suitable training.

Identification of a vehicle equipped with an airbag system

A vehicle equipped with a driver's airbag can be identified by:

- the inscription "airbag" in the middle of the steering wheel.
- a sticker placed in the bottom corner of the windscreen, on the driver's side. (If the windscreen has to be replaced, affix a new sticker in the bottom corner of the new windscreen, on the driver's side).

Work on the vehicle (excluding the airbag) requiring precautions to be taken to avoid inadvertent deployment of the airbag

During repair or adaptation work, the vehicle is not to undergo any significant knocks (hammer blows...) nor is welding work to be undertaken without previously disconnecting the battery and waiting for a period of 5 minutes.

No electrical accessories should be installed, as aftermarket fitment, within the close surrounds of an airbag (loudspeaker or any other appliance generating a magnetic field might cause the airbag to release).

Before removing the steering wheel, it is essential to unplug the airbag module connector so as to avoid any damage.

In the event of any work requiring uncoupling of the steering box universal joint, the roadwheels must be in the straight ahead position and the steering wheel must be immobilized, in order to keep to the mid-point of the rotary switch.

IMPORTANT

- *If an airbag system is fitted, the seat belt must be worn.*
- *If the seat or bench seat designed for the airbag system has to be changed, it must be replaced by a seat identical to the one originally fitted.*
- *Adjust the seat cushion and squab correctly so that the airbag offers optimum protection.*
- *The protective cover must be free from any article (ledge, clock, adhesive, various accessories...).*
- *There should be no objects within the airbag deployment area (dia. 100 cm).*
- *Do not place anything between the dashboard and the passengers.*
- *Do not put your feet on the dashboard nor on the seat as such postures risk causing serious injury. Generally speaking, keep all parts of your body (knees, hands, head...) away from the dashboard.*
- *To avoid any inadvertent deployment of the airbag capable of causing bodily injury, it is forbidden to remove the steering wheel or work on the airbag system.*
- *Only the RENAULT TRUCKS network is qualified to work on the airbag system.*
- *Get the airbag system checked out in the case of accident or if there has been attempted theft of or from the vehicle.*
- *For safety reasons, replace the airbag and the pretensioner every 15 years.*
- *If water is splashed onto or gets into the electronic box located under the driver's seat, replace the box.*
- *Any significant modification to the front end of the vehicle or any overloading of the vehicle may lead to inadvertent release of the airbag system.*
- *When lending or reselling the vehicle, inform the borrower or purchaser of all these conditions. Get him to read the driving and servicing handbook.*